

[Manuals.plus](#) /

› [Hamilton Beach](#) /

› Hamilton Beach Digital Programmable Rice and Slow Cooker & Food Steamer, 20 Cups Cooked (10 Cups Uncooked), 14 Pre-Programmed Settings for Sear Sauté, Hot Cereal, Soup, Nonstick Pot, Stainless Steel Instruction Manual

Hamilton Beach 37571

Hamilton Beach Digital Multi-Cooker Instruction Manual

Model: 37571

Brand: Hamilton Beach

INTRODUCTION

The Hamilton Beach Digital Multi-Cooker is a versatile appliance designed to simplify your cooking experience. It combines the functions of a rice cooker, slow cooker, and food steamer, allowing for easy one-pot meals and saving valuable kitchen space. With 14 pre-programmed settings, including options for various rice types, hot cereals, quinoa, sautéing, searing, simmering, and steaming, this multi-cooker offers exceptional flexibility for preparing a wide range of dishes.

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before use.

INCLUDED COMPONENTS

- Multi-Cooker Base Unit
- Removable Nonstick Inner Pot
- Rice Rinsing/Steaming Basket
- Measuring Cup
- Rice Paddle




The main Hamilton Beach Digital Multi-Cooker unit.



**Convenient rice rinsing/
steaming basket included**

Convenient rice rinsing/steaming basket included.

Steam vegetables & cook rice or another food at the same time

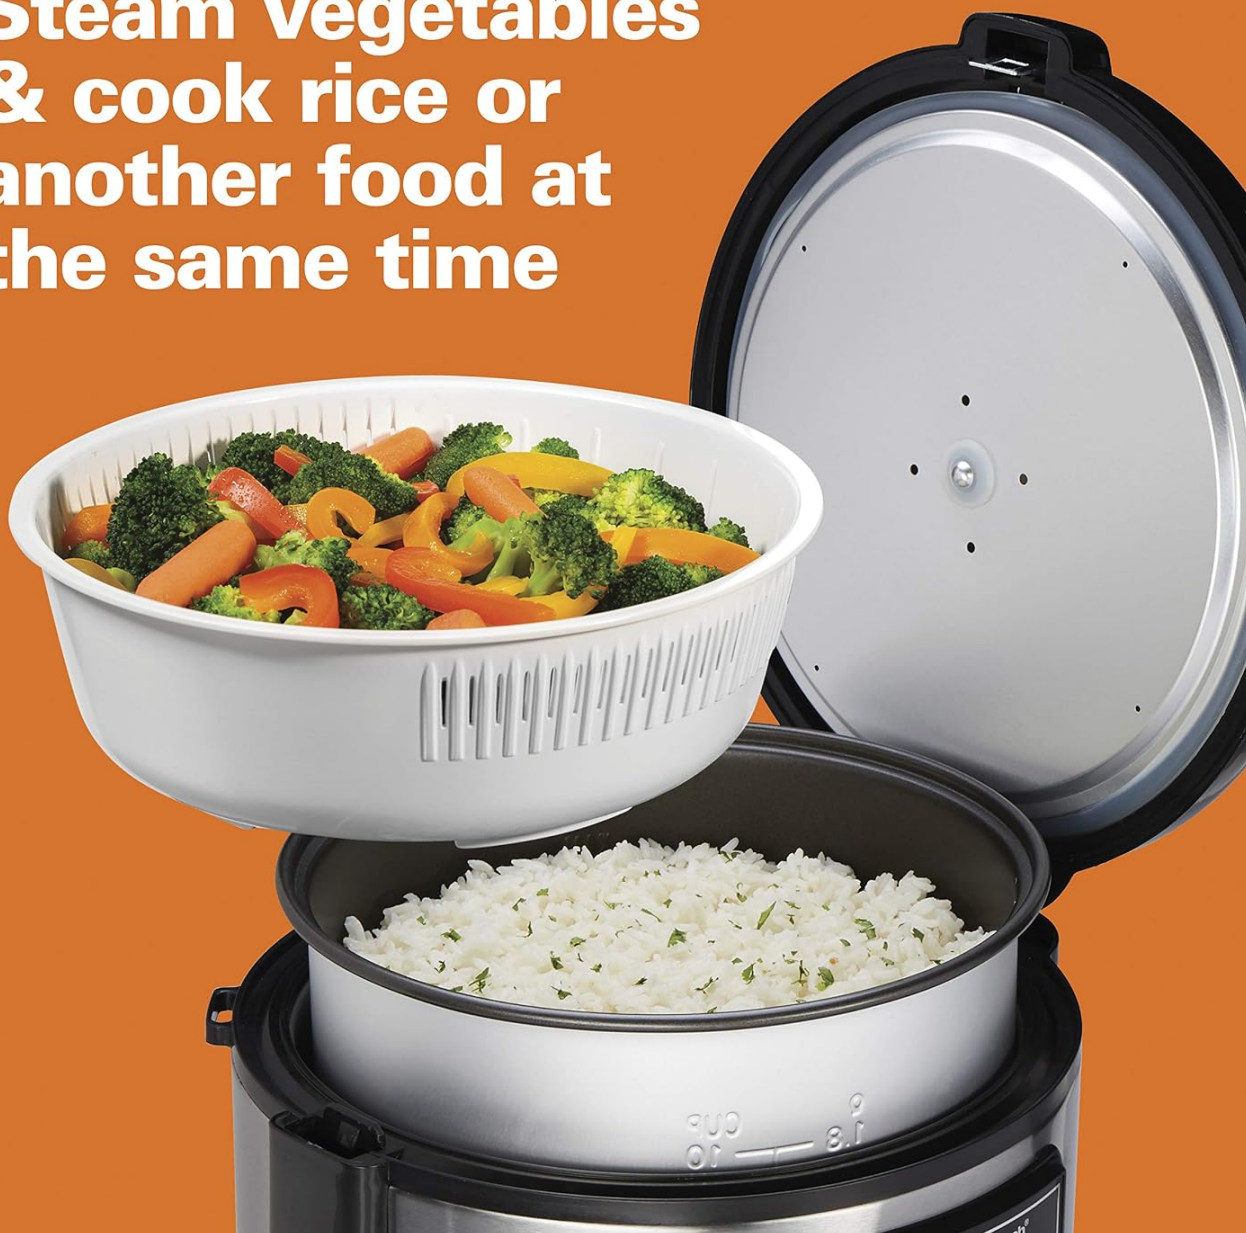

The steaming basket allows for simultaneous cooking of vegetables and rice.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean Before First Use:** Wash the nonstick inner pot, rice rinsing/steaming basket, measuring cup, and rice paddle in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the multi-cooker base with a damp cloth. Do not immerse the base unit in water.
3. **Placement:** Place the multi-cooker on a stable, flat, heat-resistant surface away from walls and cabinets to ensure proper ventilation.
4. **Power Connection:** Ensure the power cord is securely plugged into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Hamilton Beach Digital Multi-Cooker features an intuitive control panel with pre-programmed settings for various cooking needs. Always ensure the inner pot is properly seated in the base unit before adding ingredients or starting a cooking cycle.

General Operation:

- **Power Button:** Press the **Power** button to turn the unit on or off.
- **Function Buttons:** Select your desired cooking function (e.g., White Rice, Slow Cook, Sauté) by pressing the corresponding button. The selected function's indicator light will illuminate.
- **Start/Stop:** After selecting a function, the cooker will typically begin automatically or require a press of the Start button (if applicable for the mode). Pressing the Power button during a cycle will stop the cooking process.
- **Delay Timer:** Use the **Delay Timer** button to set a delayed start for certain functions.
- **Keep Warm:** The unit automatically switches to Keep Warm mode after most cooking cycles are complete.

Specific Cooking Modes:

Rice Cooking (White Rice, Brown Rice, Sushi Rice, Quick Rice, Whole Grain):

For best results, use the included measuring cup for rice and follow the recommended water-to-rice ratios. The inner pot has markings for water levels for different rice types.

1. Measure desired amount of rice using the provided measuring cup. Rinse rice thoroughly using the rinsing basket to prevent clumping.
2. Place rinsed rice into the nonstick inner pot. Add the appropriate amount of water according to the rice type and desired consistency. Refer to the inner pot markings for guidance.
3. Place the inner pot into the multi-cooker base. Close the lid securely.
4. Press the specific rice function button (e.g., **White Rice**). The cooker will automatically adjust cooking time.
5. Once cooking is complete, the unit will switch to Keep Warm. Fluff rice with the rice paddle before serving.

Enjoy maximum cooking versatility in one appliance



Rice



Grains



Hot Cereal



Steam



Soup/Simmer



Sear/Saute



Slow Cook

The multi-cooker offers maximum cooking versatility for various food types.

Slow Cook:

Ideal for stews, roasts, and other slow-cooked dishes.

1. Add ingredients to the nonstick inner pot. Do not exceed the "SLOW COOK MAX" line marked on the inner pot.
2. Place the inner pot into the multi-cooker base. Close the lid securely.
3. Press the **Slow Cook** button. Select **LOW** or **HIGH** setting.
4. Adjust cooking time using the Hour/Min buttons if needed. The unit will automatically switch to Keep Warm when done.



Great for low and high slow cooking.

Steam Cook:

Perfect for steaming vegetables, fish, and more.

1. Add water to the nonstick inner pot (ensure water level is below the steaming basket).
2. Place food into the rice rinsing/steaming basket.
3. Place the steaming basket into the inner pot. Close the lid securely.
4. Press the **Steam Cook** button. Adjust steaming time as needed.

Sauté / Sear Brown:

Use these functions to brown meats or sauté vegetables before slow cooking or for other recipes.

1. Add a small amount of oil or butter to the nonstick inner pot.
2. Place the inner pot into the multi-cooker base. Close the lid securely.
3. Press the **Sauté** or **Sear Brown** button.
4. Once hot, add ingredients and stir occasionally until desired browning is achieved. Press the Power button to stop when finished.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your multi-cooker.

- **Always unplug** the appliance and allow it to cool completely before cleaning.
- **Inner Pot & Accessories:** The nonstick inner pot, rice rinsing/steaming basket, measuring cup, and rice paddle are removable and **dishwasher safe** for easy cleanup. Alternatively, wash them in warm, soapy water and rinse thoroughly.
- **Exterior:** Wipe the exterior of the multi-cooker base with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Never immerse the base unit in water or any other liquid.
- **Lid:** The inner lid can be wiped clean with a damp cloth. Ensure all food residue is removed.
- **Storage:** Ensure all parts are clean and dry before storing the appliance. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outlet not working.	Ensure power cord is securely plugged into a working outlet.
Rice is too hard/undercooked.	Insufficient water; lid not properly closed; incorrect rice setting.	Add more water (1-2 tbsp at a time) and cook for a few more minutes. Ensure lid is sealed. Select appropriate rice setting.
Rice is too sticky/mushy.	Too much water; rice not rinsed; incorrect rice setting.	Reduce water slightly for future batches. Always rinse rice thoroughly. Select appropriate rice setting.
Food sticks to inner pot.	Not enough oil/liquid; excessive heat/cooking time.	Ensure sufficient oil/liquid is used, especially for sautéing. Adjust cooking time or heat setting.

SPECIFICATIONS

Brand: Hamilton Beach

Model Name: Digital Programmable Rice and Slow Cooker & Food Steamer

Model Number: 37571

Capacity: 4.5 Quarts (Up to 20 cups cooked rice / 10 cups uncooked)

Dimensions: 10.6"D x 11.7"W x 11.4"H

Weight: 7.4 Pounds

Material: Stainless Steel

Power Source: Electric

Voltage: 120V

Wattage: 700 watts

Special Feature: Programmable, Nonstick Pot

UPC: 040094375714

Country of Origin: China

Hamilton Beach®



4.5 Quart Digital MultiCooker

Product dimensions for the 4.5 Quart Digital MultiCooker.

WARRANTY AND SUPPORT

Hamilton Beach products are manufactured to the highest quality standards. For detailed warranty information, including terms, conditions, and how to make a claim, please refer to the official User Guide provided with your appliance. You can also find the User Guide online at the Hamilton Beach website or through the provided link:

[Download Official User Guide \(PDF\)](#)

For customer support, technical assistance, or to order replacement parts, please visit the official Hamilton Beach website or contact their customer service line. Contact information can typically be found in the User Guide or on the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question