

[Manuals.plus](#) /

› [Scoot & Ride](#) /

› Scoot & Ride Highwaykick 1 User Manual

Scoot & Ride Highwaykick 1 (Model 160629)

User Manual

SCOOT & RIDE HIGHWAYKICK 1 (MODEL 160629)

2-in-1 Ride-On & Stand Kids Scooter, Ages 1 to 5

Introduction

Thank you for choosing the Scoot & Ride Highwaykick 1. This innovative 2-in-1 scooter is designed to grow with your child, offering both a stable ride-on mode for younger children (ages 1-3) and a dynamic stand-up scooter mode for older children (ages 1-5). Its durable construction and tool-free adjustability ensure a safe, comfortable, and enjoyable experience for years to come. Please read this manual carefully before assembly and use to ensure proper operation and safety.



Image: The Highwaykick 1 scooter shown in both its ride-on and stand-up modes, highlighting its versatile design. The scooter is a forest green color.

Safety Information

- **Adult Supervision Required:** Always supervise children while they are using the scooter.
- **Protective Gear:** Ensure the child wears appropriate safety gear, including a helmet, knee pads, and elbow pads, at all times.
- **Weight and Age Limits:**
 - **Sitting Mode:** For ages 1-3 years, maximum load 20 kg (44 lbs).
 - **Standing Mode:** For ages 1-5 years, maximum load 50 kg (110 lbs).
- **Safe Riding Environment:** Use the scooter on smooth, dry, and level surfaces away from traffic, steep inclines, stairs, and water.
- **Braking:** The scooter features a rear braking system. Instruct the child on how to use the brake effectively.
- **Pre-Ride Check:** Before each use, check that all parts are securely fastened, wheels are in good condition, and the steering mechanism functions correctly.
- **Avoid Night Use:** Do not use the scooter at night or in low visibility conditions.



Image: A child on the Highwaykick 1 in ride-on mode, demonstrating proper use under adult supervision. The child is wearing a helmet.

What's in the Box

Your Scoot & Ride Highwaykick 1 package should contain the following items:

- Scoot & Ride Highwaykick 1 Scooter (main unit)
- User Manual (this document)

Assembly and Conversion (Setup)

The Highwaykick 1 is designed for tool-free assembly and conversion between ride-on and stand-up modes. Follow these steps:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Initial Setup (Ride-On Mode):**
 - Ensure the handlebar is securely inserted into the front steering column.
 - The seat should be in the lowered position, facing forward.
 - Adjust the seat height by pressing the button on the side and sliding the seat up or down to the

desired position. Release the button to lock.

3. Converting to Stand-Up Scooter Mode:

To convert the scooter from ride-on to stand-up mode, locate the conversion mechanism at the front of the scooter, near the base of the handlebar. This mechanism allows the handlebar and seat assembly to pivot and lock into the upright position.

- Press the release button or lever (refer to the diagram below for exact location).
- Rotate the handlebar and seat assembly 180 degrees until it clicks securely into the upright, standing position.
- Adjust the handlebar height by opening the quick-release clamp on the handlebar stem, extending or retracting the handlebar, and then securely closing the clamp.

4. Converting back to Ride-On Mode:

To convert back to ride-on mode, reverse the process:

- Press the release button/lever.
- Rotate the handlebar and seat assembly 180 degrees back to the lowered, ride-on position until it clicks securely.
- Adjust the seat height as needed.



Image: A visual guide illustrating the simple, tool-free conversion process of the Highwaykick 1 from a seated ride-on to an upright kick scooter.

Operating Instructions

The Highwaykick 1 offers two primary modes of operation:

1. Ride-On Mode (Ages 1-3)

- Ensure the scooter is in ride-on configuration with the seat lowered.
- Adjust the seat height so the child's feet can comfortably reach the ground.
- The child sits on the seat and uses their feet to push off the ground, propelling the scooter forward.
- Steering is achieved by leaning the handlebar in the desired direction.



Image: The Highwaykick 1 in its ride-on configuration, designed for younger children to sit and propel themselves.

2. Stand-Up Scooter Mode (Ages 1-5)

- Convert the scooter to stand-up mode as described in the Assembly section.
- Adjust the handlebar height to a comfortable level for the child, typically around waist height.
- The child stands on the footboard with one foot and uses the other foot to push off the ground.
- Steering is achieved by leaning the handlebar in the desired direction. The two front wheels provide enhanced stability.
- To stop, use the rear brake by pressing down on the fender above the rear wheel with your foot.



Image: The Highwaykick 1 in its stand-up scooter configuration, ready for older children to ride by pushing off the ground.



Image: Two children demonstrating the versatility of the Highwaykick 1, one using it as a stand-up scooter and the other as a ride-on.

Maintenance

- **Cleaning:** Wipe the scooter with a damp cloth and mild soap. Do not use abrasive cleaners or solvents. Dry thoroughly after cleaning.
- **Lubrication:** Periodically check the wheels and bearings. If they become stiff, apply a small amount of silicone-based lubricant.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.
- **Fasteners:** Regularly check all screws, bolts, and quick-release clamps to ensure they are tight and secure. Tighten if necessary.
- **Wheel Wear:** Inspect the wheels for signs of wear or damage. Replace worn wheels to maintain optimal performance and safety.

Troubleshooting

Problem	Possible Cause	Solution
Scooter does not roll smoothly.	Dirty or worn bearings/wheels.	Clean wheels and bearings. Lubricate if necessary. Replace wheels if severely worn.
Handlebar/seat is loose.	Quick-release clamp or locking mechanism not fully engaged.	Ensure the quick-release clamp is tightened and the conversion mechanism is fully locked into place.
Brake is not effective.	Worn brake pad or improper technique.	Check the rear brake for wear. Ensure the child is applying sufficient pressure.
Difficulty converting modes.	Mechanism stuck or not fully disengaged.	Ensure the release button/lever is fully pressed. Do not force the mechanism. Check for obstructions.


Specifications

Feature	Detail
Brand	Scoot & Ride
Model Name	Highwaykick 1 (Model 160629)
Color	Forest
Recommended Age (Sitting Mode)	1-3 years
Recommended Age (Standing Mode)	1-5 years
Max Load (Sitting Mode)	20 kg (44 lbs)
Max Load (Standing Mode)	50 kg (110 lbs)
Product Dimensions (L x W x H)	14.17"L x 11.02"W x 23.23"H (approximate)
Item Weight	2.8 kg (6.16 lbs)
Number of Wheels	3 (2 front, 1 rear)
Wheel Material	Plastic
Frame Material	Metal
Handlebar Type	Adjustable
Brake Style	Rear Braking



Scoot & Ride product size | age chart

clever mobility

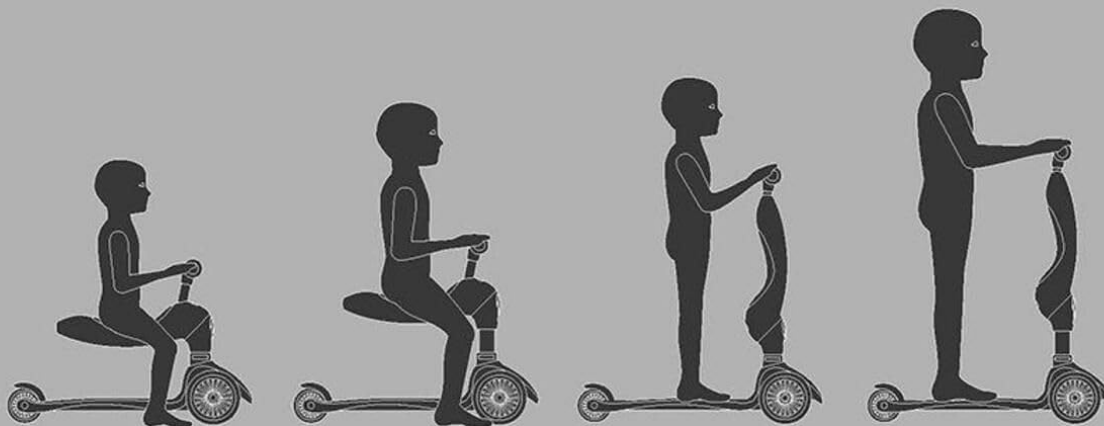

Highwaykick 1

sitting mode 1-3 years
bodyheight 82-96cm / 32,3-37,8"
20kgs / 44lbs max load

Highwaykick 1

standing mode 1-5 years
bodyheight 82-118cm / 32,3-46,5"
50kgs / 110lbs max load

Image: An age and size chart for the Highwaykick 1, detailing recommended body height and maximum load for both sitting and standing modes.

Warranty and Support

For warranty information and customer support, please refer to the official Scoot & Ride website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the [Scoot & Ride Store on Amazon](#).

© 2025 Scoot & Ride. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.