

Scosche DDVR2XFHD

SCOSCHE DDVR2XFHD HD DVR Dual Front & Rear Facing Lens Dash Camera User Manual

Model: DDVR2XFHD

Brand: Scosche

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your SCOSCHE DDVR2XFHD HD DVR Dual Front & Rear Facing Lens Dash Camera. This device is designed to capture important visual evidence of accidents or events from your vehicle, enhancing your safety and peace of mind on the road.

Please read this manual thoroughly before using the product to ensure proper functionality and to avoid any damage.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- SCOSCHE DDVR2XFHD Dash Camera
- 8GB Micro-SD Card
- 12V Power Adapter
- 3-ft. USB Data Cable
- Suction Cup Mount with Rotational Joint

3. PRODUCT FEATURES

The SCOSCHE DDVR2XFHD Dash Camera is equipped with advanced features to provide reliable recording and ease of use:

- **Dual Lens Recording:** Features a 1080P, 140-degree front-facing camera and a 720P, 100-degree wide-angle interior camera for comprehensive coverage.
- **4-inch HD Color Display:** Provides a clear view for monitoring and playback.
- **Adjustable Resolution Settings:** Supports 1080FHD, 720P, or VGA for flexible recording quality.
- **Loop Recording:** Seamlessly records new footage over previous footage in 3, 5, or 10-minute intervals.
- **Gravity Sensor (G-Sensor):** Automatically stores crucial footage under special files to prevent overwriting during

impacts or sudden movements.

- **Motion Detection:** Automatically records any motion in front of the camera when the vehicle is parked, providing visual proof of damage or vandalism.
- **Date/Time Stamp:** Overlays date and time on recordings for accurate event timelines.
- **Microphone:** Built-in microphone for live audio recording.
- **Micro-SD Card Support:** Compatible with Micro-SD cards up to 32GB (8GB card included).



Figure 3.1: The SCOSCHE DDVR2XFHD dash camera showing its main display and integrated suction cup mount. This image provides an overall view of the device.



720p Interior Camera

Captures important events inside vehicle

Figure 3.2: Close-up view of the dash camera highlighting its 4-inch display and the 720p interior camera lens, designed to capture events inside the vehicle.



Pivoting Front Camera
with seamless loop recording

Figure 3.3: Rear view of the dash camera, indicating the Micro SD slot (8GB card included) and the pivoting 1080p front camera for seamless loop recording.

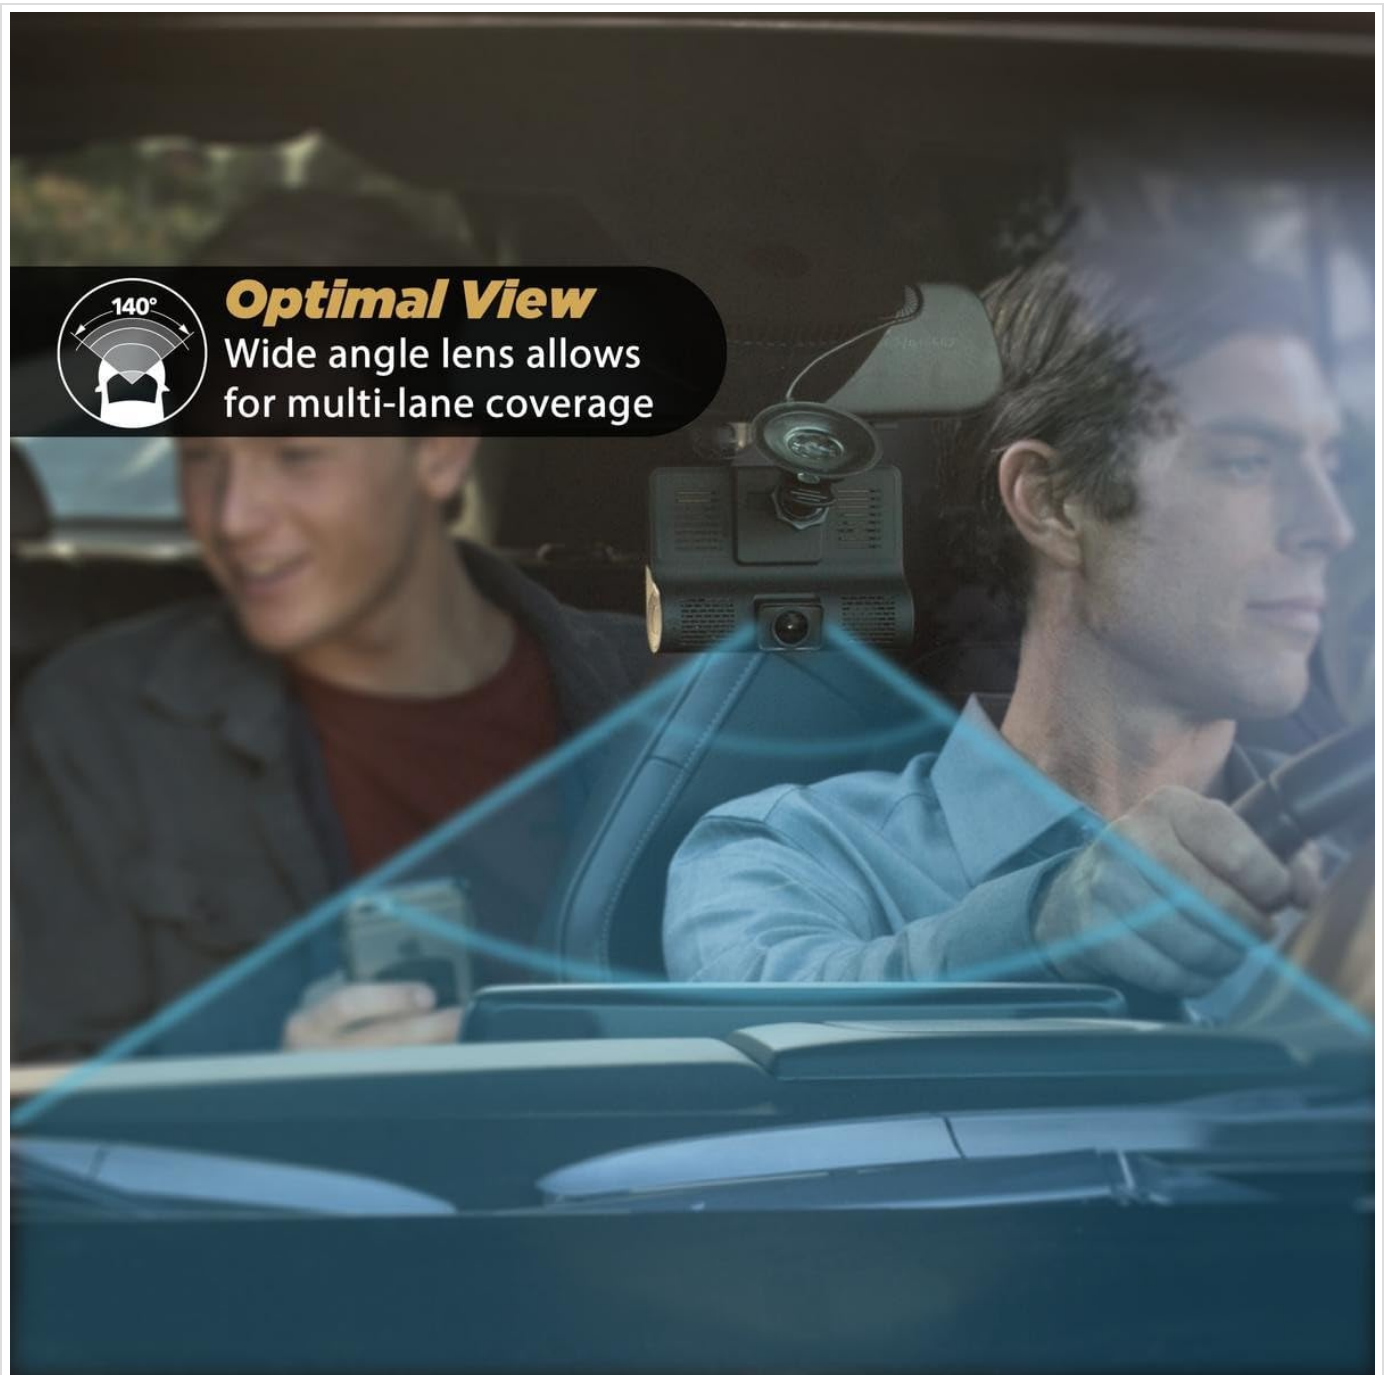


Figure 3.4: The dash camera mounted in a vehicle, illustrating the 140-degree wide-angle lens providing optimal view and multi-lane coverage.



Figure 3.5: The dash camera's display showing active recording, with an emphasis on its Motion Detection and G-Sensor capabilities that automatically store crucial footage.



Figure 3.6: The dash camera installed on a windshield using the adjustable suction cup, highlighting its utility for ride-sharing services by monitoring events inside the vehicle.

4. SETUP GUIDE

4.1. Inserting the Micro-SD Card

1. Locate the Micro-SD card slot on the side or top of the dash camera (refer to Figure 3.3).
2. Gently insert the included 8GB Micro-SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card in until it clicks, then release, and it will spring out.

4.2. Mounting the Dash Camera

1. Clean the desired area on your windshield or dashboard thoroughly. Ensure it is free of dust and grease.
2. Attach the suction cup mount to the dash camera.

3. Press the suction cup firmly against the cleaned surface and flip the lever down to secure it.
4. Adjust the camera angle using the rotational joint on the mount to ensure a clear view of the road ahead and the vehicle interior.

4.3. Connecting Power

1. Connect the small end of the 12V power adapter cable to the micro-USB port on the dash camera.
2. Plug the other end of the 12V power adapter into your vehicle's power port (cigarette lighter socket).
3. The camera will typically power on automatically when the vehicle's ignition is turned on.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **Automatic:** The camera will power on and begin recording automatically when connected to power and the vehicle's ignition is on.
- **Manual:** Press and hold the Power button (usually located on the side or top) to manually turn the camera on or off.

5.2. Recording Modes

- **Loop Recording:** The camera continuously records in segments (3, 5, or 10 minutes). When the Micro-SD card is full, the oldest unlocked footage will be overwritten.
- **G-Sensor (Emergency Recording):** In the event of a sudden impact or collision, the G-Sensor will automatically detect it and lock the current recording segment, preventing it from being overwritten. These files are stored in a separate folder.
- **Motion Detection:** When enabled, the camera will automatically start recording if it detects movement in front of the lens while the vehicle is parked. This feature requires continuous power supply to the camera.

5.3. Adjusting Settings

Use the menu buttons (refer to Figure 3.2 for general location) to navigate the camera's settings. Common settings include:

- **Resolution:** Select desired video quality (1080FHD, 720P, VGA).
- **Loop Recording Interval:** Set segment length (3, 5, or 10 minutes).
- **Date/Time Stamp:** Enable or disable the display of date and time on recordings.
- **Microphone:** Turn audio recording on or off.
- **G-Sensor Sensitivity:** Adjust the sensitivity of the gravity sensor.
- **Motion Detection:** Enable or disable this feature.

5.4. Accessing and Transferring Footage

- **On-Camera Playback:** Use the camera's display and navigation buttons to review recorded videos and photos directly on the device.
- **Via USB Cable:** Connect the dash camera to a computer using the included USB data cable. The camera will appear as a removable disk, allowing you to copy files.
- **Via Micro-SD Card Reader:** Remove the Micro-SD card from the camera and insert it into a compatible card reader connected to a computer. This is often the fastest method for large file transfers.

6. MAINTENANCE

6.1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body and screen.
- For lenses, use a lens cleaning cloth or a microfiber cloth specifically designed for optics. Do not use abrasive cleaners or solvents.

6.2. Micro-SD Card Management

- **Formatting:** It is recommended to format the Micro-SD card periodically (e.g., once a month) within the camera's settings to ensure optimal performance and prevent data corruption. Formatting will erase all data on the card, so back up important files first.
- **Card Lifespan:** Micro-SD cards have a limited number of write cycles. If you experience frequent recording errors or corrupted files, consider replacing the Micro-SD card. Use high-quality, high-speed (Class 10 or higher) cards for best results.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	No power supply; faulty power adapter; loose connection.	Check power connection to vehicle's 12V port and camera. Ensure vehicle ignition is on. Try a different 12V power source if available.
Camera stops recording or freezes.	Micro-SD card full or corrupted; low-quality SD card; firmware issue.	Format the Micro-SD card. Replace the Micro-SD card with a new, high-speed (Class 10 or higher) card. Reset the camera (if a reset button is available).
Video quality is poor.	Lens is dirty; incorrect resolution setting; low light conditions.	Clean the camera lenses. Adjust video resolution settings to 1080FHD. Ensure sufficient lighting for optimal recording.
Date/Time stamp is incorrect.	Date/Time not set or battery drained.	Go to settings and manually set the correct date and time. Ensure the camera is consistently powered to maintain time.
G-Sensor is too sensitive/not sensitive enough.	G-Sensor sensitivity setting is too high/low.	Adjust the G-Sensor sensitivity in the camera's settings menu.

8. SPECIFICATIONS

Model Name	Dual Lens Vehicle Camera
Model Number	DDVR2XFHD
Product Dimensions	2.25 x 4 x 8 inches
Item Weight	8 ounces
Front Camera Resolution	1080p
Interior Camera Resolution	720p
Front Lens Angle	140-Degree

Interior Lens Angle	100-Degree
Display Size	4 inches
Storage	Micro-SD Card (up to 32GB, 8GB included)
Connectivity	USB
Special Features	Built-In Speaker, Loop Recording, Night Vision, Motion Detection, G-Sensor
Mounting Type	Suction Mount
Power Source	12V Vehicle Power Adapter

9. WARRANTY AND SUPPORT

9.1. Warranty Information

Scosche products are designed for quality and performance. For specific warranty details regarding your DDVR2XFHD dash camera, please refer to the warranty card included with your product or visit the official Scosche website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

9.2. Customer Support

If you encounter any issues or have questions not covered in this manual, please contact Scosche customer support. You can find more information and contact options by visiting the [Scosche Store on Amazon](#) or their official website.

© 2024 Scosche. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question