

DASH D7FP300RMRD

Dash D7FP300RMRD 7-in-1 Food Processor Prep Master Instruction Manual

INTRODUCTION

Welcome to your new Dash 7-in-1 Food Processor Prep Master. This versatile appliance is designed to simplify your food preparation tasks, offering multiple functions including slicing, dicing, shredding, and spiralizing. Please read this manual thoroughly before first use to ensure safe and efficient operation and to familiarize yourself with all features.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the appliance.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the motor base in water or other liquids.
- Avoid contact with moving parts. Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Use only attachments and accessories recommended by the manufacturer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Exercise extreme caution when handling sharp blades.

PARTS AND COMPONENTS

Familiarize yourself with the parts of your Dash 7-in-1 Food Processor Prep Master.

7 different cuts **IN ONE APPLIANCE**



Overview of the Dash 7-in-1 Food Processor Prep Master, showing the main unit, food chute, and various interchangeable discs.

- Motor Base
- 1.5 Liter Processing Bowl
- Lid with Food Chute
- Food Pusher
- Spiralizing Disc (Fine/Coarse)
- Shredding Disc (Fine/Coarse)
- Slicing Disc
- Dicing Disc
- Cleaning Tools

SETUP AND ASSEMBLY

Before first use, wash all removable parts (bowl, lid, discs, food pusher) in warm, soapy water. Rinse thoroughly and dry completely.

Assembling the Unit

1. Place the Motor Base on a clean, dry, and stable surface.

2. Align the 1.5 Liter Processing Bowl with the motor base and twist clockwise until it locks securely into place.
3. Carefully select the desired blade disc (spiralizing, shredding, slicing, or dicing) and place it onto the central shaft within the processing bowl. Ensure it sits firmly.
4. Place the Lid with Food Chute onto the processing bowl, aligning the tabs, and twist clockwise until it locks securely. The appliance will not operate unless the lid is properly locked.
5. Insert the Food Pusher into the Food Chute.

OPERATING INSTRUCTIONS

Always ensure the appliance is properly assembled and plugged into a suitable power outlet before operation.

General Operation

- Prepare ingredients by washing and cutting them into sizes that fit comfortably into the food chute.
- With the appliance turned on, gently feed ingredients into the food chute using the food pusher. Never use your hands or other utensils to push food.
- Do not overload the appliance. Process ingredients in batches if necessary.
- Once processing is complete, turn off and unplug the appliance before disassembling and removing processed food.

Using the Discs

The Dash 7-in-1 Food Processor Prep Master comes with four interchangeable stainless steel blade discs for various functions:

4 Stainless Steel BLADE DISKS



spiralizing



shredding



slicing



dicing

Image displaying the four interchangeable stainless steel blade discs for spiralizing, shredding, slicing, and dicing.

- **Spiralizing Disc:** Use this disc for creating uniform vegetable noodles from firm vegetables such as zucchini, carrots, or sweet potatoes.



Dash 7-in-1 Food Processor Prep Master in red, actively spiralizing zucchini, demonstrating the spiralizing function.

- **Shredding Disc:** Ideal for shredding ingredients like cheese, carrots, cabbage, or potatoes for salads, coleslaws, or gratins.



FINE OR COARSE




Shredding



Spiralizing



Slicing

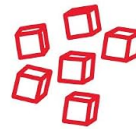

Dicing

A bowl of shredded carrots, illustrating the shredding function of the Dash Food Processor.

- **Slicing Disc:** Perfect for achieving uniform slices of vegetables like cucumbers, potatoes, onions, or fruits for salads, gratins, or garnishes.



A bowl of freshly sliced cucumbers, demonstrating the slicing capability of the Dash Food Processor.

- **Dicing Disc:** Use this disc for precise, consistent cubes of vegetables such as onions, bell peppers, or potatoes, ideal for stir-fries, soups, or salsas.

FOOD PUSHER & INGREDIENT CHUTE

*makes prepping
safe and easy*



Close-up of the dicing disc, one of the four interchangeable stainless steel blades.

CARE AND MAINTENANCE

Cleaning

- Always unplug the appliance from the power outlet before cleaning.
- All removable parts (processing bowl, lid, discs, food pusher) are dishwasher-safe. For optimal cleaning and longevity, it is recommended to wash them on the top rack of your dishwasher.
- The motor base should be wiped clean with a damp cloth. Never immerse the motor base in water or any other liquid.
- Use the provided cleaning tools to safely remove any stubborn food residue from the blades and discs. Exercise caution as blades are sharp.

Storage

- Ensure all parts are clean and dry before storing.
- Store the appliance and its accessories in a dry, safe place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your Dash 7-in-1 Food Processor Prep Master, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	Appliance not plugged in, or not assembled correctly.	Check power connection. Ensure the processing bowl and lid are securely locked into place.
Food not processing evenly	Ingredients are too large or the food chute is overloaded.	Cut ingredients into smaller, manageable pieces. Feed ingredients slowly and evenly.
Blades not cutting effectively	Incorrect disc used for the food type, or blades are dull.	Ensure the correct disc is selected for the desired function. If blades appear dull, contact customer support for assistance.
Appliance vibrates excessively	Uneven loading of ingredients or unstable surface.	Ensure ingredients are loaded evenly. Place the appliance on a flat, stable surface.

PRODUCT SPECIFICATIONS

- **Brand:** DASH
- **Model Name:** 7 in 1 Food Processor Prep Master Vegetable Chopper, Spiralizer, Slicer, Shredder
- **Model Number:** D7FP300RMRD
- **Power Source:** Electric
- **Wattage:** 300 watts
- **Voltage:** 240 Volts
- **Material:** Metal, Plastic (Blades: Stainless Steel)
- **Capacity:** 1.5 Liters
- **Functions:** Slice, Dice, Shred, Spiralize, Chop, Grate
- **Product Care:** Hand Wash (motor base), Dishwasher Safe (removable parts)
- **Included Components:** Product, discs, manual

WARRANTY AND SUPPORT

Your Dash 7-in-1 Food Processor Prep Master is backed by a **1-year manufacturer warranty** from the date of purchase.

For warranty claims, technical support, or inquiries regarding replacement parts, please contact Dash customer service. Please retain your proof of purchase, such as a receipt or order confirmation, as it will be required for any warranty service.



The Dash 7-in-1 Food Processor Prep Master alongside its included recipe guide, offering inspiration for various dishes.