

[Manuals.plus](#) /

› [Maclean](#) /

› Maclean MC-806 QLED TV Wall Mount Instruction Manual for Samsung Q7/Q8/Q9 Series (49-65 inch)

Maclean MC-806

Maclean MC-806 QLED TV Wall Mount Instruction Manual

For Samsung Q7/Q8/Q9 Series (49-65 inch)

1. INTRODUCTION

Thank you for choosing the Maclean MC-806 QLED TV Wall Mount. This manual provides essential information for the safe and correct installation, operation, and maintenance of your new TV wall mount. Please read these instructions carefully before installation and retain them for future reference.

Safety Information

- Ensure the mounting surface can safely support the combined weight of the mount and your television.
- Always use appropriate safety equipment, such as safety glasses, during installation.
- If you are unsure about any part of the installation process, consult a qualified professional.
- Do not exceed the maximum weight capacity of 50 kg (110 lbs).
- This mount is designed for specific Samsung QLED TV models (Q7, Q8, Q9 series, 49-65 inches). Verify compatibility before installation.

2. PACKAGE CONTENTS

Please verify that all components listed below are present and undamaged before beginning installation. If any parts are missing or damaged, contact your retailer for assistance.



Image: All components of the Maclean MC-806 QLED TV Wall Mount, including the wall plate, TV bracket, and various screws, washers, and wall anchors.

- Wall Plate (1)
- TV Bracket Assembly (1)
- Mounting Screws for TV (various sizes)
- Wall Anchors (for concrete/brick walls)
- Lag Bolts (for wood stud walls)
- Washers and Spacers
- Instruction Manual (this document)

3. SETUP AND INSTALLATION

Follow these steps carefully to ensure a secure and correct installation of your TV wall mount.

3.1 Tools Required (Not Included)

- Drill
- Drill Bits (appropriate for wall type and anchor size)
- Stud Finder (for wood stud walls)
- Level
- Pencil
- Phillips Head Screwdriver
- Socket Wrench (for lag bolts)

3.2 Wall Preparation and Wall Plate Installation

1. **Determine Wall Type:** Identify if your wall is wood stud, concrete, or brick. Different wall types require different mounting hardware.
2. **Locate Mounting Position:** Use a stud finder to locate the center of two adjacent wood studs if mounting to wood. For concrete/brick, choose a suitable location away from electrical wires or pipes.
3. **Mark Drilling Points:** Hold the wall plate against the wall at the desired height and use a level to ensure it is straight. Mark the drilling points through the holes on the wall plate with a pencil.
4. **Drill Pilot Holes:** Drill pilot holes at the marked locations. The drill bit size will depend on your wall type and the chosen anchors/lag bolts.
5. **Install Wall Anchors (if applicable):** For concrete or brick walls, insert the plastic wall anchors into the drilled holes. Tap gently with a hammer until flush with the wall surface.
6. **Attach Wall Plate:** Align the wall plate with the pilot holes/anchors. Secure the wall plate to the wall using the provided lag bolts (for wood studs) or screws (for concrete/brick with anchors). Tighten all fasteners securely.



Image: Visual guide showing the process of attaching the wall plate and then mounting the TV bracket assembly, followed by the TV itself. The image also illustrates the ultra-slim profile and tilt adjustment.

3.3 Attaching TV Bracket to Television

1. **Prepare TV:** Lay your TV face down on a soft, clean surface to prevent screen damage.
2. **Identify VESA Pattern:** Locate the mounting holes on the back of your TV. Measure the horizontal and vertical distance between these holes to determine the VESA pattern.
3. **Select Screws and Spacers:** Choose the correct diameter and length of screws from the provided hardware that fit your TV's mounting holes. Use spacers if necessary to ensure the screws do not penetrate too deeply or to create clearance for cables.
4. **Attach TV Bracket:** Align the TV bracket assembly with the mounting holes on the back of your TV. Secure the bracket using the selected screws and washers. Do not overtighten.

3.4 Mounting Television to Wall Plate

1. **Lift TV:** With assistance, carefully lift the television with the attached TV bracket.
2. **Hook onto Wall Plate:** Align the hooks on the TV bracket with the corresponding slots on the wall plate. Gently lower the TV until it securely engages with the wall plate.

3. **Secure TV:** Locate the safety screws or locking mechanisms on the TV bracket. Tighten these to prevent the TV from accidentally disengaging from the wall plate.

4. OPERATING AND ADJUSTING THE MOUNT

The Maclean MC-806 mount allows for easy tilt adjustment to achieve the optimal viewing angle.



Image: Side profile of the Maclean MC-806 mount, illustrating its adjustable tilt feature. The mount can be extended from the wall and tilted downwards.

1. **Adjusting Tilt:** The mount features an adjustable tilt mechanism. Gently pull the bottom of your TV forward to tilt it downwards. The mount supports an incline of up to 32 degrees.
2. **Returning to Flat Position:** Push the bottom of the TV back towards the wall until it is flush or at the desired angle.

No tools are required for tilt adjustment once the TV is mounted.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Wipe the mount with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Check Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Inspect for Damage:** Regularly inspect the mount for any signs of wear, corrosion, or damage. If any damage is observed, discontinue use and contact support.

6. TROUBLESHOOTING

This section addresses common issues you might encounter during installation or use.

Issue: TV is not level after installation.

Solution: Carefully remove the TV from the wall plate. Check the wall plate's levelness using a spirit level. If it's not level, loosen the wall plate screws slightly, adjust the plate until level, and then retighten the screws securely. Re-mount the TV.

Issue: TV does not fit the mount.

Solution: Verify that your TV's VESA mounting pattern and weight are within the specifications of the Maclean MC-806 mount. This mount is compatible with Samsung Q7/Q8/Q9 series TVs from 49 to 65 inches and up to 50 kg. If your TV falls outside these specifications, the mount is not compatible.

Issue: Screws for TV attachment are too long or too short.

Solution: The package includes various screw lengths. Ensure you have selected the correct length that securely fastens the bracket without bottoming out or being too short. Use the provided spacers if additional clearance is needed.

7. SPECIFICATIONS

Technical details for the Maclean MC-806 QLED TV Wall Mount.

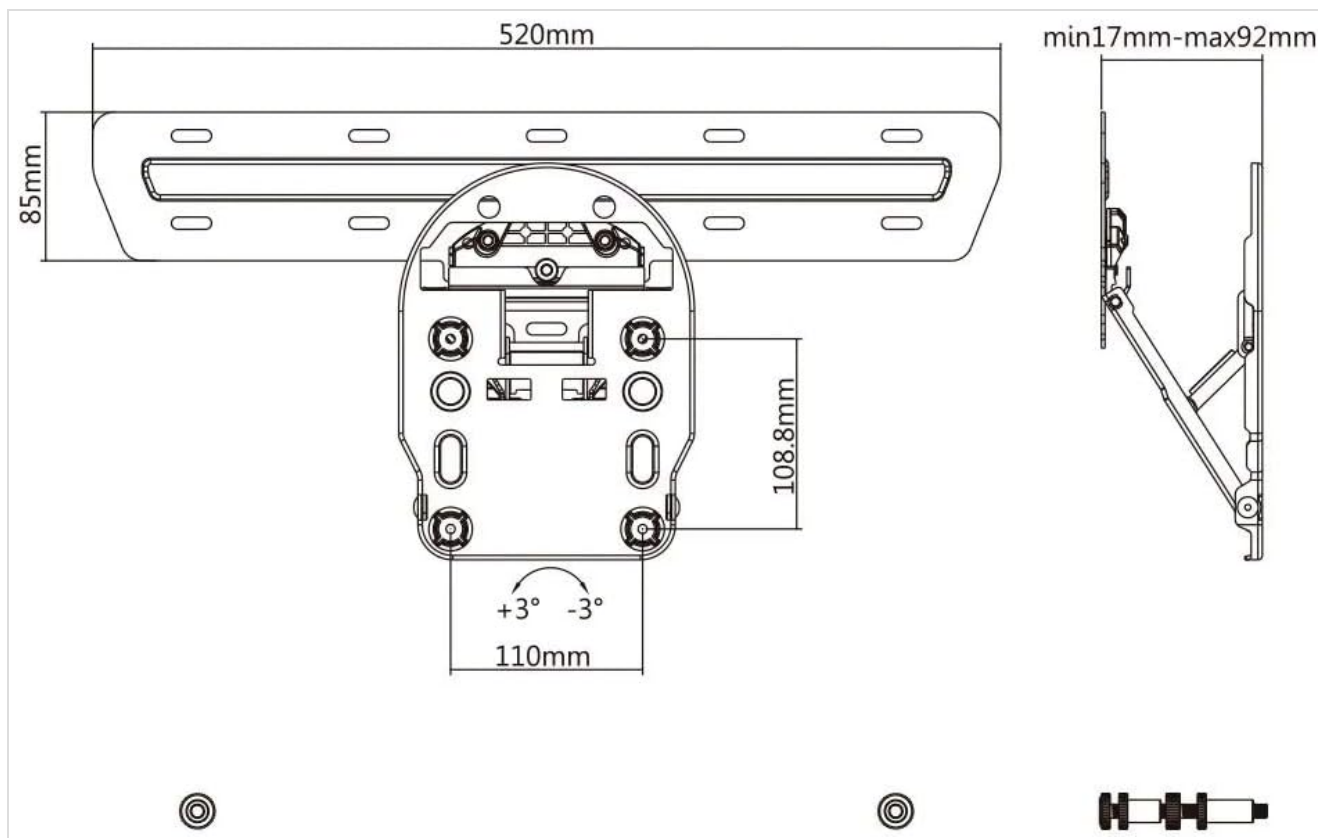


Image: Technical drawing displaying the dimensions of the Maclean MC-806 wall mount, including width, height, and minimum/maximum wall distance, as well as tilt range.

Feature	Detail
Model	MC-806
Compatible TV Sizes	49" - 65"
Max. Weight Capacity	50 kg (110 lbs)
Compatible TV Series	Samsung Q7, Q8, Q9 (Q7C, Q7F, Q7FN, Q7CN, Q8C, Q9FN, Q85R, Q90R, Q900R, Q950R, Q900, Q95T)
Tilt Angle	Up to 32 degrees
Distance from Wall	Minimum 17 mm
Material	Iron
Color	Black
Type of Movement	Rotational (Tilt)
International Article Code	05902211111634

8. WARRANTY AND SUPPORT

Warranty information for the Maclean MC-806 QLED TV Wall Mount is typically provided at the point of purchase or included with the product packaging. Please refer to these documents for details regarding warranty coverage and terms.

For technical support, missing parts, or further assistance, please contact your retailer or visit the official Maclean Brackets website. Contact information can usually be found on the product packaging or the manufacturer's website.

You can find more information about Maclean products at www.maclean.pl.