

[Manuals.plus](#) /

> [JBL](#) /

> JBL FLIP 5 Portable Bluetooth Speaker User Manual

JBL JBLFLIP5BLKAM

JBL FLIP 5 Portable Bluetooth Speaker User Manual

Model: JBLFLIP5BLKAM | Brand: JBL

1. INTRODUCTION

The JBL Flip 5 is a powerful, lightweight, and waterproof portable Bluetooth speaker designed for on-the-go audio. It delivers signature JBL sound and offers extended playtime, making it suitable for various environments, rain or shine.



Image: Front view of the JBL Flip 5 portable Bluetooth speaker in black, showcasing its mesh grille and JBL logo.

2. SETUP

2.1 What's in the Box

Your JBL Flip 5 package includes:

- 1 x JBL Flip 5 speaker
- 1 x Type-C to Type-A charging cable
- 1 x Quick-Start Guide
- 1 x Safety Sheet
- 1 x Warranty Card

2.2 Charging the Speaker

Before first use, fully charge your JBL Flip 5. Connect the included Type-C to Type-A charging cable to the speaker's charging port and a compatible USB power source. The charging time is approximately 12 hours for a full charge, providing up to 12 hours of playtime.

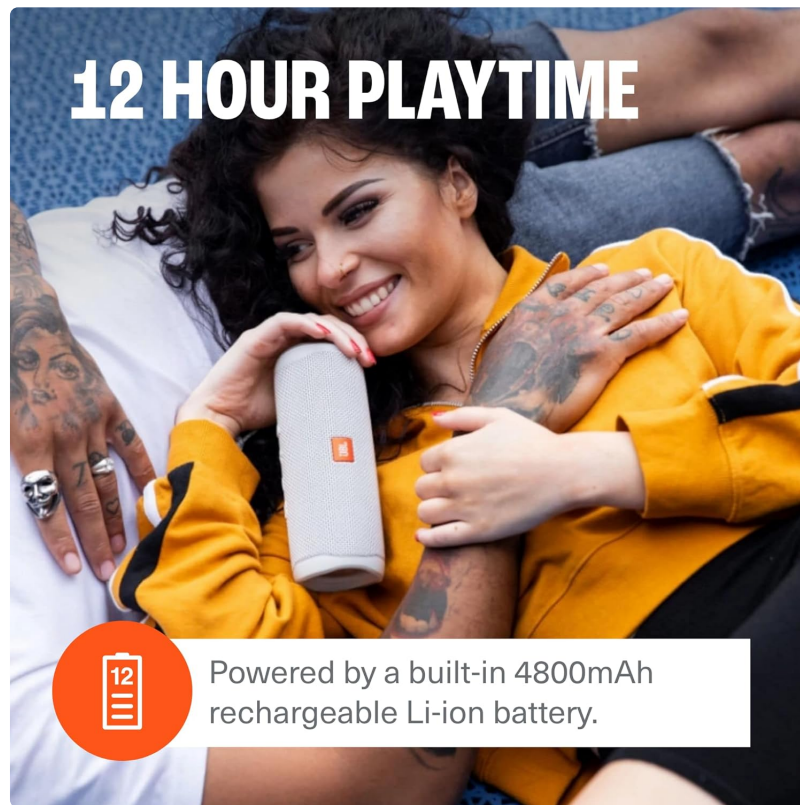


Image: A person relaxing with the JBL Flip 5, illustrating its 12-hour playtime capability.

2.3 Bluetooth Pairing

1. Power on the JBL Flip 5 by pressing the power button.
2. The Bluetooth indicator light will flash, indicating it's in pairing mode.
3. On your mobile device (smartphone, tablet, or laptop), enable Bluetooth and search for available devices.
4. Select "JBL Flip 5" from the list of devices to connect.
5. Once connected, the Bluetooth indicator light will remain solid.

The speaker has a Bluetooth range of up to 33 feet (10 meters).

3. OPERATING THE SPEAKER

3.1 Basic Controls

The JBL Flip 5 features intuitive button controls for easy operation:

- **Power Button:** Press to turn the speaker on or off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Up (+):** Press to increase volume.
- **Volume Down (-):** Press to decrease volume.
- **Play/Pause Button:** Press once to play or pause music. Double-press to skip to the next track.
- **PartyBoost Button:** Press to activate PartyBoost mode (see section 3.2).

3.2 PartyBoost Feature

The PartyBoost feature allows you to pair two JBL PartyBoost-compatible speakers together for stereo sound, or link multiple JBL PartyBoost-compatible speakers to create a larger sound experience. To activate:

1. Ensure both speakers are powered on and in Bluetooth pairing mode.
2. Connect one speaker to your device via Bluetooth.
3. Press the PartyBoost button on both speakers. They will automatically connect to each other.

Note: PartyBoost is not compatible with Connect+ enabled speakers.

3.3 Waterproof Design (IPX7)

The JBL Flip 5 is IPX7 waterproof, meaning it can be immersed in water up to 1 meter (3 feet) for up to 30 minutes. This makes it ideal for use by the pool, at the beach, or in other wet environments. Ensure the charging port cover is securely closed before exposing the speaker to water.

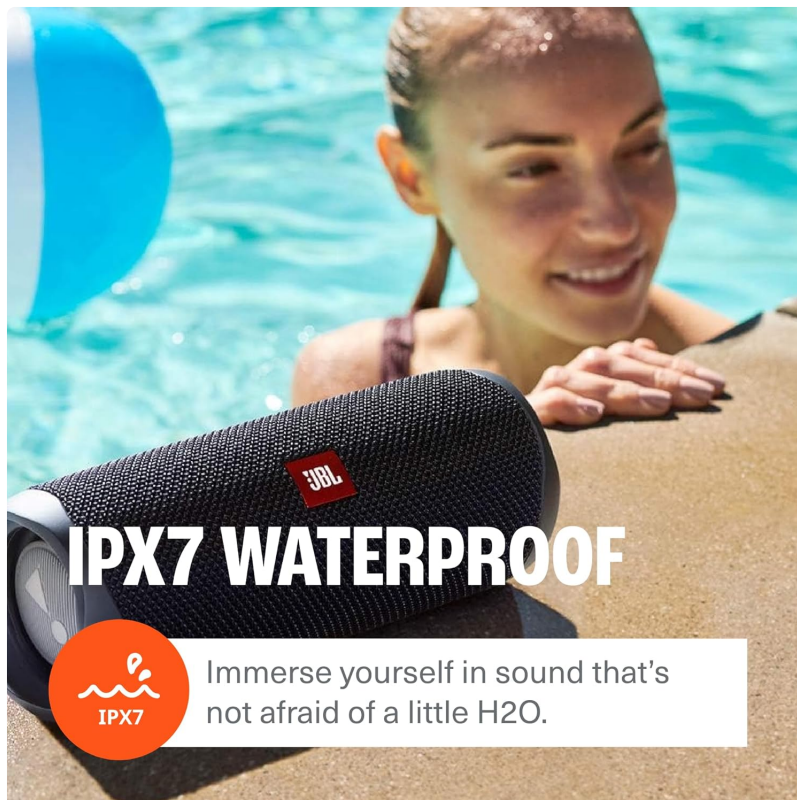


Image: The JBL Flip 5 speaker positioned near a swimming pool, highlighting its waterproof capability.

4. MAINTENANCE

4.1 Cleaning

To clean your JBL Flip 5, use a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the speaker's finish or components. If the speaker has been exposed to saltwater, rinse it thoroughly with fresh water and allow it to air dry completely before charging or further use.

4.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to charge the battery to about 50% every few months to maintain battery health.

4.3 Battery Care

To prolong the lifespan of the built-in lithium-ion battery:

- Avoid fully discharging the battery frequently.
- Do not expose the speaker to temperatures above 45°C (113°F) or below -20°C (-4°F).
- Use only the provided charging cable or a certified equivalent.

5. TROUBLESHOOTING

If you encounter issues with your JBL Flip 5, refer to the following common solutions:

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the charging cable.
Cannot connect via Bluetooth.	Make sure the speaker is in pairing mode (Bluetooth indicator flashing). Ensure Bluetooth is enabled on your device. Forget "JBL Flip 5" from your device's Bluetooth settings and try pairing again. Move the speaker closer to your device.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is properly connected to your device.
PartyBoost not working.	Ensure both speakers are JBL PartyBoost-compatible. Press the PartyBoost button on both speakers simultaneously.

For more detailed troubleshooting, please refer to the official [Troubleshooting Guide \(PDF\)](#) available online.

6. SPECIFICATIONS

Feature	Detail
Model Name	JBL FLIP 5
Dimensions (D x W x H)	7.1"D x 2.7"W x 2.9"H
Item Weight	1.2 Pounds (0.54 kg)
Speaker Type	Portable
Connectivity Technology	Bluetooth (Wireless)
Bluetooth Range	33 Feet (10 meters)
Water Resistance Level	IPX7 (Waterproof)
Battery Life	Up to 12 Hours

Feature	Detail
Charging Time	Approximately 12 Hours
Battery Capacity	3000 mAh
Speaker Maximum Output Power	20 Watts
Frequency Response	20 KHz
Power Source	Battery Powered
Material	Plastic
Included Components	JBL Flip 5, Type-C charging cable, Quick-Start Guide, Safety Sheet, Warranty Card



Image: Diagram showing the dimensions of the JBL Flip 5 speaker (7.1" x 2.7" x 2.9").

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The JBL Flip 5 comes with a Limited Warranty. Please refer to the included Warranty Card in your product package for specific terms and conditions, including coverage duration and claim procedures.

7.2 Additional Resources

For further assistance, detailed user guides, and product support, please visit the official JBL website or refer to the following documents:

- [User Manual \(PDF\)](#)
- [User Guide \(PDF\)](#)
- [Visit the JBL Store on Amazon](#)

