

Vikye CF-FM783-BA

Vikye CF-FM783-BA 7.83Hz Schumann Wave Pulse Generator User Manual

Model: CF-FM783-BA | Brand: Vikye

1. INTRODUCTION AND OVERVIEW

The Vikye CF-FM783-BA is a high-accuracy, stable 7.83Hz ultra-low frequency pulse generator, also known as a Schumann wave generator. This device is designed to influence the space environment, promoting physical and mental relaxation, and enhancing the body's perception of sound and images. It aims to improve overall well-being and work efficiency by reducing mental stress. Key features include a high-stability pulse chip, precision correction capacitance, and a multi-loop adjustable resistor for accurate frequency generation. It is powered by a high-quality polymer battery with built-in overcharge, overvoltage, and overcurrent protection, ensuring a stable voltage supply with minimal ripple.


2. SPECIFICATIONS

- **Model:** CF-FM783-BA
- **Power Input:** 5V (via Android charging cable)
- **Polymer Battery Capacity:** 1400mAh
- **Charging Time:** Approximately 6 hours (with 250mA charging current)
- **Working Current:** 1mV
- **Working Time:** Up to 200 hours (on a full charge)
- **Dimensions (L x W x H):** 7 x 5.5 x 1 cm (2.76 x 2.17 x 0.39 inches)
- **Weight:** 83g
- **Frequency:** 7.83Hz (Schumann Wave)

3. PACKAGE CONTENTS

The following items are included in your package:

- 1 x Low Frequency Pulse Generator (CF-FM783-BA)
- 1 x USB Cable
- 1 x Screwdriver

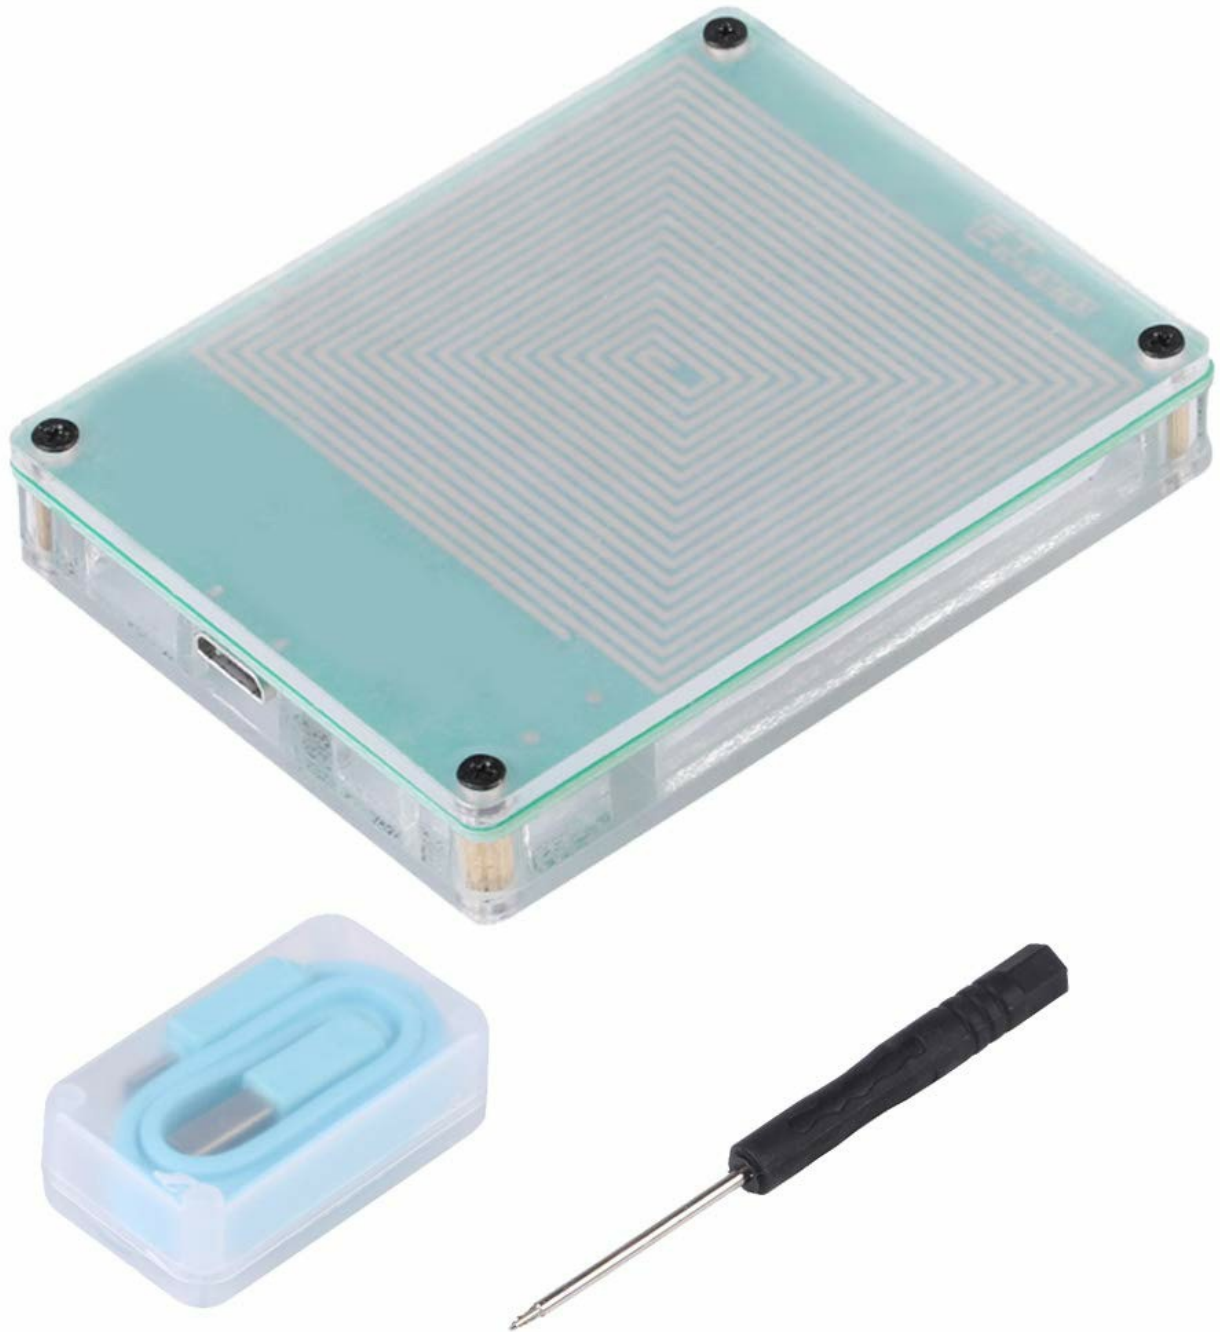

The Schumann Wave Generator shown alongside its accessories: a blue USB charging cable and a small screwdriver.

4. SETUP

4.1 Charging the Device


Before initial use, fully charge the generator. Connect the provided USB cable to the micro-USB port on the device and to a 5V power source (e.g., a standard Android phone charger, not included). The charging current is approximately 250mA, and a full charge takes about 6 hours. The device features a polymer battery with protection against overcharge, overvoltage, and overcurrent.



The blue USB charging cable connected to the generator's micro-USB port, indicating the charging process.

4.2 Powering On/Off

The generator is equipped with a toggle switch for easy operation. Move the switch to the 'ON' position to activate the device and to the 'OFF' position to power it down.

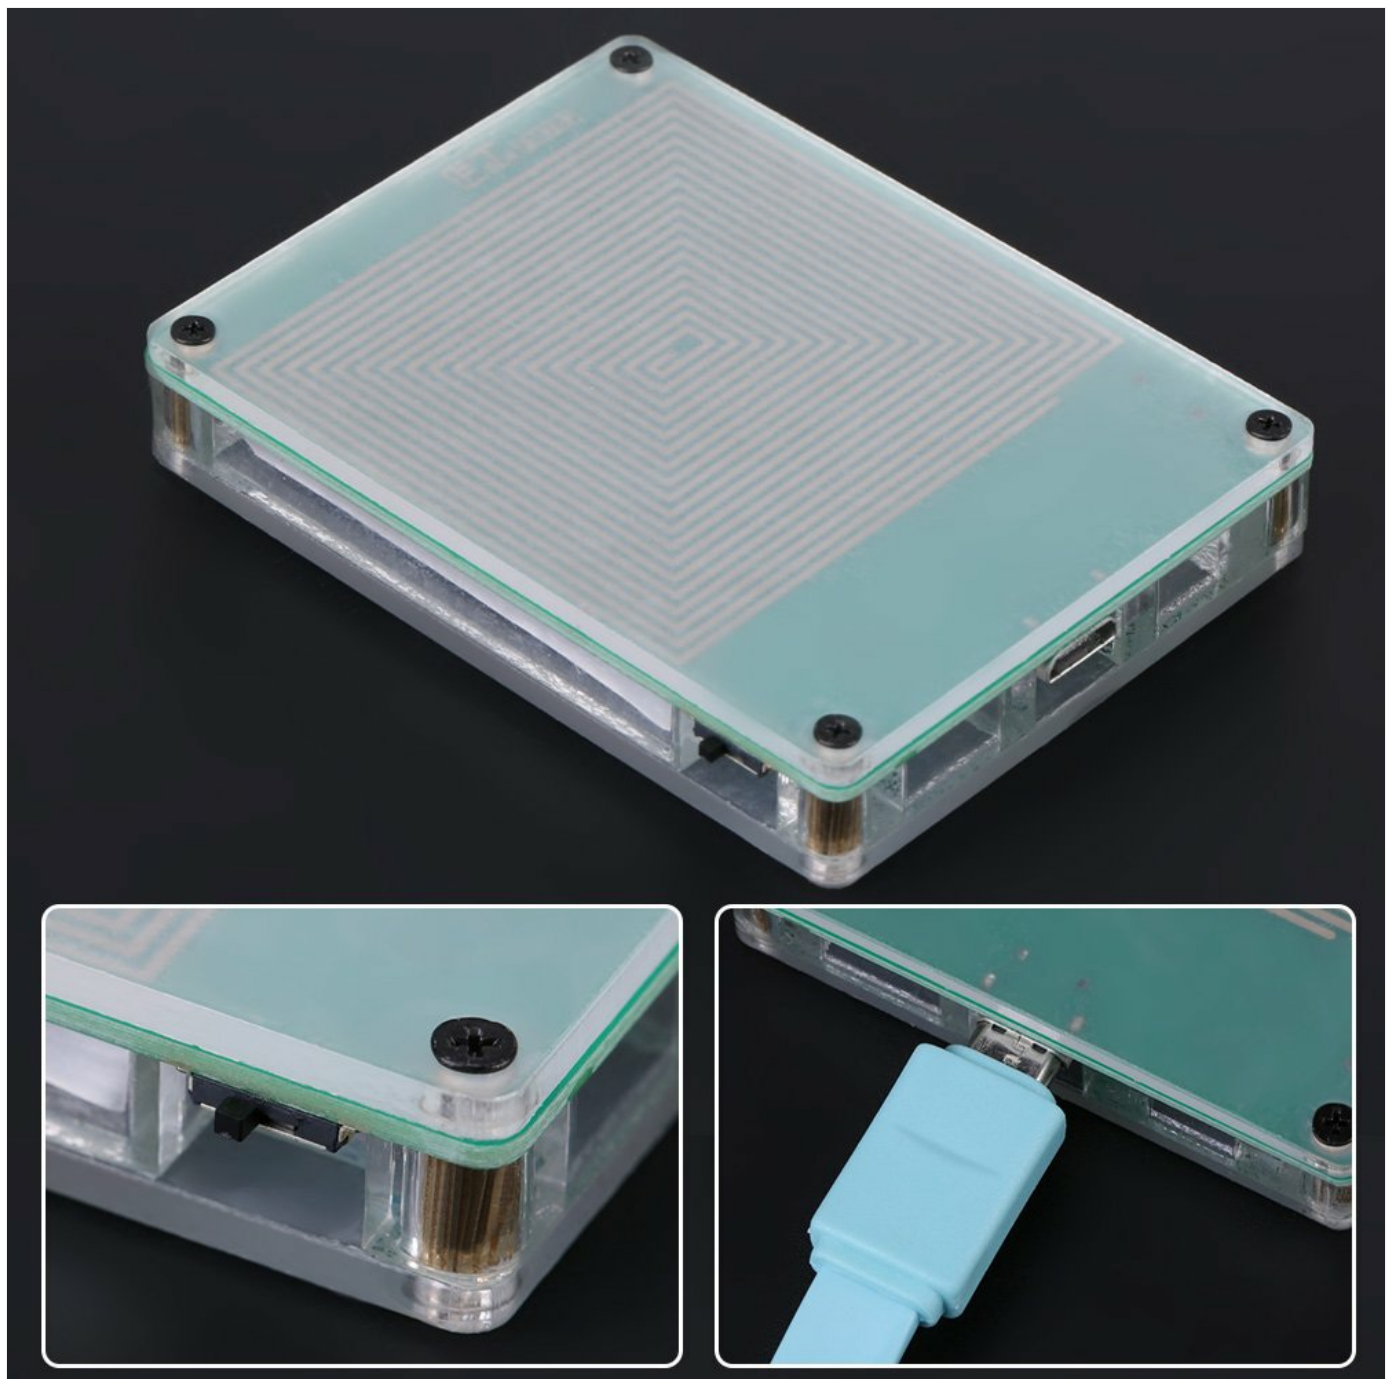


A detailed view of the side of the generator, highlighting the micro-USB charging port and the on/off toggle switch.

5. OPERATING INSTRUCTIONS

5.1 General Use

Once powered on, the generator emits a 7.83Hz Schumann wave. The device is designed to operate continuously for up to 200 hours on a full charge. Its effect is subtle and environmental, aiming to create a more harmonious atmosphere.

7.83Hz Low Frequency Schumann Wave Pulse Generator

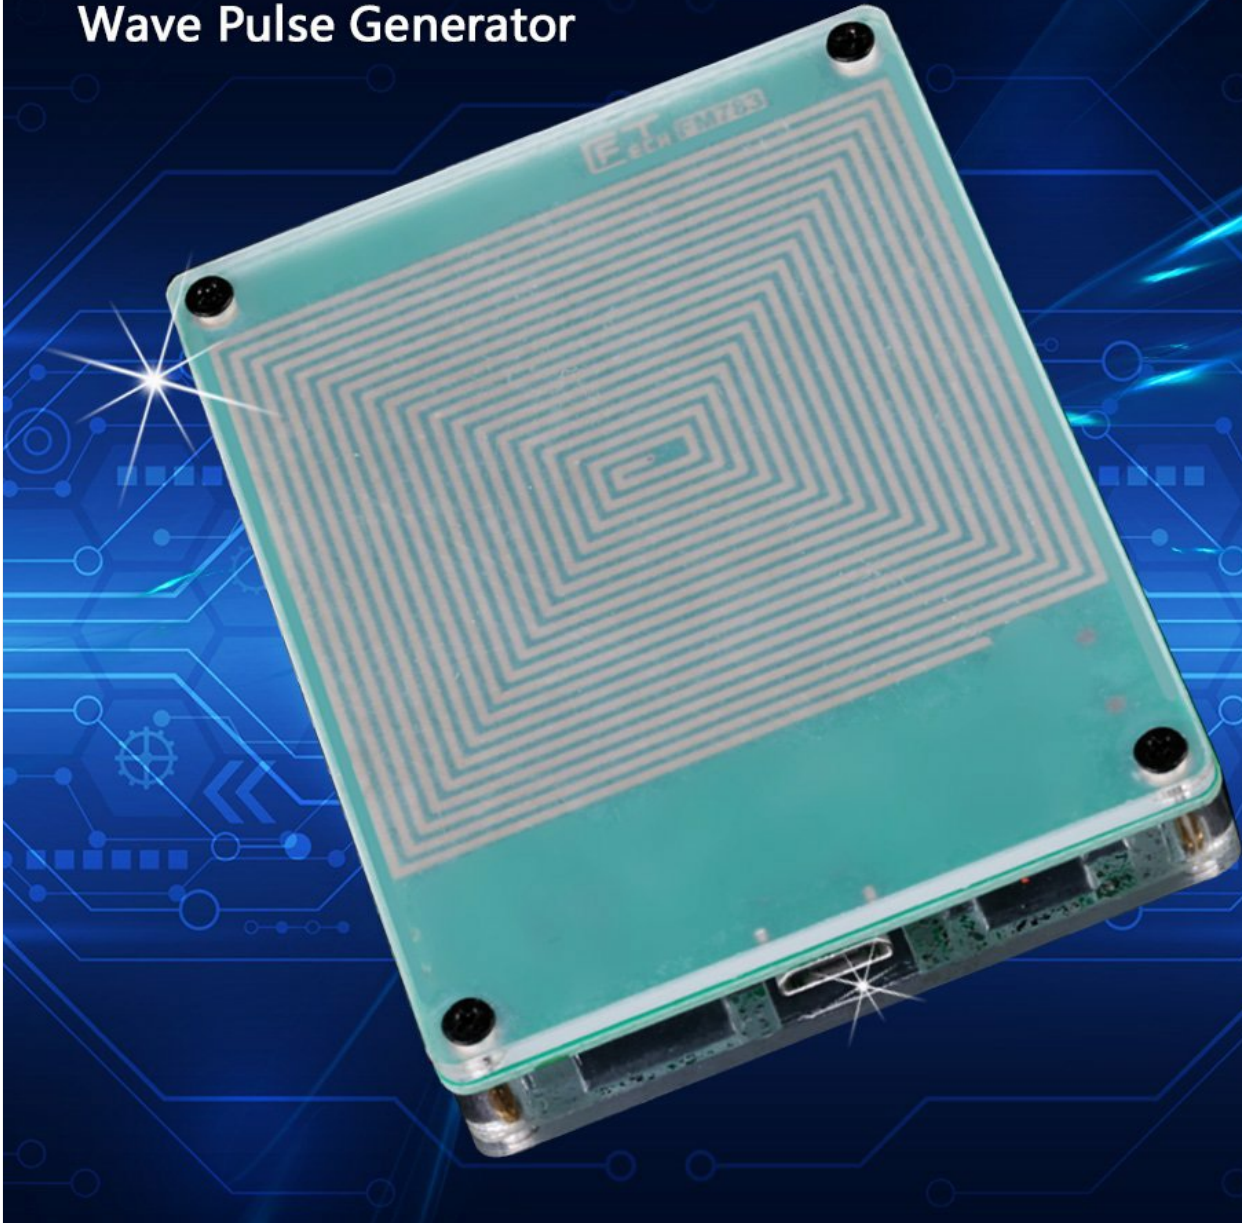

The Vikye CF-FM783-BA Schumann Wave Pulse Generator, featuring a clear top panel with a spiral antenna design.

5.2 Application for HIFI Systems

For users with HIFI audio systems, the Schumann wave generator can be placed near the equipment to potentially enhance the listening experience. Consider the following recommendations:

- Ensure your HIFI equipment is of a suitable quality to discern subtle environmental changes.
- Experiment with placement. Placing the product on top of a speaker, with appropriate weight for vibration damping, may yield better results.
- For an enhanced effect, it is recommended to use two units.

5.3 Application for Sleep Improvement

To utilize the Schumann wave for improving sleep quality, follow these guidelines:


- Place the generator on a bedside table or a surface at least 1 meter (approximately 3 feet) away from your body.
- Consider adding appropriate weight to the device for anti-vibration treatment, if desired.
- If the indicator light is disruptive during the night, cover it with a piece of paper or fabric.

- Evaluate the effect over a trial period of at least one week to observe any changes in sleep patterns.

6. MAINTENANCE

The Vikye CF-FM783-BA generator is a finished product and does not require assembly. To ensure longevity and optimal performance:

- Keep the device clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble or modify the device. Internal components are not user-serviceable.
- The built-in polymer battery is designed with protection circuits; however, avoid prolonged periods of deep discharge or continuous overcharging.

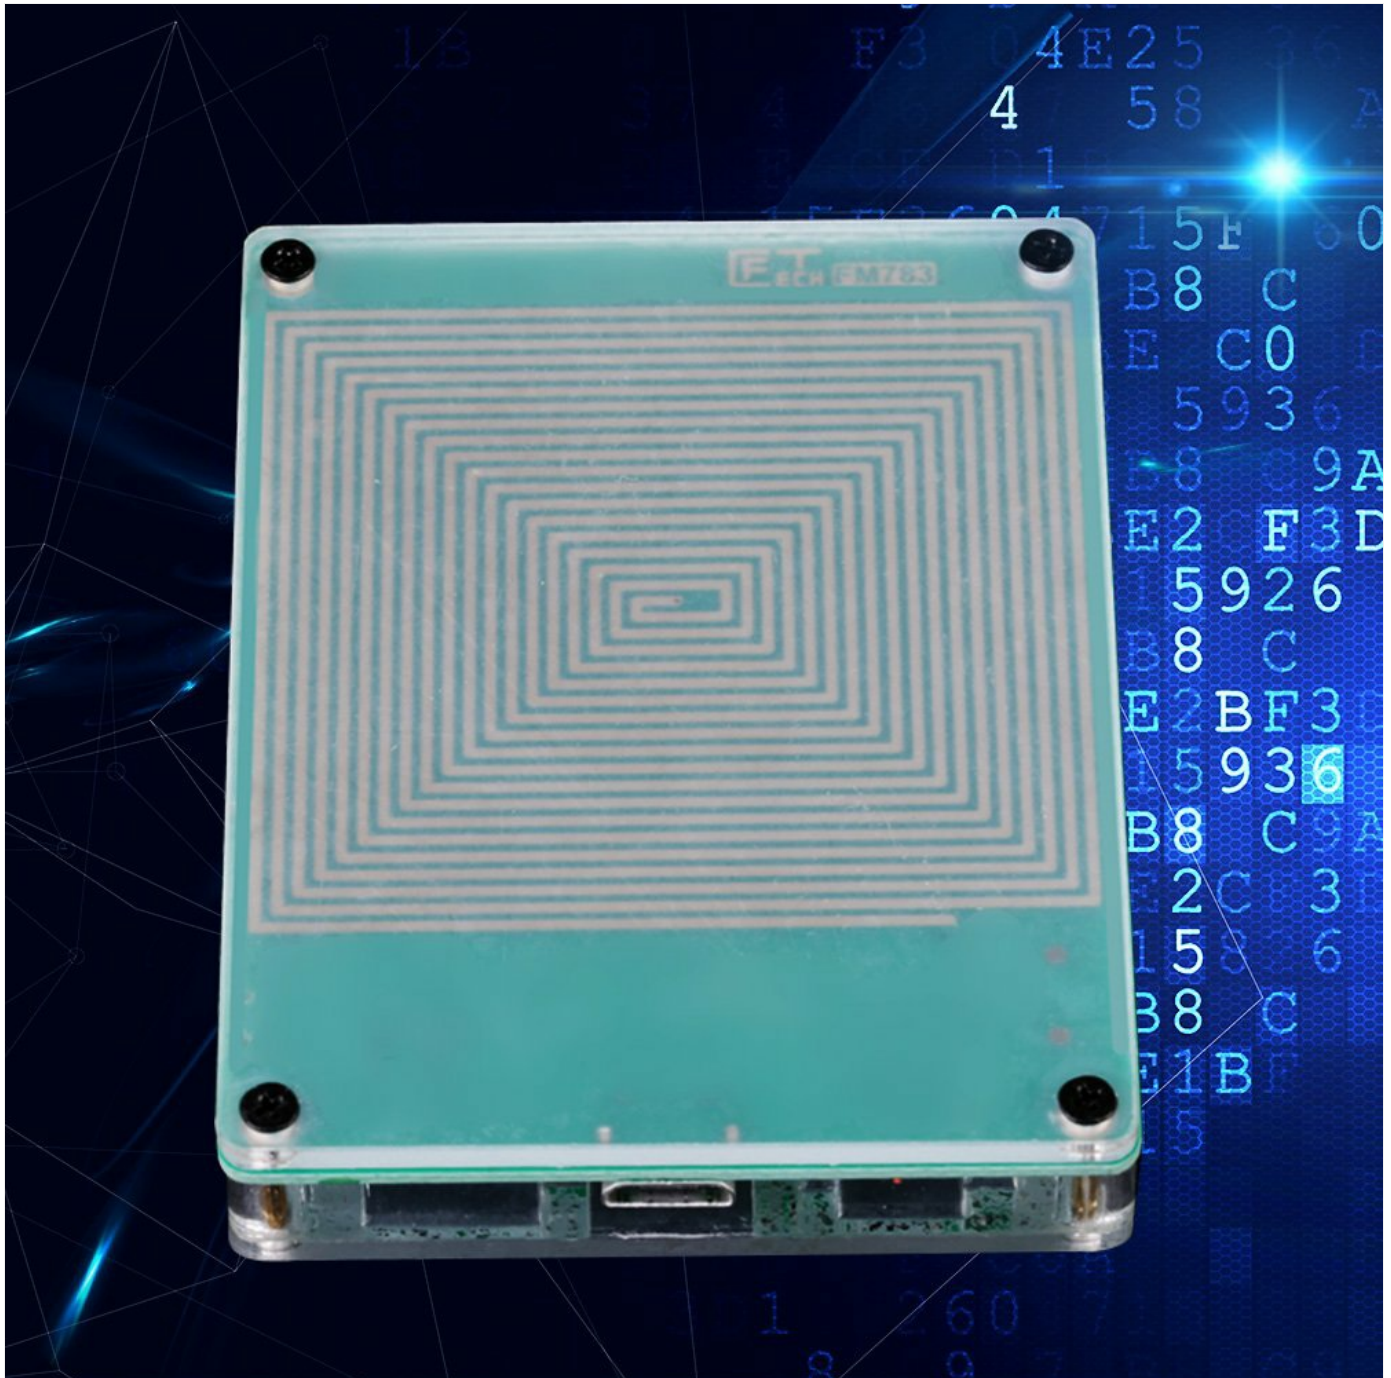

A clear top-down view of the generator, emphasizing the internal circuit board and the spiral antenna pattern.

7. TROUBLESHOOTING

If you experience issues or do not perceive the expected effects from the Schumann wave generator, consider the following:

- **No Power/Not Turning On:** Ensure the device is fully charged. Connect it to a 5V power source using the provided USB cable and allow sufficient charging time. Verify the toggle switch is in the 'ON' position.
- **Perceived Lack of Effect:** The effects of Schumann waves are subtle and environmental, not direct or immediate. Individual perception may vary. Ensure the device is placed in an optimal location, away from strong electromagnetic interference (e.g., Wi-Fi routers, large electronic appliances, power outlets, or extensive wall wiring) which can override the signal.
- **Disruptive Indicator Light:** If the indicator light is too bright, especially during sleep, cover it with a small piece of opaque material like paper or fabric.
- **Physical Damage:** If the device has been dropped or shows signs of physical damage, discontinue use. The included screwdriver is for minor adjustments or access if needed, but internal repairs are not recommended for users.

8. IMPORTANT NOTES

- A power supply adapter for the USB cable is not included in the package. Please use a standard 5V USB power adapter.
- This item is a finished product and does not require assembly.
- The effects of Schumann waves are subjective and may vary between individuals.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question