

ROCAM ROCAM CR1008 BLUE

ROCAM Digital Alarm Clock User Manual

MODEL: ROCAM CR1008 BLUE

Large 7.5" LED Display with Dimmer, Snooze, 7 Color Night Light, USB Chargers, Battery Backup

1. Introduction

Thank you for choosing the ROCAM Digital Alarm Clock. This manual provides detailed instructions to help you set up and operate your new alarm clock, ensuring you can fully utilize all its features, including the large LED display, adjustable brightness, multi-color night light, and convenient USB charging ports. Please read this manual thoroughly before use and keep it for future reference.

2. Package Contents

- ROCAM Digital Alarm Clock (Model: CR1008 BLUE)
- Power Adapter
- User Manual

3. Product Overview

Familiarize yourself with the various parts and controls of your ROCAM Digital Alarm Clock.

USB & Type-C Port for Charging



Battery Backup

(Don't worry about time resetting after a power outage)



Figure 3.1: Front and Rear View of the Alarm Clock with Labeled Controls

Table 3.1: Key Features and Controls

No.	Feature/Control	Description
1	Clear Large Display	7.5-inch LED display for easy time reading.
2	Time Setting Buttons	Buttons on top for setting hour and minute.
3	Snooze Button / Night Light Control	Press for 9-minute snooze. Tap to change night light color. Press and hold to turn night light on/off.
4	DST Switch	Toggle for Daylight Saving Time adjustment.

No.	Feature/Control	Description
5	Time Format Switch	Switch between 12-hour and 24-hour display.
6	Alarm Volume Control	Slider to adjust alarm volume (Low-Medium-High).
7	Alarm ON/OFF Switch	Toggle to enable or disable the alarm.
8	Alarm Pause Button	Dedicated button to pause the alarm for the day.
9	Dual USB Charging Ports	Two USB ports for charging external devices.
10	Battery Backup Compartment	Holds 2 AAA batteries for time and alarm settings retention during power outages.
11	Dimmer Slider	Adjusts the brightness of the LED display from 0-100%.

4. Setup

4.1 Power Connection

1. Unpack the alarm clock and power adapter from the box.
2. Insert the DC plug of the power adapter into the DC IN port on the back of the alarm clock.
3. Plug the power adapter into a standard electrical outlet. The display will light up.

4.2 Battery Backup Installation

The alarm clock requires 2 AAA batteries (not included) for backup power. This ensures that time and alarm settings are retained during a power outage, though the display will not be visible.



Figure 4.1: Battery Backup Compartment

1. Open the battery compartment cover on the back of the clock.
2. Insert 2 new AAA batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

4.3 Setup Overview Video

Watch this official product video for a visual guide on setting up your ROCAM Digital Alarm Clock and its key features.

5. Operating Instructions

5.1 Setting the Time

1. Press the **SET TIME** button on the back of the clock. The hour digits will begin to flash.
2. Use the **HOUR** and **MINUTE** buttons on the top of the clock to adjust the time.
3. Press **SET TIME** again to confirm the setting.

5.2 Setting the Alarm

1. Press the **SET ALARM** button on the back of the clock. The alarm hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons on the top to set your desired alarm time.
3. Press **SET ALARM** again to confirm.
4. Ensure the **ALARM ON/OFF** switch on the back is set to 'ON'.

5.3 Adjusting Alarm Volume

Use the **ALARM VOLUME** slider on the back of the clock to select between Low, Medium, or High volume settings for the alarm buzzer.

5.4 Adjusting Display Brightness

The clock features a 0-100% dimmable display. Use the **DIMMER** slider on the back of the clock to adjust the brightness to your preference, from completely off to full brightness.

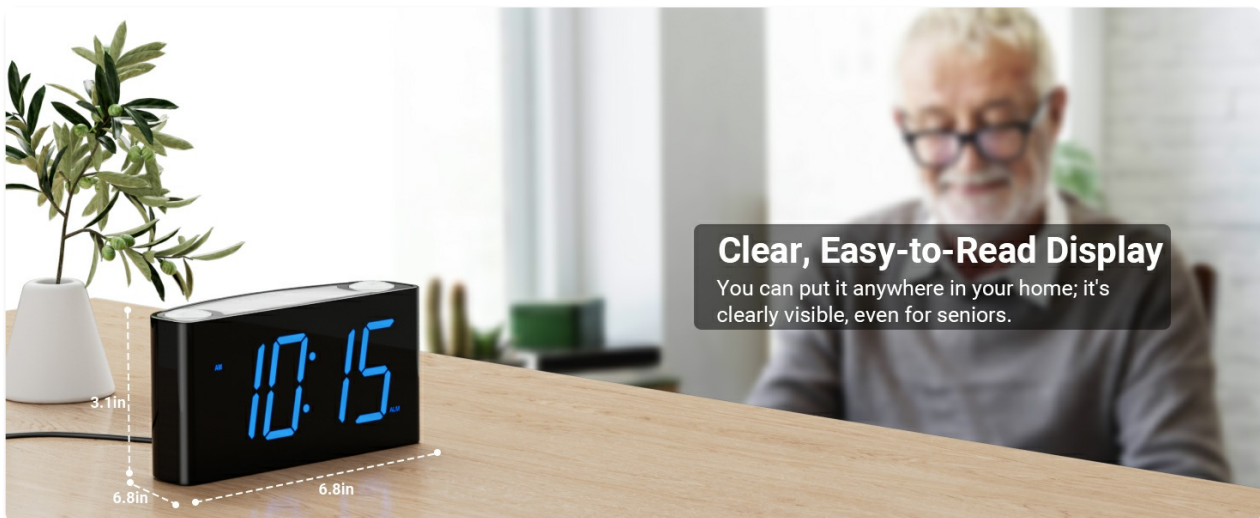


Figure 5.1: Adjustable Display Brightness

5.5 Using the 7-Color Night Light

The clock includes a built-in night light with 7 selectable colors.



Figure 5.2: 7-Color Night Light Feature

- To turn the night light ON/OFF: Press and hold the **SNOOZE** button on top of the clock.
- To change the night light color: Tap the **SNOOZE** button repeatedly to cycle through the 7 available colors.

5.6 Snooze Function

When the alarm sounds, press the large **SNOOZE** button on the top of the clock to temporarily silence the alarm for 9 minutes. The alarm will sound again after 9 minutes.

5.7 Alarm Pause

To turn off the alarm for the current day without affecting the alarm setting for subsequent days, press the dedicated red **ALARM PAUSE** button on the back of the clock. The alarm will reset for the next scheduled time.

5.8 12/24 Hour Format

Use the **TIME FORMAT** switch on the back of the clock to toggle between 12-hour (AM/PM) and 24-hour display formats.

5.9 Daylight Saving Time (DST) Adjustment

To adjust for Daylight Saving Time, use the **DST** switch on the back of the clock. This will automatically add or subtract one hour from the current time.

5.10 Using Dual USB Charging Ports

The alarm clock is equipped with two USB charging ports (USB-A and USB-C) to charge your electronic devices while you sleep.

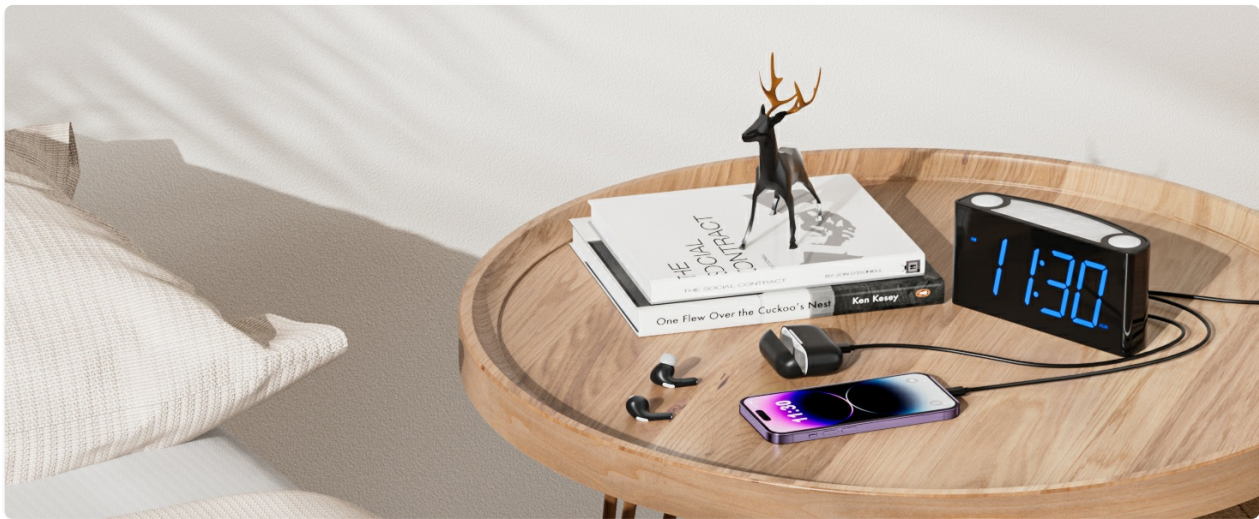


Figure 5.3: Dual USB Charging Ports

- Connect your device's USB charging cable to one of the USB ports on the back of the alarm clock.
- Connect the other end of the cable to your device. Charging will begin automatically.

6. Maintenance

- To clean the clock, wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not disassemble the clock. This will void the warranty.

7. Troubleshooting

Table 7.1: Common Issues and Solutions

Problem	Possible Cause	Solution
Display is blank.	No power connection or power outage.	Ensure power adapter is securely plugged in. Check power outlet. If power outage, display will be off but settings retained with backup batteries.
Alarm does not sound.	Alarm is OFF or volume is too low.	Check the ALARM ON/OFF switch on the back. Adjust ALARM VOLUME slider.
Time/Alarm settings reset after power outage.	Backup batteries are not installed or are depleted.	Install or replace 2 AAA backup batteries.
Night light not working or stuck on one color.	Night light is OFF or button not pressed correctly.	Press and hold the SNOOZE button to turn ON. Tap to cycle colors.
USB charging not working.	Cable issue or device not compatible.	Ensure cable is properly connected. Try a different USB cable or device.

8. Specifications

Table 8.1: Product Specifications

Feature	Detail
Brand	ROCAM
Model Number	ROCAM CR1008 BLUE
Display Type	Digital LED
Display Size	7.5 inches
Product Dimensions	6.5"W x 3.1"H
Item Weight	11.3 ounces
Power Source	Corded Electric
Battery Backup	2 x AAA batteries (not included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Special Features	Loud Alarm, Large Display, Night Mode, Adjustable Brightness (0-100%), Dual USB Charging Ports, 7 Color Night Light
Time Format	12H/24H selectable

9. Warranty and Support

9.1 Warranty Information

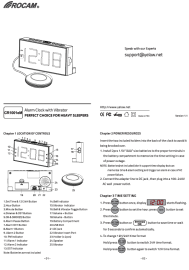
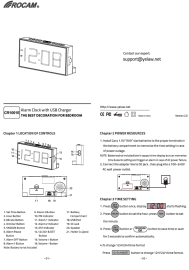
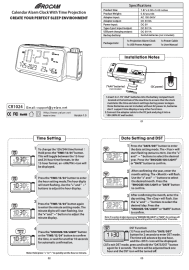
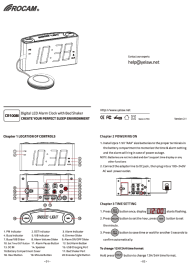
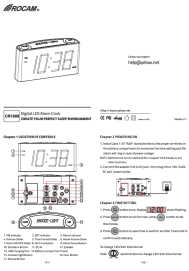
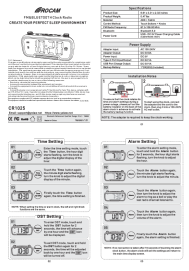
ROCAM provides the following warranty for your Digital Alarm Clock:

- **30-Day Money Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **90-Day Replacement:** For any manufacturing defects or malfunctions within 90 days of purchase, a free replacement will be provided.
- **18-Month Warranty:** The product is covered by an 18-month warranty from the date of purchase for defects in materials and workmanship.

9.2 Customer Support

For any operational problems, questions, or warranty claims, please do not hesitate to contact our customer service team. We are committed to providing 24-hour customer service response.

Contact Information: Please refer to the contact details provided on the product packaging or the official ROCAM website for the most up-to-date support channels.

	<p>ROCAM CR1001eM Alarm Clock with Vibrator User Manual</p> <p>User manual for the ROCAM CR1001eM Alarm Clock with Vibrator, detailing its features, setup, and operation for heavy sleepers.</p>
	<p>ROCAM CR1001E Alarm Clock with USB Charger User Manual</p> <p>User manual for the ROCAM CR1001E digital alarm clock with USB charger. This guide details how to set time and alarms, adjust display brightness, use Daylight Saving Time (DST) features, and utilize the USB charging port. Includes information on power resources and control locations.</p>
	<p>ROCAM CR1024 Calendar Alarm Clock with Time Projection User Manual</p> <p>Comprehensive user manual for the ROCAM CR1024 Calendar Alarm Clock, detailing its features including time projection, alarm settings, date configuration, DST function, brightness control, temperature/humidity monitoring, night light, and device charging capabilities.</p>
	<p>ROCAM CR1008i Digital LED Alarm Clock with Bed Shaker User Manual</p> <p>User manual for the ROCAM CR1008i Digital LED Alarm Clock with Bed Shaker. Learn how to set time, alarms, use the bed shaker, night light, and understand warranty information.</p>
	<p>ROCAM CR1008 Digital LED Alarm Clock User Manual</p> <p>User manual for the ROCAM CR1008 Digital LED Alarm Clock. This guide provides instructions on setting up, operating features like time and alarm setting, dimmer, night light, DST, USB charging, and warranty information.</p>
	<p>ROCAM CR1025 FM & Bluetooth Clock Radio User Manual</p> <p>Comprehensive user manual for the ROCAM CR1025 FM & Bluetooth Clock Radio, detailing setup, features like alarm, DST, Bluetooth connectivity, FM radio, and charging capabilities.</p>