

[Manuals.plus](#) /

› [leikefitness](#) /

› leikefitness Leike X Bike AE2200 Folding Magnetic Exercise Bike User Manual

leikefitness AE2200

leikefitness Leike X Bike AE2200 Folding Magnetic Exercise Bike User Manual

Model: AE2200

IMPORTANT SAFETY INFORMATION

Before using the leikefitness Leike X Bike AE2200, please read and understand all instructions in this manual. Keep this manual for future reference.

- Consult your physician before starting any exercise program.
- Ensure all parts are securely assembled before each use.
- Place the exercise bike on a flat, stable surface.
- Keep children and pets away from the equipment during use.
- Do not exceed the maximum user weight of 330 lbs (approximately 150 kg).
- Wear appropriate exercise clothing and footwear.
- Stop exercising immediately if you feel faint, dizzy, or experience pain.
- Regularly inspect the bike for wear and tear. Do not use if damaged.

PACKAGE CONTENTS


Verify that all components are present before assembly. If any parts are missing or damaged, contact customer support.

- Main Frame Assembly
- Front and Rear Stabilizers
- Pedals (Left and Right)
- Seat and Backrest
- Handlebars with LCD Monitor
- Hardware Kit (bolts, washers, nuts, tools)
- User Manual (this document)
- 2 AAA Batteries (for LCD monitor)

SETUP AND ASSEMBLY

Follow these steps to assemble your leikefitness Leike X Bike AE2200. It is recommended to have two people for assembly.

1. **Attach Stabilizers:** Secure the front and rear stabilizers to the main frame using the provided bolts and washers. Ensure they are tightened firmly.
2. **Install Pedals:** Identify the Left (L) and Right (R) pedals. The left pedal screws counter-clockwise, and the right pedal screws clockwise. Tighten securely with a wrench.
3. **Assemble Seat and Backrest:** Attach the seat to the seat post and the backrest to its support. Adjust the seat height to your preference using the adjustment knob.
4. **Mount Handlebars and Monitor:** Connect the handlebar assembly to the main frame. Attach the LCD monitor to the handlebar post and connect the sensor wires. Insert the 2 AAA batteries into the monitor.
5. **Final Check:** Verify all bolts and connections are tight and secure before first use.

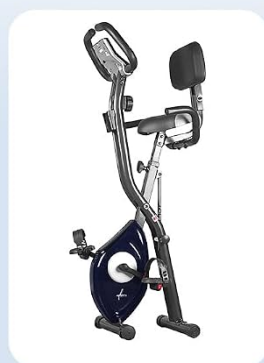

Fold Fully



Upright



Recumbent

3 in 1
Folding
Exercise
Bike

Image: The leikefitness Leike X Bike AE2200 showing its dimensions and three possible configurations: fully folded, upright, and recumbent. This illustrates the compact design and versatility of the bike.

OPERATING INSTRUCTIONS

Adjusting Seat Height

The seat height can be adjusted to 7 different levels to accommodate various user heights. Loosen the adjustment knob located on the seat post, slide the seat to the desired height, and then tighten the knob firmly to secure the seat.



Image: Detailed view of the resistance knob and the seat adjustment mechanism, highlighting how users can personalize their bike setup for comfort and effective exercise.

Adjusting Resistance

The bike features 10 levels of magnetic resistance. Turn the tension control knob, located below the handlebars, clockwise to increase resistance for a more challenging workout, and counter-clockwise to decrease resistance for an easier session. Levels 1-3 are for relaxed mode, 4-6 for motion mode, and 7-10 for captain mode.



Image: A person using the leikefitness Leike X Bike AE2200, demonstrating the 10-level magnetic resistance system and emphasizing the bike's smooth and quiet operation.

Using the LCD Monitor

The HD electronic dial displays real-time workout data. Press the "MODE" button to cycle through different functions:

- **TIME:** Displays the duration of your workout.
- **SPEED:** Shows your current cycling speed.
- **DISTANCE:** Tracks the distance covered during your session.
- **CALORIES:** Estimates the calories burned.
- **ODOMETER:** Records the total accumulated distance.
- **PULSE (Heart Rate):** Displays your heart rate when holding the sensors on the handlebars.

The monitor also features a convenient phone/tablet holder.



Image: The LCD display of the leikefitness Leike X Bike AE2200, detailing the various metrics tracked (speed, time, distance, calories, heart rate) and the integrated holder for mobile devices.

Folding and Unfolding the Bike

The Leike X Bike AE2200 is designed for easy folding and storage. To fold, loosen the main folding knob (usually located near the center joint), carefully fold the frame, and secure it in the folded position. To unfold, reverse the process, ensuring the frame is locked securely before use.

Multiple Exercise Modes



Image: Visual representation of the leikefitness Leike X Bike AE2200 in its three primary modes: recumbent, upright, and folded, along with their corresponding space requirements.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your exercise bike.

- **Cleaning:** Wipe down the bike with a damp cloth after each use to remove sweat and dust. Avoid abrasive cleaners.
- **Inspections:** Periodically check all bolts, nuts, and moving parts for tightness and wear. Tighten any loose fasteners.
- **Lubrication:** No specific lubrication is required for the magnetic resistance system.
- **Storage:** Store the bike in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LCD Monitor not displaying	Dead batteries; Loose sensor connection.	Replace AAA batteries; Check and secure all sensor cables.

Problem	Possible Cause	Solution
Unusual noise during operation	Loose bolts; Parts rubbing.	Inspect and tighten all assembly bolts; Ensure no parts are misaligned.
Resistance not changing	Resistance knob not properly engaged; Internal mechanism issue.	Ensure the resistance knob is fully turned; If problem persists, contact customer support.
Bike feels unstable	Uneven surface; Loose stabilizer bolts.	Move bike to a flat surface; Tighten stabilizer bolts.

SPECIFICATIONS

Feature	Detail
Model Number	AE2200
Brand	leikefitness
Resistance Mechanism	Magnetic
Number of Resistance Levels	10
Special Features	Foldable, Adjustable Saddle, 2-in-1 (Upright/Recumbent)
Maximum Weight Recommendation	330 Pounds (approx. 150 kg)
Product Dimensions (L x W x H)	40.64 x 66.04 x 119.38 cm (16 x 26 x 47 inches)
Item Weight	17.5 Kilograms (approx. 38.5 lbs)
Material	Iron (Frame), Aluminum (Handle Material)
Power Source	Battery Powered (2 AAA batteries included)
Recommended Uses	Indoor Exercise

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official leikefitness website. Keep your purchase receipt as proof of purchase.