

[Manuals.plus](#) /

› [SKMEI](#) /

› SKMEI Digital Sports Watch Model 1299 User Manual

SKMEI SKMEI-1299

SKMEI Digital Sports Watch Model 1299 User Manual

Model: SKMEI-1299

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SKMEI Digital Sports Watch Model 1299. This watch features a digital display, 50M water resistance, dual time functionality, a chronograph, countdown timer, alarm, and EL backlight. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.



Figure 1: Front view of the SKMEI Digital Sports Watch Model 1299.

2. PRODUCT OVERVIEW

The SKMEI Digital Sports Watch Model 1299 is designed for durability and functionality, suitable for various activities. Key features include:

- **Digital Display:** Clear and easy-to-read time display.
- **50M Water Resistance:** Suitable for splashes, sweating, handwashing, and cold showering. Not for diving or prolonged underwater activities.
- **Dual Time:** Track two different time zones simultaneously.
- **Chronograph:** Stopwatch function for measuring elapsed time.
- **Countdown Timer:** Set a timer for specific durations.
- **Alarm:** Daily alarm function.
- **EL Backlight:** Illuminates the display for visibility in low-light conditions.
- **12/24 Hour Clock:** Select preferred time format.

- **Date and Week Display:** Shows current date and day of the week.

FUNCTION OVERVIEW



Figure 2: Overview of watch functions.

3. SETUP

3.1 Button Identification

Familiarize yourself with the four buttons on your watch:

- **LIGHT (Top Left):** Activates the EL backlight.
- **MODE (Bottom Left):** Cycles through different modes (Time, Alarm, Chronograph, Countdown, Dual Time).
- **START (Top Right):** Used to start/stop functions in Chronograph and Countdown modes, and to adjust settings.
- **RESET (Bottom Right):** Used to reset functions in Chronograph and Countdown modes, and to select settings.

SWITCH BETWEEN FOUR MODES EASILY

Switch Between Time, Stopwatch, Alarm Clock, Other Modes,
With Multiple Functions At Your Fingertips



Figure 3: Watch button layout and functions.

3.2 Setting Time and Date

1. In Timekeeping Mode, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: seconds, hours, minutes, year, month, day, 12/24 hour format.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

4. OPERATING INSTRUCTIONS

4.1 Mode Switching

Press the **MODE** button to cycle through the following modes:

- Timekeeping Mode (displays current time, date, day)

- Chronograph Mode (stopwatch)
- Alarm Mode
- Countdown Timer Mode
- Dual Time Mode

4.2 Using the EL Backlight

Press the **LIGHT** button (top left) to illuminate the watch display for a few seconds. This is useful in dark environments.

4.3 Chronograph (Stopwatch) Mode

1. Press **MODE** until you reach Chronograph Mode (indicated by 'CHRONO' or similar on the display).
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

4.4 Alarm Mode

1. Press **MODE** until you reach Alarm Mode (indicated by 'ALARM' or 'ALM').
2. Press **RESET** to select the hour or minute setting. The selected value will flash.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press **MODE** to exit alarm setting.
5. To turn the alarm ON/OFF, in Alarm Mode, press **START**. An alarm icon will appear/disappear.

4.5 Countdown Timer Mode

1. Press **MODE** until you reach Countdown Timer Mode (indicated by 'TIMER' or 'COUNT DOWN').
2. Press **RESET** to select the hour, minute, or second setting. The selected value will flash.
3. Use the **START** button to adjust the flashing value.
4. Press **MODE** to exit timer setting.
5. Press **START** to begin the countdown.
6. Press **START** again to pause the countdown.
7. Press **RESET** to reset the timer to its initial set value.

4.6 Dual Time Mode

1. Press **MODE** until you reach Dual Time Mode (indicated by 'DUAL TIME' or 'T2').
2. Press **RESET** to select the hour or minute setting. The selected value will flash.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press **MODE** to exit dual time setting.

5. MAINTENANCE

5.1 Water Resistance

Your SKMEI 1299 watch is water-resistant up to 50 meters (5 ATM). This means it can withstand splashes, sweating, handwashing, and cold showering. However, it is **not** suitable for diving, snorkeling, or prolonged underwater activities.

Important: Do not press any buttons while the watch is submerged in water or wet, as this can compromise the water resistance.



3ATM DAILY WATERPROOF



LUMINOUS DISPLAY



HIGH HARDNESS GLASS



STAINLESS STEEL STRAP

Figure 4: Watch features including water resistance and material.

5.2 Cleaning

To clean your watch, wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using chemical cleaners, as they may damage the watch's finish or seals.

5.3 Battery Replacement

The watch is powered by one C battery (included). When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

6. TROUBLESHOOTING

- **Display is blank:** Check if the battery needs replacement.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not a feature of this model) or that no buttons are stuck. If the issue persists, a battery replacement might be needed.

- **Time is inaccurate:** Re-set the time following the instructions in Section 3.2. If inaccuracy persists, the battery may be low or the watch may require servicing.
- **Water inside the watch:** If water condensation appears inside the watch, stop using it immediately and seek professional servicing to prevent further damage.

7. SPECIFICATIONS

Feature	Detail
Brand	SKMEI
Model Number	SKMEI-1299
Movement Type	Quartz (Digital)
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Band Material	Polyurethane (PU)
Crystal Material	Resin
Water Resistance Depth	50 Metres (5 ATM)
Case Diameter	43 Millimetres
Case Thickness	13 Millimetres (approx. 0.11 mm is likely a typo in source data)
Band Width	18 Millimetres (approx. 40 mm is likely a typo in source data)
Band Length	26.5 Centimetres
Item Weight	40 Grams
Included Components	Watch, SKMEI Original Box, User Manual

PRODUCT SPECIFICATIONS



BRAND: ----- SKMEI

MODEL: ----- 1299

WEIGHT: ----- 40g

MOV'T: ----- DIGITAL

MIRROR: ----- RESIN

CASE: ----- ABS

BAND: ----- PU

BUCKLE: ----- STAINLESS STEEL

W/P: ----- 50M

FUNCTION: 2time, Chrono, Alarm, Date, Week, EL, Count down, 12/24 hour clock.

TIPS: Manual measurement, If there is an error, Please prevail in kind!
Each product sold to provide quality assurance and after-sales service!




Dial Width: 43mm



Dial Thickness: 13mm



Band Width: 18mm

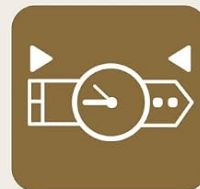

Watch Length: 265mm

Figure 5: Detailed product specifications.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your SKMEI Digital Sports Watch Model 1299 comes with a 9-month Manufacturer Warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

8.2 Customer Support

For any service-related inquiries or feedback, please contact the Skmei India Helpline:

- **Helpline Number:** 1800-889-6251
- **Operating Hours:** Monday to Saturday, 9:00 AM to 6:00 PM (IST)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question