

Crock-pot SCCPPA800-V1

Crock-Pot Express Crisp 8-Quart Pressure Cooker with Air Fryer Lid

Model: SCCPPA800-V1

INTRODUCTION

The Crock-Pot Express Crisp is an innovative 8-quart multi-cooker designed to simplify your cooking process. This versatile appliance combines the functionality of a pressure cooker, slow cooker, and air fryer, allowing you to prepare a wide variety of meals with ease and efficiency. Its unique crisper lid provides a perfect finish to your dishes, from tender meats to crispy fried foods, all in one convenient unit.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or heating base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.

- Never force open the pressure cooker. Do not open until unit has cooled and internal pressure has been released.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve for clogging before use.
- Do not use this pressure cooker for pressure frying with oil.
- This appliance is intended for household use only.

COMPONENTS AND What's INCLUDED



The main unit of the Crock-Pot Express Crisp, featuring the control panel and the primary cooking pot.



ALSO INCLUDES:

- Dishwasher-Safe, Non-Stick Cooking Pot
- Reversible Cooking Rack
- Crisping Lid Cooling Rack
- Recipe Book & More!

Included accessories: Dishwasher-Safe, Non-Stick Cooking Pot, Reversible Cooking Rack, Crisping Lid Cooling Rack, and a Recipe Book.

Key Components:

- **Main Unit:** The base of the appliance housing the heating element and control panel.
- **Pressure Cooking Lid:** For pressure cooking, slow cooking, steaming, and sautéing.
- **Crisping Lid:** A separate lid for air frying and crisping functions.
- **Removable Cooking Pot:** 8-quart capacity, non-stick, and dishwasher-safe.
- **Reversible Cooking Rack:** Used for steaming, roasting, and air frying.
- **Crisping Lid Cooling Rack:** A stand to place the hot crisping lid on after use.
- **Power Cord:** Connects the unit to an electrical outlet.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.


2. **Clean:** Before first use, wash the removable cooking pot, reversible cooking rack, and crisping lid cooling rack in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit and both lids with a damp cloth.
3. **Placement:** Place the main unit on a stable, level, heat-resistant surface, away from walls and other appliances to allow for proper ventilation. Ensure there is sufficient space above the unit for the lids.
4. **Insert Cooking Pot:** Place the removable cooking pot into the main unit. Ensure it is seated correctly and securely.
5. **Power Connection:** Connect the power cord to the appliance and then plug it into a grounded electrical outlet. The unit will beep and the display will illuminate.

OPERATING INSTRUCTIONS

The Crock-Pot Express Crisp offers 15 one-touch programs for various cooking methods. Always ensure the correct lid is used for the desired function.

15 ONE-TOUCH PROGRAMS

FOR A VARIETY OF COOKING OPTIONS

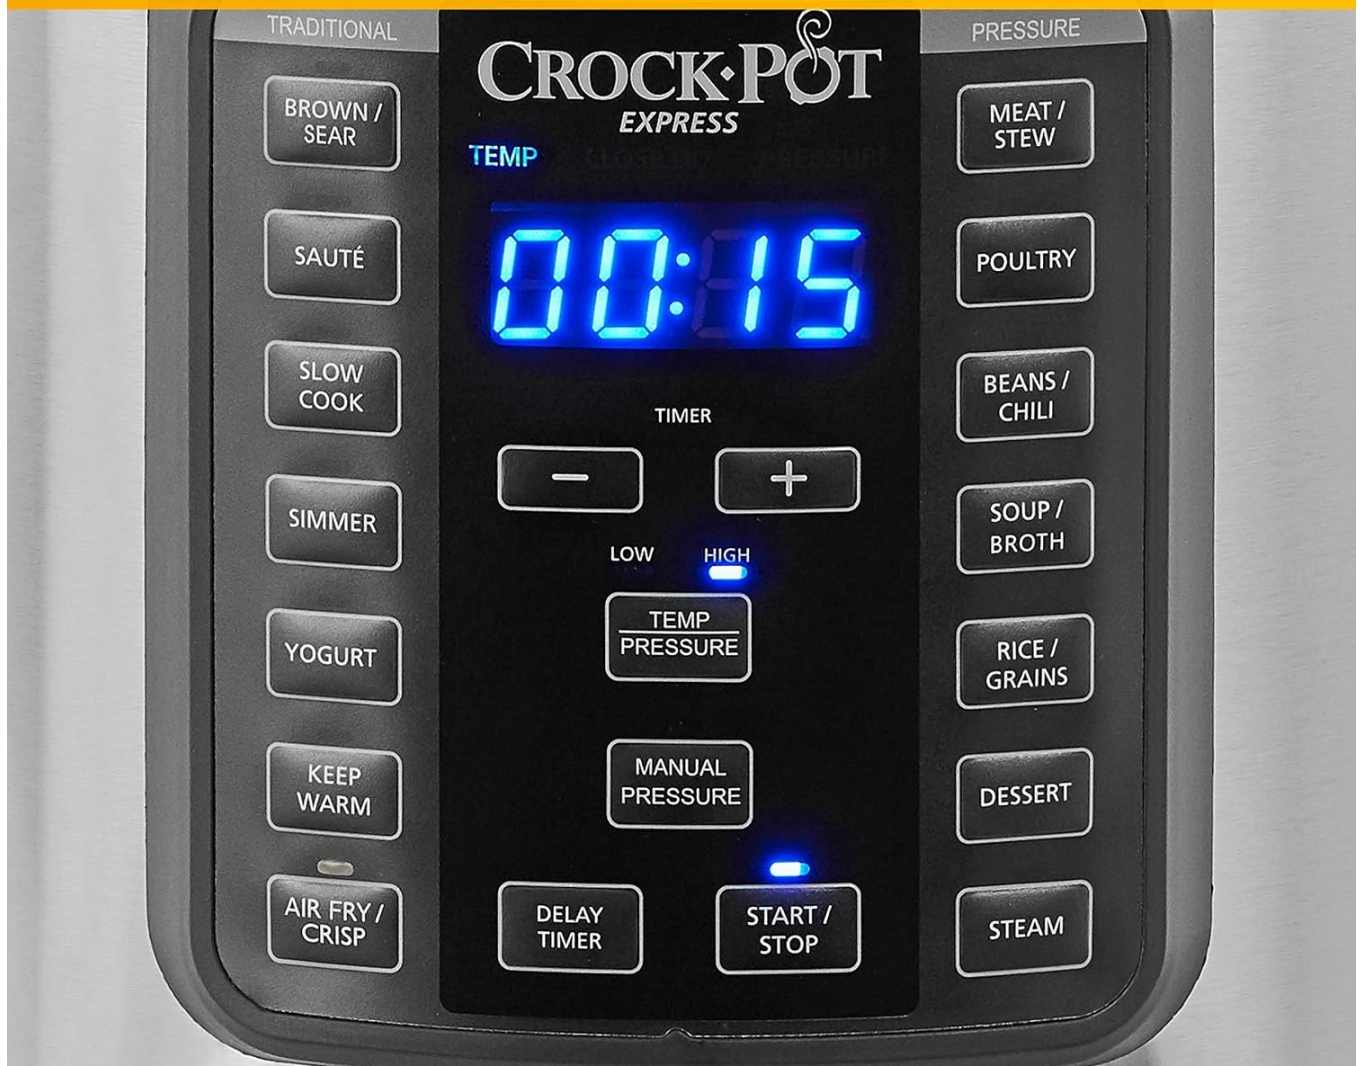

The intuitive control panel features 15 one-touch programs for diverse cooking options.



10 KITCHEN APPLIANCES IN 1

Pressure Cooker, Slow Cooker, Rice Cooker,
Sauté Pan, Steamer, Roaster, Air Fryer & More!



This appliance combines the functionality of 10 common kitchen appliances into one unit.

Pressure Cooking Functions:

Use the Pressure Cooking Lid for these functions. Ensure the lid is properly sealed and the pressure release valve is set to 'Seal'.

- **Meat/Stew:** Ideal for tenderizing tough cuts of meat and rich stews.
- **Poultry:** For cooking chicken, turkey, and other poultry quickly and thoroughly.
- **Beans/Chili:** Perfect for dried beans, lentils, and hearty chili.
- **Soup/Broth:** Prepare flavorful soups and broths in a fraction of the time.
- **Rice/Grains:** Cook various types of rice and grains to perfection.
- **Dessert:** For pressure-cooked desserts like cheesecakes and custards.
- **Manual Pressure:** Allows you to set custom pressure cooking times and levels (High/Low).
- **Steam:** For steaming vegetables, fish, and other delicate foods using the reversible rack.

Your browser does not support the video tag.

Official product video demonstrating the versatility of the Crock-Pot Express Crisp, including pressure cooking and air frying capabilities.

Traditional Cooking Functions:

These functions can be used with either the Pressure Cooking Lid (vented) or the Crisping Lid (for air frying/crisping). For slow cook, use the pressure cooking lid.

- **Brown/Sear:** For browning meats and vegetables before pressure cooking or slow cooking.
- **Sauté:** Ideal for sautéing ingredients directly in the cooking pot.
- **Slow Cook:** For traditional slow cooking, allowing flavors to meld over hours.
- **Simmer:** Maintain a gentle simmer for sauces and delicate dishes.
- **Yogurt:** Prepare homemade yogurt with ease.
- **Keep Warm:** Automatically keeps food warm after cooking is complete.

Air Frying/Crisping Function:

Use the Crisping Lid for this function. Place the reversible cooking rack in the pot for optimal air circulation.

- **Air Fry/Crisp:** Achieve crispy textures with significantly less oil. Perfect for chicken, fries, and more.

CRISPING LID

Add a crisp, oven finish to your dish!

COOK

CRISP

Transition from cooking to crisping by swapping the pressure lid for the crisping lid.

AIR FRY

WITH 99.5% LESS OIL

than Oster's 4L Deep Fryer



Enjoy healthier, crispy foods with the air frying function, using 99.5% less oil.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Crock-Pot Express Crisp.

- **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
- **Removable Pot:** The removable cooking pot is dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Lids:** The pressure cooking lid and crisping lid should be hand washed with warm, soapy water. Pay special attention to the sealing gasket and pressure release valve on the pressure lid to ensure no food particles are lodged.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
- **Accessories:** The reversible cooking rack and crisping lid cooling rack are dishwasher-safe.
- **Storage:** Store the appliance in a dry place. Ensure all parts are completely dry before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet malfunction.	Ensure power cord is securely plugged into the unit and a working outlet.
Pressure not building.	Lid not properly sealed; pressure release valve open; insufficient liquid.	Ensure lid is locked correctly. Close the pressure release valve. Add more liquid if necessary.
Food not crisping (Air Fry).	Overcrowding; insufficient cooking time/temperature.	Cook in smaller batches. Increase cooking time or temperature. Ensure food is placed on the rack for air circulation.
Error codes on display.	Specific internal issue.	Refer to the full user manual for specific error code meanings and solutions. If persistent, contact customer support.

SPECIFICATIONS

Brand: Crock-pot

Model: SCCPPA800-V1

Capacity: 8 Quarts

Material: Stainless Steel

Color: Stainless Steel

Finish Type: Chrome, Matte

Product Dimensions: 15.75"D x 15.75"W x 21.58"H

Special Feature: Programmable

Wattage: 1500 watts

Control Method: Touch

Controller Type: Push Button

Operation Mode: Automatic

Is Dishwasher Safe: Yes (Removable Pot and Racks)

Voltage: 220 Volts

Closure Type: Outer Lid

Item Weight: 26.2 pounds

Manufacturer: Crock-pot

UPC: 053891134583

Date First Available: February 14, 2020

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Crock-Pot website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: [Visit the Crock-Pot Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question