

[Manuals.plus](#) /

› [GoWISE](#) /

› GoWISE USA GW22954 7-Quart Electric Air Fryer Instruction Manual

GoWISE GW22954

GoWISE USA GW22954 7-Quart Electric Air Fryer Instruction Manual

Model: GW22954 | Brand: GoWISE USA

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your GoWISE USA 7-Quart Electric Air Fryer. Please read all instructions carefully before first use and retain this manual for future reference.

The GoWISE USA 7-quart digital touchscreen air fryer offers versatile cooking with 8 preset functions: Air Fry, Roast, Broil, Dehydrate, Grill, Bake, Reheat, and Keep Warm. Its large one-touch menu screen simplifies operation. The appliance features an extended cook time up to 60 minutes (or 24 hours for dehydrate) and includes a non-stick coated pan and crisper tray for easy cleanup. It comes with 3 stackable racks, enhancing its dehydrating capabilities.



Figure 1: GoWISE USA GW22954 7-Quart Electric Air Fryer, Mint/Silver.

PRODUCT COMPONENTS

Familiarize yourself with the main components of your air fryer:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Removable Basket:** The primary cooking chamber.

- **Crisper Tray:** Sits inside the basket, allowing air circulation around food.
- **Digital Touchscreen Control Panel:** For selecting functions, setting time and temperature.
- **Stackable Racks (3):** Used for dehydrating and multi-layer cooking.



Figure 2: Air fryer with the cooking basket removed, showing the interior cavity.



Figure 3: The removable cooking basket with the crisper tray inserted.

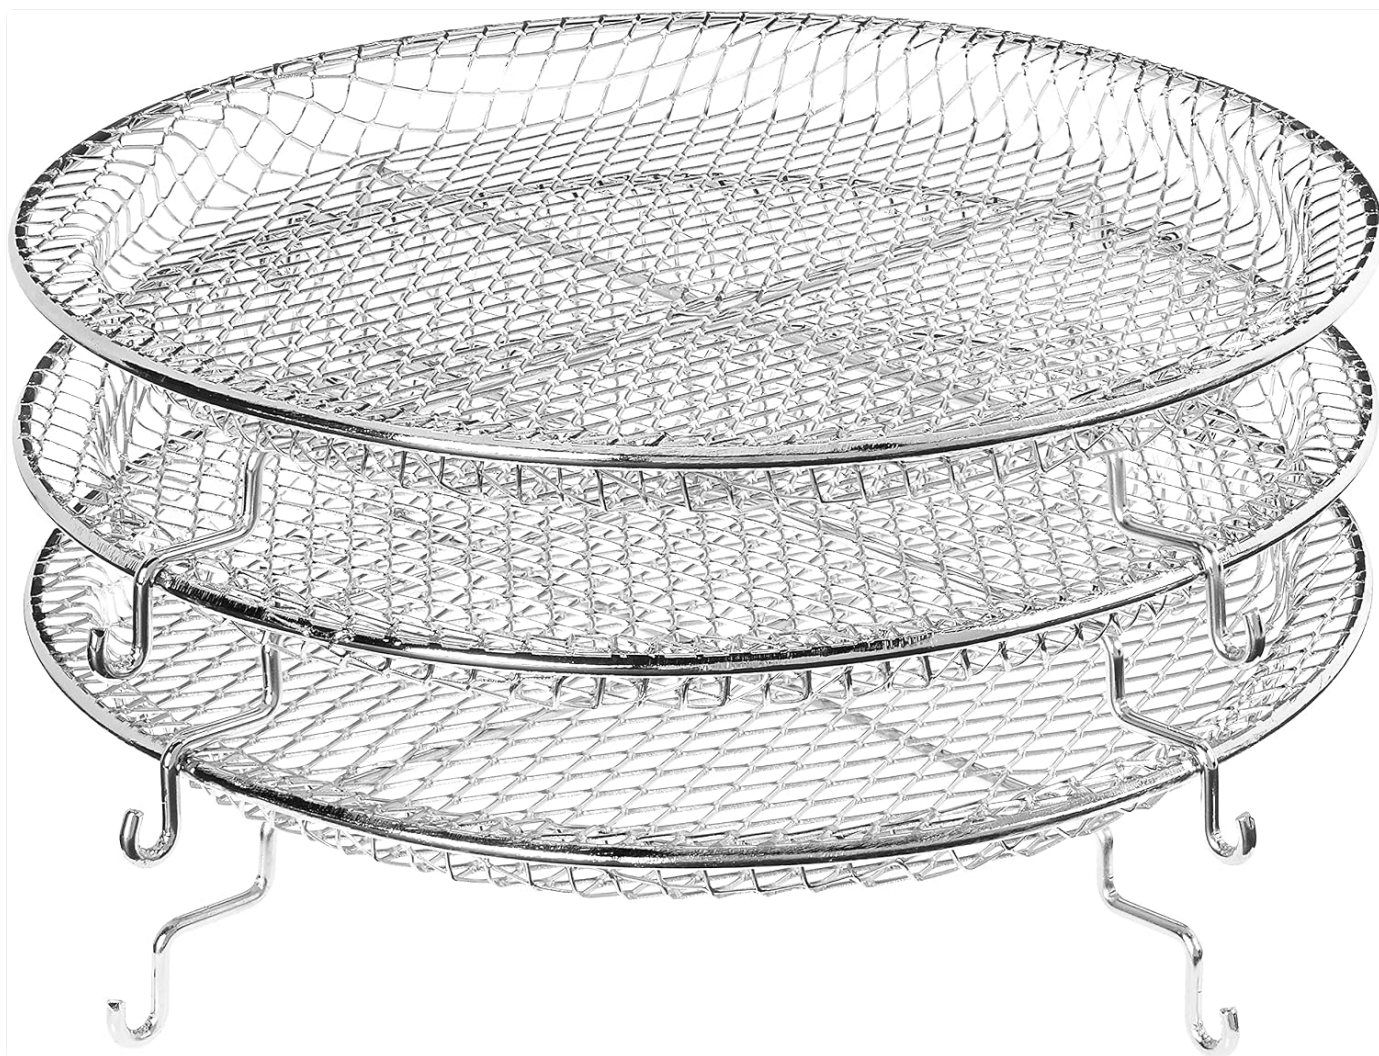


Figure 4: The three stackable racks included for dehydrating and multi-layer cooking.



Figure 5: Detailed view of the digital touchscreen control panel with various function icons.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow proper air circulation.
- Do not block any ventilation openings.
- Keep hands and face away from the hot air vents when operating.
- Unplug from outlet when not in use and before cleaning. Allow to cool before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Wash the removable basket, crisper tray, and stackable racks with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of clearance around the back and sides of the unit for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Your GoWISE USA Air Fryer features a digital touchscreen for easy operation.

Basic Operation:

1. Place the crisper tray inside the removable basket.
2. Place your food into the basket. Do not overfill.
3. Slide the basket back into the main unit until it clicks into place.
4. Press the Power button to turn on the unit.
5. Select one of the 8 preset cooking functions (Air Fry, Roast, Broil, Dehydrate, Grill, Bake, Reheat, Keep Warm) by touching the corresponding icon on the touchscreen.
6. Adjust the temperature (180°F to 400°F, in 5°F increments) and time (up to 60 minutes, or 24 hours for Dehydrate) using the arrow icons.
7. Press the Start/Pause button to begin cooking.
8. The air fryer will automatically shut off when the timer reaches zero.

Using the Dehydrator Function:

The built-in dehydrate function operates within a temperature range of 90°F to 170°F and a timer from 2-24 hours. Utilize the 3 stackable racks to prepare multiple servings of dried fruits, vegetables, beef jerky, or herbs.

Cooking Tips:

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Shake the basket or flip food halfway through cooking for even crisping.
- A light coating of oil can enhance crispiness for some foods.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Basket and Crisper Tray:** The removable pan and crisper tray are coated with PFOA-free non-stick material. They are dishwasher safe, but hand washing is recommended to preserve the non-stick coating. Use a soft sponge and warm, soapy water. Avoid abrasive cleaners or scouring pads.
3. **Stackable Racks:** Wash with warm, soapy water and a soft brush if needed.
4. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Interior:** If necessary, gently wipe the interior of the air fryer with a damp cloth. Ensure no food particles are left around the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure plug is securely in outlet. Check circuit breaker. Push basket firmly until it clicks into place.
Food is not cooked evenly.	Basket overcrowded; food not shaken/flipped.	Cook in smaller batches. Shake or flip food halfway through cooking.
Food is not crispy.	Not enough oil (for some foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke coming from unit.	Grease residue from previous use; high-fat food.	Clean basket and crisper tray thoroughly. For high-fat foods, drain excess fat during cooking.

SPECIFICATIONS

Key technical specifications for the GoWISE USA GW22954 Air Fryer:

- Model Name:** GW22954
- Capacity:** 7 Quarts
- Color:** Mint/Silver
- Product Dimensions:** 11.75"D x 11.75"W x 14"H
- Item Weight:** 17.41 pounds
- Material:** Ceramic (non-stick coating)
- Output Wattage:** 1700 Watts
- Voltage:** 110 Volts
- Control Method:** Touchscreen
- Special Features:** Manual, Programmable, Dehydrator Function
- Nonstick Coating:** Yes
- Dishwasher Safe Parts:** Basket and Crisper Tray (Hand Wash Recommended)
- UL Listed:** Yes
- FDA Compliant:** Yes



Figure 6: Product dimensions of the GoWISE USA GW22954 Air Fryer.

WARRANTY AND SUPPORT

All GoWISE USA products are backed by a 30-day money-back guarantee and a 1-year warranty. Registered products receive an additional 60 days of warranty coverage. For any questions, concerns, or support needs, please contact GoWISE customer care.

While there are videos associated with this product, no official seller-provided video content with direct embeddable URLs was available in the product data for inclusion in this manual.

ADDITIONAL RESOURCES

For a downloadable PDF version of the user manual, please visit the following link:

[Download User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question