

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [DASH](#) /
- > [Dash DFAF600GBSS01-RB Aircrisp Pro Digital Air Fryer 6QT. Instruction Manual](#)

DASH DFAF600GBSS01-RB

Dash Aircrisp Pro Digital Air Fryer 6QT. (Model: DFAF600GBSS01-RB) Instruction Manual

1. INTRODUCTION

Thank you for choosing the Dash Aircrisp Pro Digital Air Fryer. This appliance utilizes AirCrisp technology to circulate hot air, allowing you to cook a variety of foods with significantly less oil compared to traditional frying methods. This manual provides essential information for safe operation, maintenance, and optimal performance of your air fryer.



Image 1: Dash Aircrisp Pro Digital Air Fryer showing its dimensions (12.5"D x 15"W x 15"H). The air fryer is stainless steel with a black digital display on top and a pull-out basket at the bottom, filled with food. Various fried foods like fries and onion rings are visible around the unit.

AirCrisp Technology

The AirCrisp technology circulates hot air rapidly around your food, ensuring even cooking and a crispy finish with up to 70-80% less added fat. This method provides a healthier alternative to deep-frying without compromising on taste or texture.



Image 2: A diagram illustrating AirCrisp Technology. Blue arrows indicate hot air circulating from the top and red arrows show hot air circulating from the bottom around food in the air fryer basket. Text highlights instant heating, powerful air circulation, and a removable nonstick basket.

Benefits of Air Frying

- **Healthier Meals:** Reduces the need for excessive oil, lowering fat content.
- **Faster Cooking:** Heats instantly and cooks food efficiently.
- **Crispy Results:** Achieves a desirable crispy texture similar to deep-frying.
- **Easy Cleanup:** Features a nonstick, dishwasher-safe fryer basket.

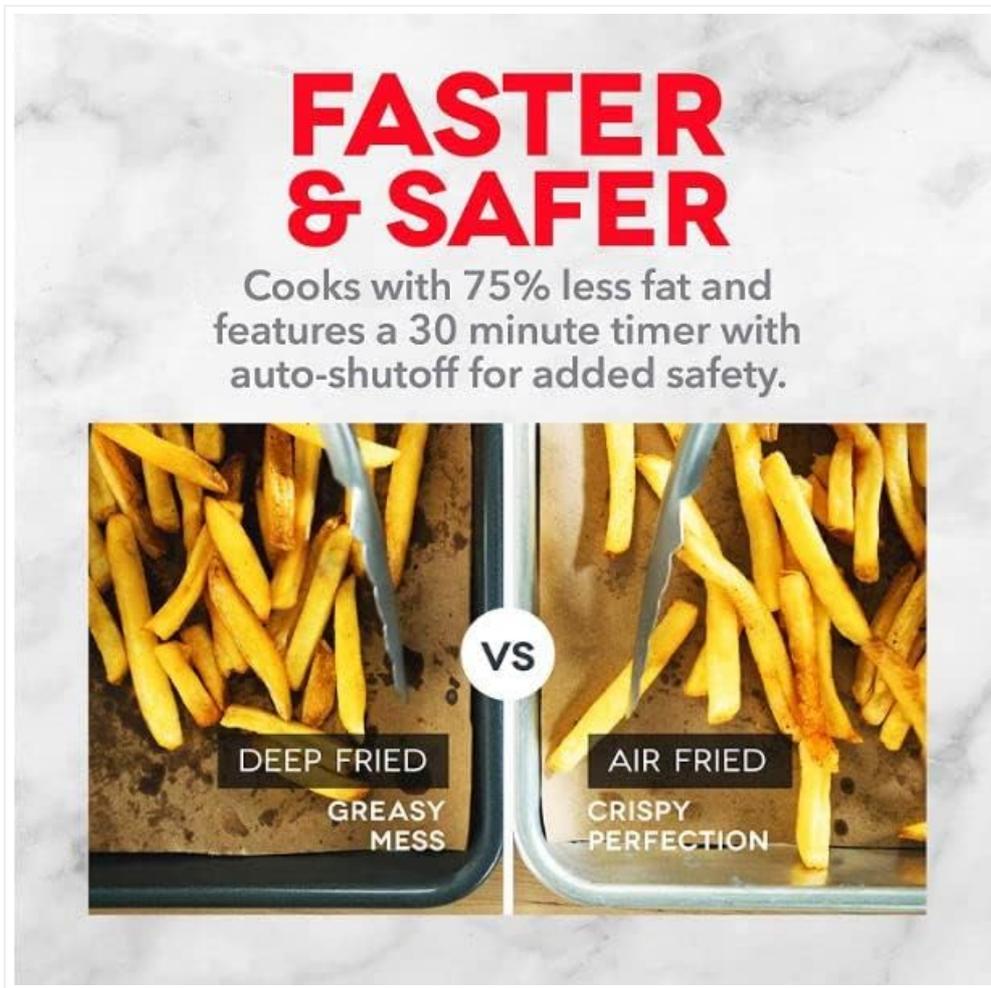


Image 3: A side-by-side comparison showing 'Deep Fried' food (greasy mess) next to 'Air Fried' food (crispy perfection), illustrating the healthier outcome of air frying.

2. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Dash Aircrisp Pro Digital Air Fryer. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The auto-shut off function prevents overcooking and enhances safety.
- The cool-touch housing and handle ensure safer operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your air fryer:

- **Main Unit Housing:** The exterior body of the air fryer, made of stainless steel.
- **Digital Control Panel:** Located on the top, featuring a touch interface for settings and presets.
- **Fryer Basket:** Removable, nonstick basket with a handle for holding food during cooking.
- **Air Inlet/Outlet:** Vents for air circulation (do not block).

4. SETUP AND FIRST USE

Unpacking

1. Remove all packaging materials, stickers, and labels from the air fryer.
2. Check that all components are present and undamaged.

Placement

- Place the air fryer on a stable, heat-resistant surface.
- Ensure there is adequate space (at least 6 inches) around the appliance for proper air circulation.
- Do not place the air fryer directly against a wall or under cabinets.

Initial Cleaning

1. Wash the fryer basket and any removable accessories in warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the interior and exterior of the main unit with a damp cloth.
3. Do not immerse the main unit in water or any other liquid.

5. OPERATING INSTRUCTIONS

Digital Control Panel

The air fryer features an intuitive digital display with touch controls for easy operation.



Image 4: Close-up of the digital display panel. It shows a central temperature reading (e.g., 400°F) and various icons around it representing 8 presets (Steak, Chicken, Baked Goods, Pizza, Fresh Fries, Fish, Seafood, Frozen Fries) and manual controls for temperature and time.

Basic Operation

1. **Prepare Food:** Place your desired food items into the fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the fryer basket firmly into the main unit.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The digital display will illuminate.
4. **Select Cooking Method:**
 - **Using Presets:** Touch the icon corresponding to your desired food (e.g., Steak, Chicken, Fresh Fries, Fish, Seafood, Frozen Fries, Baked Goods, Pizza). The air fryer will automatically set the optimal temperature and time.
 - **Manual Setting:** Touch the 'Manual Temp' icon to adjust the temperature and 'Manual Time' icon to set the cooking duration. Use the '+' and '-' buttons to modify values.
5. **Start Cooking:** Press the 'Power/Start' button to begin the cooking cycle.
6. **Monitor & Shake (Optional):** For best results, especially with items like fries or chicken wings, you may need to pull out the basket and shake the contents halfway through cooking. The air fryer will pause when the basket is removed and resume when reinserted.
7. **Completion:** The air fryer will beep when the cooking cycle is complete and automatically shut off. Carefully remove the basket using the cool-touch handle.
8. **Serve:** Transfer food to a serving dish. Be cautious of hot oil or juices.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

Before Cleaning

1. Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

Cleaning the Fryer Basket

- The nonstick fryer basket is dishwasher safe for convenient cleaning.
- Alternatively, wash the basket in warm, soapy water using a non-abrasive sponge.
- For stubborn food residue, soak the basket in warm water for 10-15 minutes before cleaning.

Cleaning the Main Unit

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the interior with a damp cloth and mild detergent if necessary. Ensure no water enters the electrical components.
- Never immerse the main unit in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded electrical outlet.
Food is not cooked evenly.	Basket is overfilled.	Do not overfill the basket. Cook in smaller batches if necessary. Shake the basket halfway through cooking.
Food is not crispy.	Insufficient cooking time or temperature.	Increase cooking time or temperature. Ensure a light coating of oil is applied to some foods for extra crispiness.
White smoke comes from the appliance.	Grease residue from previous use or fatty food.	Clean the basket and interior thoroughly after each use. For very fatty foods, drain excess fat during cooking.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.

8. SPECIFICATIONS

Feature	Specification
Model Number	DFAF600GBSS01-RB

Feature	Specification
Capacity	6 Quart (5.68 Liters)
Wattage	1700 Watts
Product Dimensions (D x W x H)	12.5" x 15" x 15"
Material	Stainless Steel
Control Method	Touch (Digital Display)
Special Feature	Programmable
Nonstick Coating	Yes
Dishwasher Safe Parts	Fryer Basket
Item Weight	18.26 pounds
UPC / GTIN	753575482893

9. WARRANTY AND SUPPORT

Manufacturer's Warranty

This Dash Aircrisp Pro Digital Air Fryer is backed by a 1-year manufacturer's warranty. Please refer to the warranty documentation included with your purchase for specific terms and conditions.

Recipe Guide

Your air fryer comes with a recipe guide companion cookbook featuring 15+ recipes. Additionally, access to a recipe database is provided to help you explore a wide range of dishes beyond traditional fries.