

CHEREKI 8808

CHEREKI Digital Alarm Clock User Manual

Model: 8808

INTRODUCTION

Thank you for purchasing the CHEREKI Digital Alarm Clock. This manual provides detailed instructions on how to set up, operate, and maintain your new alarm clock. Please read this manual carefully before use to ensure optimal performance and longevity of the product.



Image: Front view of the CHEREKI Digital Alarm Clock displaying time and temperature.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- 1 x LED Digital Alarm Clock
- 1 x USB Cable (adapter not included)
- 1 x User Manual

Note: The alarm clock contains a built-in Lithium-polymer battery.

SETUP

Powering the Device

The CHEREEKI Digital Alarm Clock offers two power modes:

1. **USB Power (Recommended for continuous display):**

Connect the alarm clock to a USB port or a 5V/1A or 5V/2A adapter using the provided USB cable. In this mode, the LED display will remain continuously on.



How to Charge



Image: Illustrations demonstrating connection to a USB port and a 5V/1A or 5V/2A adapter for continuous power.

2. **Built-in Battery Power:**

When fully charged, the alarm clock can operate on its internal battery. In this mode, the LED display will automatically turn off after 6 seconds to conserve power. The display can be reactivated by sound (above 90 dB) or by pressing any button.

Intelligent Voice Control Function

Running with the battery, the display will be off after 6s



Ambient sound $\geq 90\text{dB}$, the display can be awakened



Connecting to the power, the display is always on



Image: Visual representation of the intelligent voice control function, where the display turns off after 6 seconds in battery mode and can be awakened by sound.

Initial Setup

Upon first use or after a reset, you may need to set the time and other preferences.



Image: Detailed view of the alarm clock's top and bottom panels, highlighting buttons for time setting, alarm setting, volume, and switches for alarms.

OPERATING INSTRUCTIONS

Setting the Time

- In normal time display mode, press the **"TIME SET"** button located on the bottom of the clock.
- Use the **"UP"** and **"DOWN"** buttons to adjust the hour.
- Press **"TIME SET"** again to move to minute adjustment, then use **"UP"** and **"DOWN"**.
- Press **"TIME SET"** one more time to confirm and exit.
- The clock supports both 12-hour (with AM/PM indicator) and 24-hour formats. To switch, press the **"UP"** button during time setting.



Image: Illustration of the alarm clock displaying time in both 12-hour and 24-hour formats.

Setting Alarms (Alarm 1 & Alarm 2)

The clock features two independent alarms.

- To set Alarm 1: Press the **"ALARM SET"** button once. The Alarm 1 icon will flash.
- Use **"UP"** and **"DOWN"** to set the hour, then press **"ALARM SET"** to move to minutes.
- Repeat for minutes, then press **"ALARM SET"** to confirm.
- To set Alarm 2: Press the **"ALARM SET"** button twice. The Alarm 2 icon will flash. Follow the same steps as Alarm 1.
- To activate/deactivate an alarm: In normal time display mode, press the **"Alarm 1 Switch"** or **"Alarm 2 Switch"** on the bottom of the clock. The corresponding alarm icon will appear/disappear on the display.

Dual Alarms with 5-Minute Snooze Time



Image: A visual demonstrating the dual alarm functionality with different wake-up times and the snooze feature.

Snooze Function

- When an alarm sounds, press the large **"SNOOZE / LIGHT"** button on top of the clock to activate the 5-minute snooze function.
- The alarm will sound again after 5 minutes.
- To turn off the alarm completely, press any other button on the clock.



Image: A user enjoying extra sleep thanks to the 5-minute snooze feature.

Brightness Adjustment

The clock offers both automatic and manual brightness control:

- **Automatic Brightness (when USB powered):** The display brightness adjusts automatically based on the time of day:
 - 7:00 AM - 7:00 PM: High brightness
 - 7:00 PM - 12:00 AM: Medium brightness
 - 12:00 AM - 7:00 AM: Low brightness
- **Manual Brightness:** In any mode, press the **"SNOOZE / LIGHT"** button on top of the clock to cycle through 4 levels of brightness (25%, 50%, 75%, 100%).

4 Levels of Brightness Adjustable

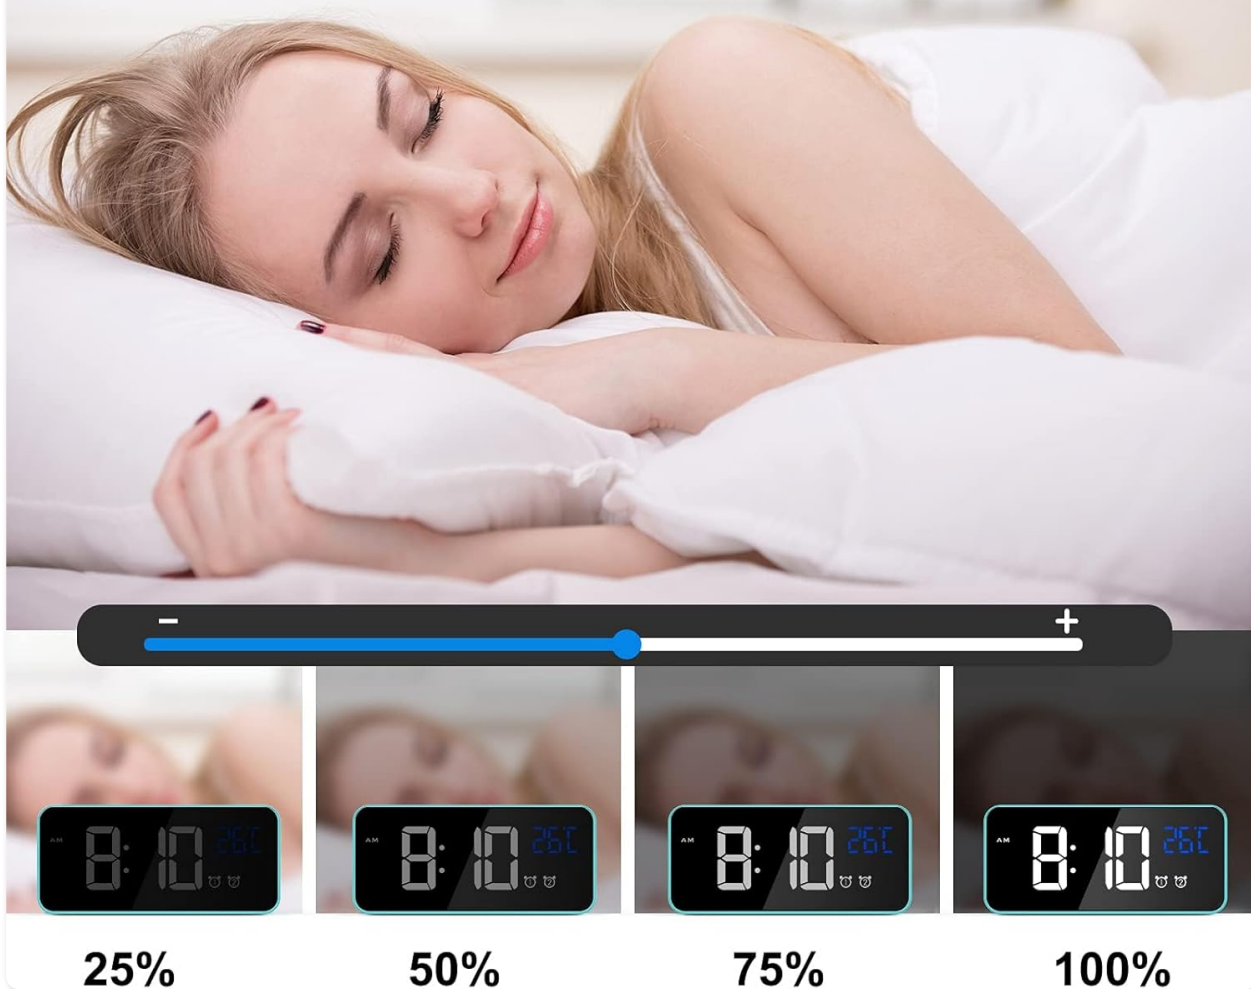


Image: Visual representation of the four adjustable brightness levels of the LED display.

Volume and Ringtones

The alarm clock features 3 volume levels and 10 different ringtones.

- To adjust volume: During alarm setting, or when an alarm is sounding, press the **"Volume"** button on the bottom of the clock to cycle through the 3 volume levels.
- To change ringtone: During alarm setting, press the **"UP"** or **"DOWN"** buttons when the ringtone selection is active (after setting time and minutes for the alarm).

10 Natural Sounds



Crowing



Bird calling



Waves



Alarm clock



Telephone



4 Selectable Volume

L01      

L02     

L03    

L04   

Image: A user waking up to one of the 10 natural sounds, with an illustration of the four selectable volume levels.

Temperature Display

- The clock displays the ambient temperature in Celsius (°C) by default.
- To switch between Celsius (°C) and Fahrenheit (°F), press the **"DOWN"** button in normal time display mode.



Image: Illustration of the temperature display switching between Celsius and Fahrenheit.

Alarm Clock Function



Dual Alarms




Temperature (°C)



12/24 Hour



Sound Activated



Volume Adjustable



Snooze



Brightness Adjustable



10 Ringtones



Image: An infographic highlighting the key functions of the alarm clock, including dual alarms, temperature display, 12/24 hour format, sound activation, volume adjustment, snooze, brightness adjustment, and 10 ringtones.

- **Dual Power Modes:** Operates via USB for continuous display or built-in battery for portable use with voice activation.
- **Adjustable Brightness:** 4 manual levels and automatic adjustment when USB powered.
- **Dual Alarms with Snooze:** Set two independent alarms with a convenient 5-minute snooze function.
- **Customizable Sound:** Choose from 3 volume levels and 10 unique ringtones.
- **Voice Activation:** In battery mode, the display activates for 6 seconds when sound exceeds 90 dB.
- **Temperature Display:** Shows ambient temperature in Celsius or Fahrenheit.
- **Memory Function:** Settings are retained even if power is lost or the clock is turned off and on again.

Memory Function

No need to reset the clock when the battery is restored
or the clock is turned on again

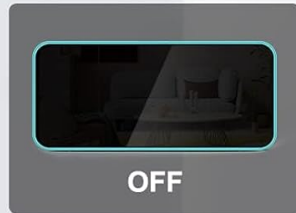


Image: A visual explanation of the memory function, showing that settings are retained even after power loss or restart.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the alarm clock. Do not use abrasive cleaners or solvents.
- **Environment:** Keep the alarm clock away from heat sources, direct sunlight, and high humidity environments.
- **Storage:** If the alarm clock will not be used for an extended period, turn off the power switch to preserve battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or scrambled.	Low battery, power issue, or internal error.	Connect to USB power. If the issue persists, use a pin to press the "RESET" button on the bottom of the clock.
Display turns off after 6 seconds.	Clock is operating on battery power.	This is normal behavior to conserve battery. Connect to USB power for a continuously lit display.
Alarm does not sound.	Alarm is not activated or volume is too low.	Ensure the alarm switch (Alarm 1 or Alarm 2) is in the "ON" position. Check and adjust the alarm volume.
Time/settings are lost after power off.	This should not happen due to memory function.	Ensure the internal battery is charged. If the issue persists, perform a reset.

SPECIFICATIONS

Feature	Detail
Brand	CHEREEDI
Model Number	8808
Color	Blue
Dimensions (L x W x H)	14.5 x 6.5 x 3 cm (5.71 x 2.56 x 1.18 inches)
Weight	158 grams (0.35 lbs)
Material	Plastic
Display Type	Digital LED
Power Source	USB Cable / Built-in Lithium-polymer Battery
Special Features	Temperature Display, Snooze Function, Dual Alarms, Voice Activation, Adjustable Brightness, 10 Ringtones

WARRANTY AND SUPPORT

CHEREEDI is committed to providing high-quality products and excellent customer service. If you have any questions or encounter issues with your alarm clock, please do not hesitate to contact our customer support team. We are dedicated to providing attentive after-sales service.

For support, please refer to the contact information provided with your purchase or visit the official CHEREEDI website.

