

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HOUSBAY](#) /

> [HOUSBAY Glow Small Alarm Clock Radio Instruction Manual \(Model RS1 W\)](#)

## HOUSBAY RS1 W

# HOUSBAY Glow Small Alarm Clock Radio Instruction Manual

Model: RS1 W

## PRODUCT OVERVIEW

The HOUSBAY Glow Small Alarm Clock Radio (Model RS1 W) is a versatile device combining an alarm clock, night light, and FM radio. It features customizable settings for light, sound, and display, designed for ease of use in bedrooms. Key functionalities include dual alarms with multiple wake-up sounds, a 7-color night light with adjustable brightness, an FM radio with an auto-off timer, a nap timer, a variable display dimmer, and a convenient USB charging port.

## PACKAGE CONTENTS

- HOUSBAY Glow Small Alarm Clock Radio
- Power Adapter
- User Manual

## SETUP

### Powering the Device

The HOUSBAY Glow alarm clock is primarily powered by the included DC 5V power adapter. Connect the adapter to the DC IN port on the back of the unit and plug it into a standard wall outlet.

### Battery Backup

For uninterrupted operation during power outages, install 3 AAA batteries (not included) into the battery compartment located on the bottom of the unit. The battery backup ensures that time settings and alarms remain functional.



## Bedtime- Friendly Picks

Set the perfect mood lighting,  
plus a radio for bedtime music every night

Image: The HOUSBAY Glow Alarm Clock shown with its power adapter and a set of AAA batteries, highlighting the battery backup feature. Batteries are not included with the product.

### Initial Time Setting

After connecting power, the display will show a blinking time. Press and hold the "TIME SET" button on the top of the clock to enter time setting mode. Use the forward/backward buttons to adjust hours and minutes. Press "TIME SET" again to confirm.

### 12H/24H Time Format

To switch between 12-hour and 24-hour time formats, press the "12H/24H" button on the back of the unit.

## OPERATING INSTRUCTIONS

### Setting Alarms (Dual Alarms)

The clock features two independent alarms (Alarm 1 and Alarm 2).

1. Press and hold the "Alarm 1" or "Alarm 2" button on the top panel. The alarm time will begin to flash.
2. Use the forward/backward buttons to adjust the desired alarm time.
3. Press the "Alarm 1" or "Alarm 2" button again to select the wake-up sound: FM Radio, Beep, or Birds Chirping.

4. Press the "Alarm 1" or "Alarm 2" button one more time to confirm and activate the alarm. An alarm icon will appear on the display.
5. To deactivate an alarm, press the corresponding "Alarm 1" or "Alarm 2" button until the alarm icon disappears from the display.

## Night Light Function

The night light offers 7 color options and 5 brightness levels.

1. Press the "SNOOZE LIGHT" button on the top to cycle through the 7 available colors.
2. To turn off the night light, press and hold the "SNOOZE LIGHT" button.
3. Adjust the night light brightness using the "NIGHTLIGHT DIMMER" button on the back of the unit.



## 7 Night Light Colors



Turn ON/OFF  
Options



5 Brightness  
Options



0-120 Mins  
Timer

Image: The HOUSBAY Glow Alarm Clock showcasing its 7 distinct night light colors, along with options for turning it on/off, 5 brightness levels, and a 0-120 minute timer.

## FM Radio Operation

The clock includes an FM radio with an auto-off timer.

1. Press the "Radio" button (icon resembling a radio) on the top panel to turn the FM radio on or off.
2. Use the forward/backward buttons to tune to desired FM stations.
3. Adjust the radio volume using the volume up/down buttons. The radio offers 0-16 volume levels.
4. To scan and store radio stations, hold the "Radio" button for 2 seconds.

# FM Radio with Auto-Off Timer

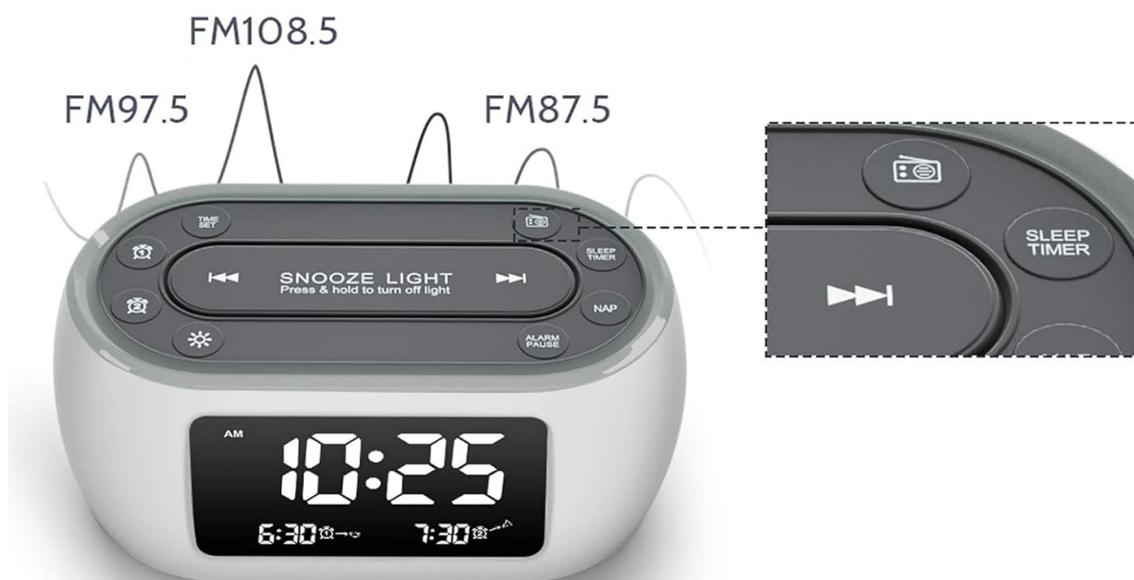


Image: The HOUSBAY Glow Alarm Clock with FM radio frequencies (87.5-108.0 MHz) indicated, along with controls for radio volume (0-16 levels) and a sleep timer (0-120 minutes).

## Sleep Timer

The sleep timer allows you to listen to the FM radio or use the night light for a set duration before automatically turning off.

1. Press the "SLEEP TIMER" button on the top panel to activate the sleep timer.
2. Repeatedly press the "SLEEP TIMER" button to cycle through available durations (e.g., 10, 30, 60, 90, 120 minutes).
3. The radio/night light will automatically turn off after the selected time.

## Nap Timer

The nap timer provides a quick way to set a short alarm without affecting your main alarm settings.

1. Press the "NAP" button on the top panel.
2. Repeatedly press the "NAP" button to cycle through nap durations (e.g., 10, 30, 60, 90, 120 minutes).
3. The nap alarm will sound after the selected time.

## Display Dimmer

Adjust the brightness of the main time display using the "DISPLAY DIMMER" slider on the back of the unit. This allows for a brightness range from 0% (off) to 100% (brightest).

# Real Battery Backup

keep fully functional while running off power



Image: The HOUSBAY Glow Alarm Clock illustrating the 0-100% display dimmer functionality, allowing users to find their preferred brightness level.

## USB Charging Port

The clock features a USB port on the back for convenient charging of external electronic devices.

## Display Dimmer 0-100%



Find Your **"JUST RIGHT"** Brightness



## Nightlight Dimmer 0-100%

Image: The HOUSBAY Glow Alarm Clock with a smartphone connected to its USB port, demonstrating the device's ability to charge other electronic devices.

## MEDIA INTEGRATION

### Official Product Video

Your browser does not support the video tag.

Video: An official HOUSBAY video demonstrating the HOUSBAY alarm clock radio with its 7-color nightlight feature.

## MAINTENANCE

To maintain your HOUSBAY Glow Alarm Clock Radio, regularly wipe the exterior with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Ensure the device is unplugged before cleaning.

## TROUBLESHOOTING

### No Display/Power

- Check if the power adapter is securely plugged into both the clock and the wall outlet.
- Ensure the wall outlet is functional.
- If using battery backup, verify that the AAA batteries are correctly installed and not depleted.

## Alarm Not Sounding

- Confirm that the desired alarm (Alarm 1 or Alarm 2) is activated and its icon is visible on the display.
- Check the alarm volume setting.
- Ensure the alarm time is correctly set for AM/PM.

## Radio Reception Poor

- Fully extend the radio antenna located on the back of the unit.
- Try repositioning the clock to improve signal reception.
- Perform an automatic scan to store available stations.

## SPECIFICATIONS

Feature	Specification
Brand	HOUSBAY
Model Number	RS1 W
Display Type	LED full-array
Power Source	DC 5V (Corded)
Battery Backup	3 AAA batteries required (not included)
Night Light Colors	7
Night Light Brightness	5 levels
Display Dimmer	0-100%
FM Radio Frequency	87.5-108.0 MHz
USB Charging Port	Yes
Product Dimensions	6"W x 4"H
Item Weight	11.3 ounces

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official HOUSBAY website. Keep your purchase receipt for warranty claims.