

Ultrean TXG-AFT07501

Ultrean 8 Quart Air Fryer Instruction Manual

Model: TXG-AFT07501

1. IMPORTANT SAFETY INSTRUCTIONS

Before using your Ultrean Air Fryer, please read all instructions carefully and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local power supply. Do not immerse the cord, plug, or the appliance housing in water or other liquids.
- **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow adequate air circulation. Do not place near flammable materials.
- **Hot Surfaces:** The appliance surfaces become hot during use. Use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Ventilation:** Do not block any ventilation openings. Hot air is released through the air outlet opening. Keep your hands and face at a safe distance from the openings.
- **Food Quantity:** Do not overfill the basket. Ensure food does not touch the heating element.
- **Maintenance:** Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or cleaning.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

2. PRODUCT OVERVIEW

The Ultrean 8 Quart Air Fryer uses 360-degree rapid air circulation technology to cook food with significantly less oil, offering a healthier alternative to traditional frying. It features an intuitive LCD digital touch screen and multiple preset cooking functions.



Image: Front view of the Ultrean 8 Quart Air Fryer, showcasing its black and stainless steel design with a digital display.

Key Features:

- **8-Quart Capacity:** Large cooking capacity suitable for family meals.
- **360° Rapid Air Frying Technology:** Ensures even cooking and crispy results with up to 80% less fat.
- **LCD Digital Touch Screen:** Easy-to-use interface for setting time, temperature, and selecting presets.
- **8 Preset Cooking Functions:** Includes French Fries, Shrimp, Roast, Chicken, Fish, Steak, Cheese Melts, and Bacon.
- **Adjustable Temperature:** Range from 180°F to 400°F.
- **Adjustable Timer:** Up to 60 minutes with auto shut-off.
- **Nonstick Frying Pot:** Detachable for easy cleaning.
- **ETL Certified:** Ensures product safety and quality.



EXTRA-LARGE COOKING CAPACITY

Perfect for family meals (at least **6-8** people)
with the 8-qt frying capacity



Image: The Ultrean Air Fryer with its basket pulled out, showing its large capacity, suitable for cooking for multiple people.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove all packaging materials from the air fryer.
2. Remove any stickers or labels from the appliance.
3. Check that all components are present: Air Fryer unit, Frying Basket, Crisper Tray, User Manual, and Recipe Cookbook.



PACKAGE CONTENT

- 1×8 quart Air Fryer
- 1×Recipe Cookbook
- 1×User Manual
- 1×Tray

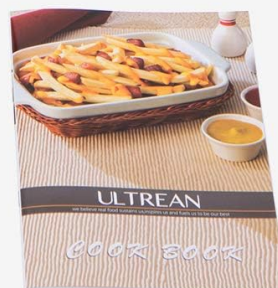


Image: Contents of the Ultrean Air Fryer package, including the main unit, crisper tray, user manual, and recipe book.

Before First Use:

1. Wipe the exterior of the air fryer with a damp cloth.
2. Clean the frying basket and crisper tray thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
3. Place the crisper tray inside the frying basket.
4. Insert the frying basket back into the air fryer unit.
5. It is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) to eliminate any manufacturing odors. A slight odor may be present during this initial use, which is normal.

4. OPERATING INSTRUCTIONS

The Ultrean Air Fryer features an intuitive digital touch screen for easy operation.

CUSTOMIZED TIME/TEMP

Comes with customizable time & temp settings that allows you to cook your own recipe



Temp Range
180°F-400°F



Mode
Switch Presets



Time Range
1-60 Minutes



Preheat
On/Off



Image: Close-up of the Ultrean Air Fryer's digital control panel, showing temperature, time, and various function icons.

Control Panel Functions:

- **Power Button (P):** Turns the unit on/off and starts/pauses cooking.
- **Temperature Control (+/-):** Adjusts temperature from 180°F to 400°F.
- **Time Control (+/-):** Adjusts cooking time from 1 to 60 minutes.
- **Mode Button (M):** Cycles through the 8 preset cooking functions.
- **Preheat Button:** Activates the preheat function.

General Operation:

1. **Preparation:** Place the air fryer on a stable, level, heat-resistant surface. Plug the power cord into a grounded electrical outlet.
2. **Preheating (Optional):** Press the power button, then press the preheat button. Adjust temperature if needed, then press power to start preheating. The unit will beep when preheating is complete.
3. **Load Food:** Carefully pull out the frying basket. Place ingredients into the basket, ensuring not to overfill. Slide the basket back into the air fryer until it clicks into place.
4. **Set Time and Temperature:**

- **Manual Setting:** Press the power button. Use the temperature (+/-) buttons to set the desired temperature and the time (+/-) buttons to set the cooking duration.
 - **Using Presets:** Press the power button. Press the Mode (M) button repeatedly to cycle through the 8 preset cooking functions (French Fries, Shrimp, Roast, Chicken, Fish, Steak, Cheese Melts, Bacon). The display will show the default time and temperature for the selected preset. You can adjust these manually if desired.
5. **Start Cooking:** Once settings are chosen, press the power button again to start the cooking cycle. The fan and heating element will activate.
 6. **Shaking/Turning Food:** For even cooking, some recipes require shaking or turning food halfway through the cooking process. The air fryer will pause automatically when the basket is pulled out. Simply pull out the basket, shake or turn the food, and then reinsert the basket to resume cooking.
 7. **Auto Shut-off:** The air fryer will automatically shut off and beep several times when the set cooking time has elapsed.
 8. **Remove Food:** Carefully pull out the frying basket. Use tongs to remove cooked food from the basket. Avoid direct contact with hot surfaces.
 9. **Power Off:** Press and hold the power button to turn off the unit if not using the auto shut-off feature. Unplug the appliance after use.

8 COOKING PRESETS

Cook a variety of delicious meals anytime
with just one cooking tool



Image: The Ultrean Air Fryer's digital display showing icons for its 8 cooking presets: French Fries, Shrimp, Roast, Chicken, Fish, Steak, Cheese Melts, and Bacon.



Image: A visual representation of the air fryer's auto shut-off feature, showing cooking pausing when the basket is removed and resuming when reinserted.

5. MAINTENANCE AND CLEANING

Regular cleaning of your Ultrean Air Fryer will ensure optimal performance and extend its lifespan.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Frying Basket and Crisper Tray:** The nonstick frying basket and crisper tray are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. Ensure all food residue is removed.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn food residue, use a mild detergent and a soft sponge. Avoid abrasive cleaners or metal scouring pads.
4. **Heating Element:** Gently clean the heating element with a soft brush to remove any food particles. Do not use water or liquid cleaners directly on the heating element.
5. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive

materials.

6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your Ultrean Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Food is not cooked evenly.	Basket is overfilled. Food was not shaken/turned.	Do not overfill the basket. Shake or turn food halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use. Fatty ingredients being cooked.	Clean the basket and crisper tray thoroughly after each use. Remove excess fat from ingredients.
The air fryer emits a burning smell.	Food particles stuck on the heating element.	Unplug and allow to cool. Clean the heating element carefully.
Food is not crispy.	Too much moisture in food. Not enough oil (for certain foods). Temperature too low.	Pat food dry before air frying. Lightly brush with oil if desired. Increase temperature slightly.

If the problem persists after trying these solutions, please contact Ultrean Customer Support.

7. SPECIFICATIONS

Feature	Specification
Model Name	TXG-AFT07501
Capacity	8 Quarts (8 Liters)
Power	1700 Watts
Voltage	120 Volts (AC)
Temperature Range	180°F - 400°F (82°C - 204°C)
Timer Range	1 - 60 Minutes
Control Method	Touch Screen
Product Dimensions (D x W x H)	13.35" x 15.75" x 13.58"
Item Weight	15 Pounds

Feature	Specification
Material	Plastic
Nonstick Coating	Yes
Dishwasher Safe Parts	Frying Basket, Crisper Tray

8. WARRANTY AND SUPPORT

Ultrean provides a **1-Year Warranty** for this product, covering defects in materials and workmanship under normal use. Additionally, Ultrean offers dedicated customer support to assist with any product concerns. For warranty claims or technical assistance, please contact Ultrean Customer Support through the contact information provided in your product packaging or on the official Ultrean website.