

[Manuals.plus](#) /

› [Tangkula](#) /

› Tangkula Patio Chaise Lounge Chair (Model AM3490HM) User Manual

Tangkula AM3490HM

Tangkula Patio Chaise Lounge Chair

Model: AM3490HM

User Manual

1. SAFETY INFORMATION

WARNING: This chair has a maximum weight capacity of 400 lbs. Exceeding this limit may cause instability or damage to the chair. Always ensure the chair is on a stable, level surface before use. Be cautious when adjusting the backrest or moving the chair with the wheels to prevent tipping or injury. Keep all assembly hardware out of reach of children. Periodically check all connections to ensure they remain tight and secure.

2. PRODUCT OVERVIEW

The Tangkula Patio Chaise Lounge Chair is designed for outdoor relaxation, featuring a durable construction and adjustable comfort. It includes a weather-resistant PE rattan frame, a heavy-duty metal structure, and a comfortable, skin-friendly cushion. The chair is equipped with wheels for easy repositioning and offers five adjustable backrest positions to suit various preferences.



Figure 2.1: Fully assembled Tangkula Patio Chaise Lounge Chair with turquoise cushion.

3. COMPONENTS LIST

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, contact customer support.

- Chaise Lounge Frame (Metal and PE Rattan)
- Cushion (Foam with removable fabric cover)
- Acacia Wood Wheels (2 units)
- Assembly Hardware (Bolts, washers, nuts, wrench)
- User Manual (This document)



Figure 3.1: Exploded view and dimensions of the chaise lounge chair components.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. A power drill may be helpful for certain steps, though basic tools are usually included.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the components list and diagrams to identify each part and piece of hardware.
3. **Assemble Frame:** Connect the main frame sections using the provided bolts and washers. Do not fully tighten bolts until all sections are loosely connected.
4. **Attach Wheels:** Securely attach the two Acacia wood wheels to the designated points on the frame. Ensure they are firmly in place for safe movement.
5. **Tighten All Hardware:** Once the frame and wheels are assembled, systematically tighten all bolts and screws. Do not overtighten.
6. **Place Cushion:** Position the cushion onto the chaise lounge frame. The cushion may have ties or straps to secure it to the frame, preventing it from slipping.

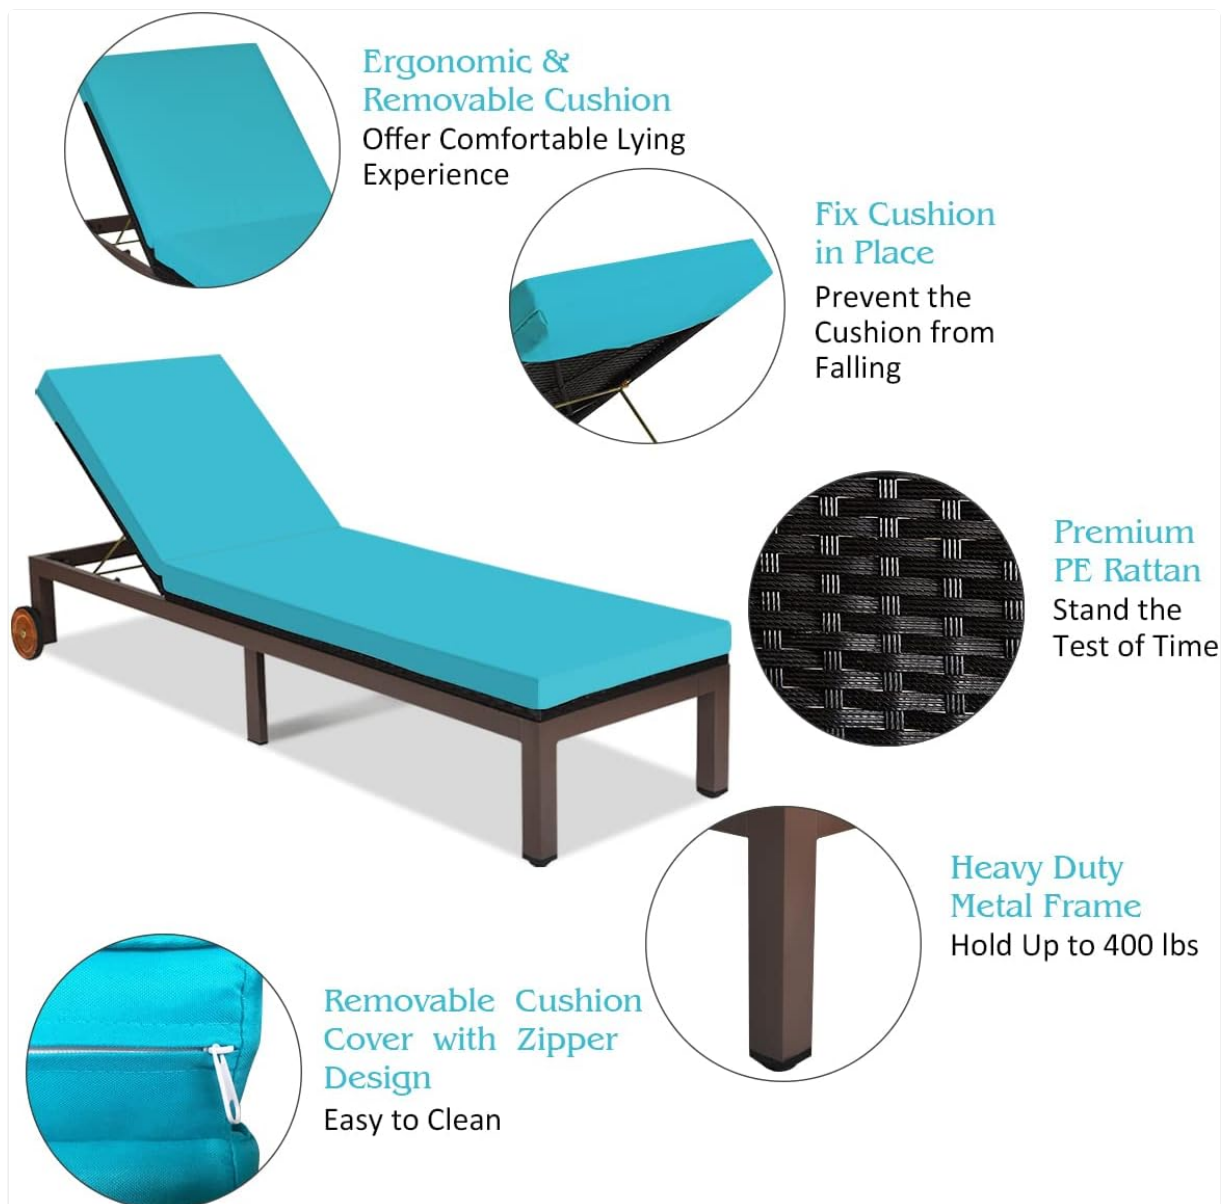


Figure 4.1: Detail of the cushion, rattan, and metal frame, illustrating the quality of materials.

5. OPERATING INSTRUCTIONS

5.1 Adjusting the Backrest

The chaise lounge features a 5-position adjustable backrest. To adjust:

1. Gently lift the backrest to disengage it from its current position.
2. Move the backrest to the desired angle.
3. Ensure the backrest securely locks into one of the five available notches before applying weight.

5 Adjustable Positions of Backrest

Meet Your Different Needs



Figure 5.1: The 5-level adjustment mechanism for the backrest.

5.2 Moving the Chaise Lounge

The chaise lounge is equipped with two wheels for easy mobility.

1. Ensure the backrest is in a stable, preferably lowest, position before moving.
2. Slightly lift the end of the chaise lounge opposite the wheels.
3. Roll the chair to its new desired location.
4. Lower the chair gently onto all four legs once in position.

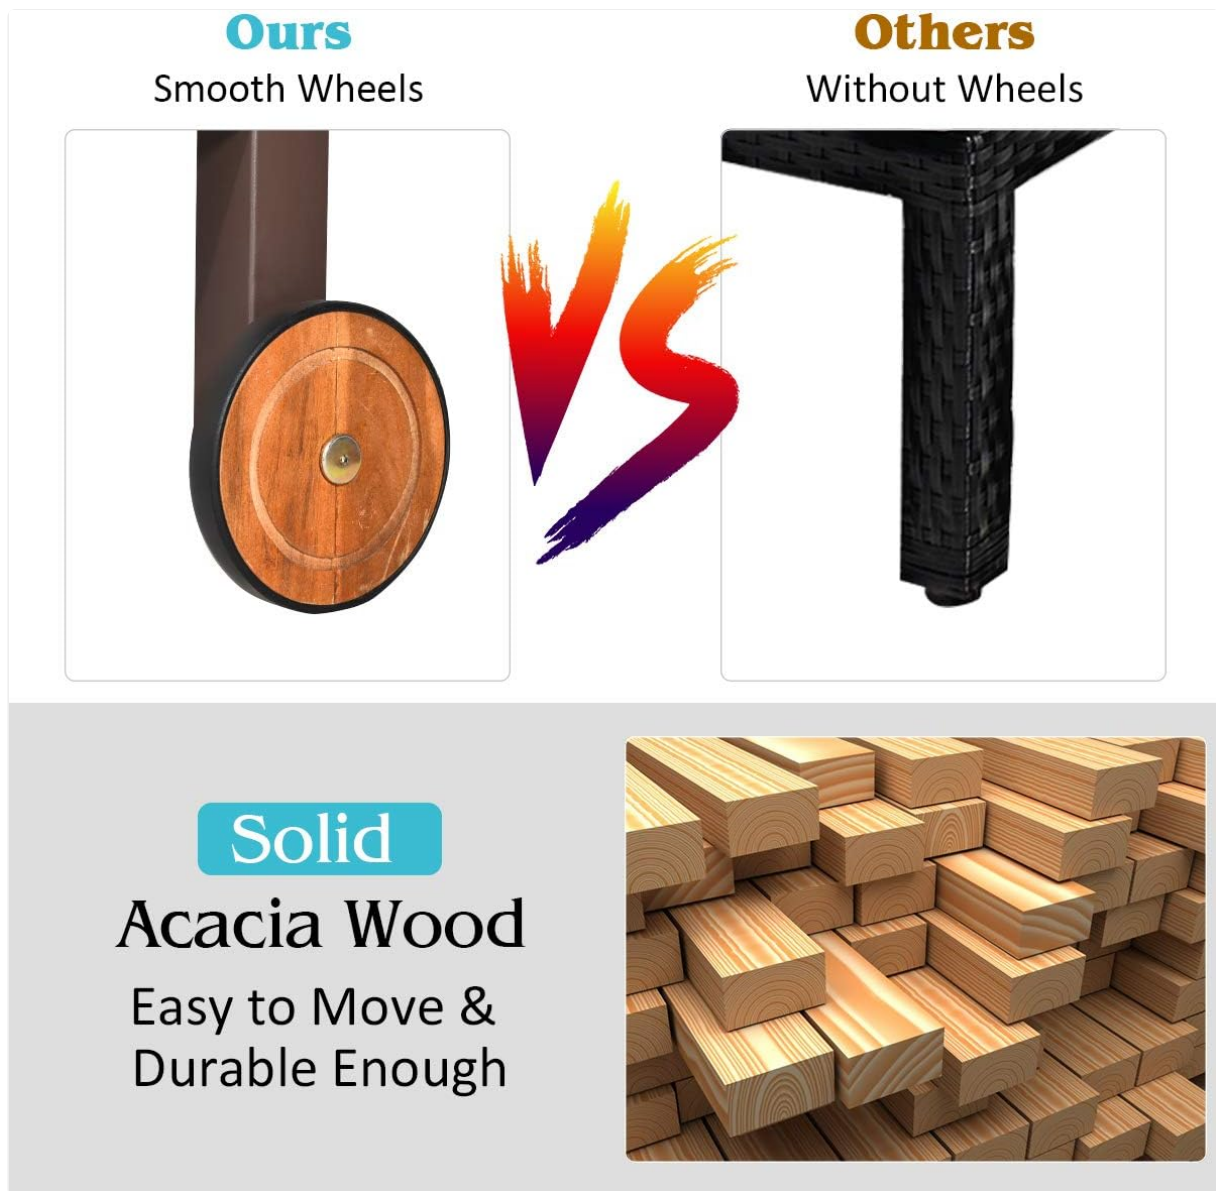


Figure 5.2: Detail of the durable Acacia wood wheels for easy transport.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your chaise lounge.

- **Cleaning:** Wipe the frame and rattan surfaces clean with a damp cloth. For cushions, the fabric cover is detachable and can be cleaned according to its care label.
- **Protection:** To prevent fading and wear, especially for the cushion fabric, it is recommended to cover the chaise lounge when not in use or during prolonged periods of harsh weather. Store cushions indoors during heavy rain or winter months.
- **Inspection:** Periodically inspect all bolts and connections to ensure they are tight. Retighten as necessary. Check the wheels for any signs of wear or damage.

7. TROUBLESHOOTING

- **Difficulty during Assembly:** If bolt holes do not align, try loosening all other bolts slightly to allow for adjustment. If issues persist, ensure you are using the correct hardware for each step. A power drill may assist in aligning stubborn parts.
- **Cushion Fading:** Outdoor fabric can fade over time due to sun exposure. To minimize this, use a protective cover when the chair is not in use and store cushions in a shaded area or indoors when

not needed.

- **Wheels Cracking/Breaking:** Ensure the chair is moved on relatively smooth surfaces. Avoid dragging the chair over rough terrain or sharp objects. If wheels are damaged, contact customer support for replacement options.

8. SPECIFICATIONS

Feature	Detail
Brand	Tangkula
Model Name	Patio Lounger
Model Number	AM3490HM
Color	Turquoise (variant shown)
Material	PE Rattan, Metal, Acacia Wood
Overall Dimensions (L x W x H)	81" x 26.5" x 13"~35.5"
Adjustable Height	13", 25", 30", 35.5"
Seat Height	13 Inches
Seat Depth	51.5 inches
Cushion Thickness	3 Inches
Weight Capacity	400 lbs
Net Weight	42 lbs
Backrest Positions	5
Indoor/Outdoor Usage	Outdoor
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Tangkula customer service directly. Refer to your purchase documentation for specific contact details or visit the official Tangkula website.