

## Midea MAD40F8APK

# Midea 4L XL Air Fryer User Manual

Model: MAD40F8APK



## 1. INTRODUCTION

Thank you for purchasing the Midea 4L XL Air Fryer. This appliance is designed to provide a healthy and efficient way to cook a variety of foods with significantly less oil. Please read this manual thoroughly before use to ensure safe and optimal operation. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not block any ventilation openings.

### 3. PRODUCT OVERVIEW

The Midea 4L XL Air Fryer features a sleek design with an intuitive LED touch screen for easy operation. It utilizes Dual-Cyclone Rapid Air Technology for efficient and even cooking.



**Figure 3.1:** Front view of the Midea 4L XL Air Fryer, showcasing its LED display and control panel.



**Figure 3.2:** Detailed view of the air fryer's components, including the wire winding handle, control panel, non-slip rubber foot, and removable baking tray.

#### Key Features:

- **LED Touch Screen:** Intuitive digital display for easy program selection and adjustments.
- **HeatXpress Technology:** Ensures rapid and even cooking with up to 90% less oil.
- **4L Capacity:** Ideal for preparing meals for 2-4 people.

- **8 Pre-programmed Functions:** Dedicated settings for various food types.
  - **Dishwasher-Safe Components:** Removable non-stick basket for easy cleaning.
  - **Non-slip Rubber Feet:** Provides stability during operation.
- 

## 4. SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all parts are present and undamaged.
  2. **Initial Cleaning:** Before first use, clean the basket and pan with warm soapy water. Wipe the main unit with a damp cloth. Dry all parts thoroughly.
  3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
  4. **Power Connection:** Plug the power cord into a grounded wall outlet.
- 

## 5. OPERATING INSTRUCTIONS

### 5.1. Preheating (Optional)

While the Midea Air Fryer's HeatXpress technology often eliminates the need for preheating, you may choose to preheat for certain recipes or desired crispiness.


- Press the power button to turn on the appliance.
- Adjust the temperature and time manually (e.g., 180°C for 3-5 minutes).
- Press the start button to begin preheating.

### 5.2. Cooking with Pre-programmed Functions

The air fryer comes with 8 one-touch pre-programmed functions for common dishes:

# 8 ONE-TOUCH FUNCTIONS

Precise time (60 mins) & temp(**35°C-200°C**) control with auto shut-off and overheat protection.

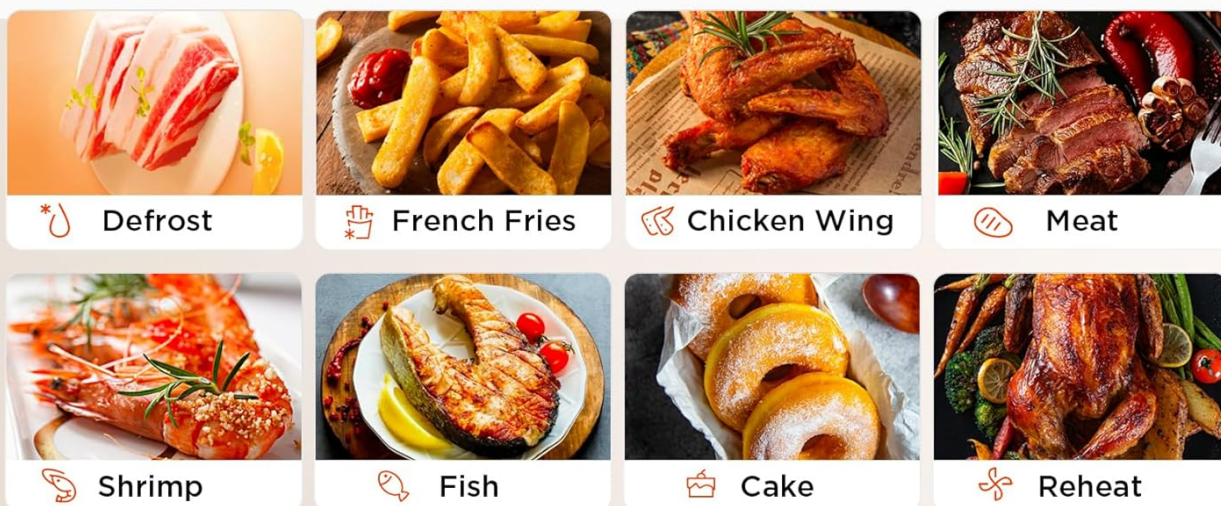

**Figure 5.1:** The LED touch screen interface showing the 8 pre-programmed cooking options.

1. Place food in the air fryer basket. Do not overfill.
2. Press the power button to turn on the appliance.
3. Select the desired pre-programmed function by tapping its icon on the LED touch screen. The default time and temperature for that function will display.
4. Press the start button to begin cooking.
5. The air fryer may beep during cooking to remind you to shake or flip food for even results.
6. Once cooking is complete, the appliance will beep and automatically shut off.

## 5.3. Manual Cooking

1. Place food in the air fryer basket.
2. Press the power button.
3. Use the temperature control buttons (+/-) to set the desired temperature (35-200°C).
4. Use the time control buttons (+/-) to set the desired cooking time (up to 60 minutes).
5. Press the start button to begin cooking.



## 5.4. Shake Reminder

For certain foods, the air fryer will emit a beep during the cooking cycle to remind you to shake the basket. This ensures even cooking and crispiness. Carefully remove the basket, shake the contents, and reinsert the basket to resume cooking.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

### EASY CLEANING

**Detachable non-stick** basket & **Dishwasher** safe



Figure 6.1: The detachable non-stick basket is dishwasher-safe and easy to clean by hand.

1. **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Pan:** The removable non-stick basket and pan are dishwasher-safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
3. **Interior:** Wipe the interior of the appliance with a damp cloth and mild detergent. Do not use abrasive cleaners or metal scouring pads.
4. **Exterior:** Clean the exterior with a damp cloth.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

6. **Storage:** Ensure all parts are dry before storing the appliance. The wire winding handle allows for neat cord storage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overcrowded.	Cook food in smaller batches. Shake the basket more frequently.
Food is not crispy.	Not enough oil (for certain foods) or incorrect temperature/time.	Lightly brush or spray food with oil. Increase cooking time or temperature slightly.
White smoke coming from appliance.	Grease residue from previous use or fatty food.	Clean the basket and pan thoroughly. For fatty foods, drain excess fat during cooking.
Appliance emits a burning smell.	Food residue on heating element.	Unplug and allow to cool. Clean the heating element.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Number	MAD40F8APK
Color	Black
Capacity	4 Liters
Power	1500 Watts
Voltage	230 Volts
Temperature Range	35-200 °C
Timer	Up to 60 minutes
Material	Stainless Steel
Special Feature	HeatXpress Technology
Product Dimensions (L x W x H)	30 x 30 x 34 cm
Item Weight	4.3 Kilograms
Country of Origin	China

## 9. WARRANTY AND SUPPORT

Midea offers a **2-year warranty** for this product, ensuring confidence in your purchase. We are committed to customer satisfaction and provide lifetime support for our products.


For warranty claims, technical assistance, or any questions regarding your Midea 4L XL Air Fryer, please contact Midea customer support through the official website or your retailer's support channels.



© 2025 Midea. All rights reserved.

### Related Documents - MAD40F8APK

	<p><a href="#">Midea MAD111D8CPKL Two-Zone Air Fryer Oven User Manual</a></p> <p>Comprehensive user manual for the Midea MAD111D8CPKL Two-Zone Air Fryer Oven. Includes safety instructions, operating procedures, specifications, app integration, cleaning, and troubleshooting.</p>
	<p><a href="#">Midea Microwave Oven User Guide</a></p> <p>A guide to using your Midea microwave oven, featuring instructions on operation and maintenance.</p>
	<p><a href="#">Midea MAD85000ADK Hot Air Fryer: Safety Instructions and User Guide</a></p> <p>Essential safety instructions and guidelines for the Midea MAD85000ADK Hot Air Fryer. Learn about intended use, important warnings, symbol explanations, disposal, and data privacy to ensure safe operation.</p>
	<p><a href="#">Midea MAF-1065 Air Fryer User Manual and Operating Guide</a></p> <p>Comprehensive user manual for the Midea MAF-1065 air fryer, detailing safety precautions, parts identification, operating instructions, cooking charts, cleaning, maintenance, troubleshooting, and compliance information.</p>

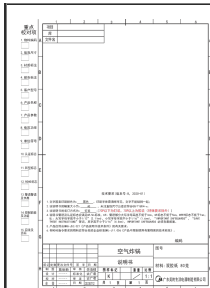

[Midea MAF-CN60D Air Fryer User Manual - Safety, Operation, and Specifications](#)

Official user manual for the Midea MAF-CN60D Air Fryer. Provides essential information on safety precautions, product components, operating instructions, cleaning and maintenance, troubleshooting, specifications, and legal statements.



[Midea MF-TN40D2 Air Fryer User Manual](#)

Comprehensive user manual for the Midea MF-TN40D2 4L Air Fryer, covering safety instructions, operation, cleaning, troubleshooting, specifications, and disposal information.