

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KITCHENARM](#) /

› [KITCHENARM 19-in-1 Bread Making Machine User Manual](#)

KITCHENARM 85101

KITCHENARM 19-in-1 Bread Making Machine User Manual

Model: 85101



The KITCHENARM 19-in-1 Bread Making Machine, a versatile appliance for home baking.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the bread machine.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The KITCHENARM 19-in-1 Bread Making Machine is designed for ease of use and versatility, allowing you to bake various types of bread, dough, cake, yogurt, and jam. Familiarize yourself with its components and control panel for optimal operation.



KITCHENARM® 19-IN-1 BREAD MACHINE

19 Automatic Programs - Each Supports Multiple Recipes

This image displays the KITCHENARM 19-in-1 Bread Machine with labels pointing to its key features: Steam Vents, Large Viewing Window, Stainless Steel Lid, KITCHENARM® branding, and Control Panel with LCD Display. On the right, a list of the 19 automatic programs is shown, ranging from Basic White to Bake.

Components:

- **Main Unit:** Houses the motor, heating element, and control panel.
- **Bread Pan:** Removable non-stick pan for baking.
- **Kneading Paddle(s):** Detachable paddle(s) for mixing and kneading dough.
- **Lid:** Features a viewing window to monitor the baking process.
- **Control Panel:** Includes an LCD display and buttons for program selection, time adjustment, loaf size, and crust color.
- **Measuring Cups and Spoons:** For accurate ingredient measurement.
- **Metal Hook:** Tool for removing the kneading paddle from the baked loaf.

Control Panel and Programs:

The intuitive control panel allows for easy selection of 19 automatic programs:

1. Basic White
2. Express White
3. Sweet
4. French
5. Gluten Free
6. Whole Wheat
7. Multigrain & Salt Free
8. Dark Rye
9. Banana
10. SD Starter
11. Sourdough
12. Keto
13. Quick Bread
14. Cake
15. Dough
16. Yogurt
17. Jam
18. Knead
19. Bake

Use the MENU button to cycle through programs, LOAF SIZE to select 1LB, 1.5LB, or 2LB, and CRUST COLOR for Light, Medium, or Dark. TIME+/- buttons adjust delay timer.

SETUP AND FIRST USE

Before using your bread machine for the first time, follow these steps:

1. Unpack the machine and all accessories. Remove all packaging materials.
2. Wipe the exterior of the bread machine with a damp cloth.
3. Wash the bread pan, kneading paddle(s), and measuring accessories with warm, soapy water. Rinse thoroughly and dry completely.
4. Insert the kneading paddle(s) onto the shaft inside the bread pan.
5. Place the bread pan into the main unit, ensuring it clicks securely into place.
6. It is recommended to run the "Bake" program (Program 19) empty for about 10 minutes on first use to burn off any manufacturing residues. Ensure good ventilation during this process. Allow the machine to cool completely afterward.

OPERATING INSTRUCTIONS

Follow these steps for successful bread making:



UNIQUE 1-PRESS BREAD MAKING

All Your Settings Are Saved For The Next Use

This image illustrates the simple 1-press bread making process. Panel 1 shows ingredients being added to the bread pan. Panel 2 shows a hand pressing a button on the control panel. Panel 3 shows a freshly baked loaf being removed from the machine. Panel 4 shows slices of bread on a plate and cooling rack.

Basic Bread Making Steps:

- Add Ingredients:** Add ingredients to the bread pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last and separate from liquids/salt). Ensure the kneading paddle is correctly installed.
- Select Program:** Plug in the bread machine. The default program (Basic White) will display. Press the MENU button repeatedly to select your desired program (e.g., Whole Wheat, Gluten Free).
- Choose Loaf Size and Crust Color:** Press the LOAF SIZE button to select 1LB, 1.5LB, or 2LB. Press the CRUST COLOR button to choose Light, Medium, or Dark crust.
- Start Baking:** Press the START/STOP button to begin the program. The machine will automatically perform kneading, rising, and baking cycles.
- Add-Ins (if applicable):** Some programs will beep during the kneading cycle to indicate it's time to add fruits, nuts, or other ingredients. Add them carefully and close the lid.
- Completion:** Once the program finishes, the machine will beep and may enter a "Keep Warm" cycle. Press

and hold the START/STOP button for a few seconds to stop the program.

7. **Remove Bread:** Using oven mitts, carefully remove the bread pan from the machine. Invert the pan to release the loaf onto a wire rack to cool. If the kneading paddle remains in the loaf, use the provided metal hook to carefully remove it.
8. **Cooling:** Allow the bread to cool for at least 20-30 minutes before slicing for best texture.

Delay Timer Function:

The delay timer allows you to program the machine to finish baking at a later time, up to 13 hours in advance. After selecting your program, loaf size, and crust color, use the TIME+/- buttons to adjust the total time until baking completion. The displayed time includes the entire baking cycle. Do not use the delay timer with recipes containing highly perishable ingredients like milk, eggs, or fresh fruit.



Cake



Yogurt



Jam



Multigrain Bread



Whole Wheat Bread



French Bread



Basic White Bread



Gluten Free Bread

EXTRA PRESET MENUS FOR HEALTHY BREADS

56 Recipes Included - Many More On Recipe Cloud

This image showcases the versatility of the KITCHENARM bread machine, displaying examples of Cake, Yogurt, Jam, Multigrain Bread, Whole Wheat Bread, French Bread, Basic White Bread, and Gluten Free Bread, highlighting the machine's ability to create a wide range of items beyond just basic bread.



FRESH FRUITS / VEGGIES IN SOME RECIPES

Only Very Simple Human Preparation Work Is Involved

This image demonstrates simple preparation steps for incorporating fresh fruits and vegetables into recipes. It shows oranges being peeled, shredded zucchini, and mashed bananas, alongside examples of Orange Bread, Zucchini Bread, and Banana Quick Bread, emphasizing minimal human preparation for fresh ingredients.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your bread machine.

- **Before Cleaning:** Always unplug the machine and allow it to cool completely before cleaning.
- **Bread Pan and Kneading Paddle:** Remove the bread pan and kneading paddle. Wash them with warm, soapy water. For stubborn residue, soak the pan and paddle in warm water for about 30 minutes. Do not use abrasive cleaners or metal utensils, as they can damage the non-stick coating. Dry thoroughly.
- **Main Unit and Lid:** Wipe the exterior of the main unit and the lid (including the viewing window) with a soft, damp cloth. Do not immerse the main unit in water.
- **Storage:** Ensure all parts are clean and dry before storing the bread machine in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your bread machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise.	Expired or inactive yeast; incorrect water temperature; too much salt or sugar.	Check yeast expiration date and activate if necessary. Use lukewarm water (105-115°F / 40-46°C). Ensure correct ingredient measurements.
Bread is too dense.	Too much flour; not enough liquid; old yeast.	Measure ingredients precisely. Ensure proper liquid-to-flour ratio. Use fresh yeast.
Kneading paddle stuck in bread.	Residue on paddle shaft; bread cooled with paddle inside.	Ensure paddle shaft is thoroughly clean before use. Remove bread from pan immediately after baking and use the metal hook to extract the paddle.
Machine not starting.	Not plugged in; lid not closed properly; program not selected.	Check power connection. Ensure lid is fully closed. Select a program and press START/STOP.

For issues not listed here, please contact KITCHENARM customer support.

SPECIFICATIONS

Detailed specifications for the KITCHENARM 19-in-1 Bread Making Machine:



Package Includes

- 1 Bread Machine KA8510
- 2 Manual & Recipes
- 3 Two Paddles (For Use & For Spare)
- 4 Metal Hook
- 5 US Three-Prong Plug
- 6 Non-Stick Bread Pan (2LB Vertical Pan)
- 7 Two Cup-Spoon Sets

ETL CERTIFIED APPLIANCE FOR US / CANADA All Parts Above Included In Product Package

This image shows the KITCHENARM bread machine with its dimensions (13.9" x 9.4" x 11.7") and lists the package contents: 1 Bread Machine KA8510, 2 Manual & Recipes, 3 Two Paddles (For Use & For Spare), 4 Metal Hook, 5 US Three-Prong Plug, 6 Non-Stick Bread Pan (2LB Vertical Pan), and 7 Two Cup-Spoon Sets. It also notes ETL certification.

- **Model Number:** 85101
- **Capacity:** Up to 2 Pounds
- **Number of Programs:** 19 Automatic Programs
- **Product Dimensions:** Approximately 13.9" (W) x 9.4" (D) x 11.7" (H)
- **Weight:** Approximately 11.45 Pounds
- **Power:** Standard US Three-Prong Plug
- **Certifications:** ETL Certified

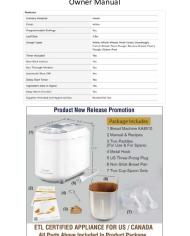
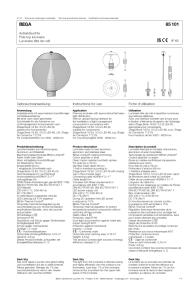
WARRANTY AND SUPPORT

KITCHENARM stands behind the quality of its products.

- Warranty:** This product typically comes with a 2-year warranty. Please refer to your purchase documentation for specific terms and conditions.
- Customer Support:** For any questions, technical assistance, or warranty claims, please contact KITCHENARM customer service. Contact information can usually be found on the KITCHENARM official website or within your product packaging.

© 2024 KITCHENARM. All rights reserved.

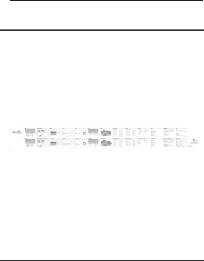
Related Documents - 85101

	<p>KitchenArm Smart Bread Maker KA8520 Quick User Guide</p> <p>A quick user guide for the KitchenArm Smart Bread Maker, Model KA8520, detailing steps for making bread using Krusteaz Bread Mix, including operation, removal, and slicing.</p>
	<p>KITCHENARM KA8510 Bread Machine Owner Manual</p> <p>Comprehensive owner's manual for the KITCHENARM KA8510 19-in-1 Bread Machine, detailing features, package contents, automatic programs, and bread type examples.</p>
	<p>BEGA 85101 Pole Top Luminaires: Technical Specifications and Installation Guide</p> <p>Detailed information on the BEGA 85101 pole top luminaire, including its application, product description, technical specifications, installation instructions, safety guidelines, and available accessories. Features Zhaga Book 18 compatibility and Dark Sky compliance.</p>
	<p>Hellberg Local 446 Local 2: User Manual for Hearing Protection & Communication Headsets</p> <p>User manual for Hellberg Local 446 and Local 2 hearing protection headsets. Learn about features like two-way radio, Bluetooth, level-dependent audio, and safety specifications. Essential guide for professionals needing advanced hearing protection and communication.</p>



[Hellberg Local 446 User Manual: Hearing Protection & Communication](#)

Comprehensive user manual for the Hellberg Local 446 hearing protection headset. Provides detailed instructions on fitting, adjustment, two-way communication, technical specifications, and safety guidelines for optimal performance and protection.



[ROYAL KLUDGE R75 Mechanical Wireless Keyboard User Manual](#)

Comprehensive user manual for the ROYAL KLUDGE R75 Mechanical Wireless Keyboard. Covers product basics, package contents, connectivity (Bluetooth, 2.4Ghz), indicator lights, knob functions, battery status, backlight control, multimedia key functions for Windows and Mac, system requirements, and warranty information.