

SanDisk Clip Sport Go

SanDisk Clip Sport Go MP3 Player User Manual

Device
Overview Features Layout Setup Operation Maintenance Troubleshooting
Specifications

1. OVERVIEW

The SanDisk Clip Sport Go MP3 Player is a lightweight, clip-on portable audio device designed for active users. It features an LED screen for easy navigation and a built-in FM radio, allowing you to enjoy your favorite music or radio stations on the go. With internal storage, you can load your music directly onto the device without relying on streaming services or cloud connectivity, making it ideal for workouts, outdoor activities, and travel where internet access may be limited.

2. PRODUCT FEATURES

- **Super Lightweight Design:** Clips securely onto clothing or gear, ensuring it stays in place during physical activity.
- **iTunes (AAC codec) Support:** Compatible with content from iTunes.
- **Built-in FM Radio:** Listen to your favorite radio stations, perfect for the gym or outdoor runs.
- **Crisp LED Screen:** Provides clear visuals for easy navigation through menus and song lists.
- **Physical Buttons:** Intuitive controls for playback, volume, and menu selection.
- **High-Performance Dynamic Audio Quality:** Delivers clear and powerful sound.
- **Voice Recording:** Capture audio notes or memos directly on the device.

3. DEVICE LAYOUT

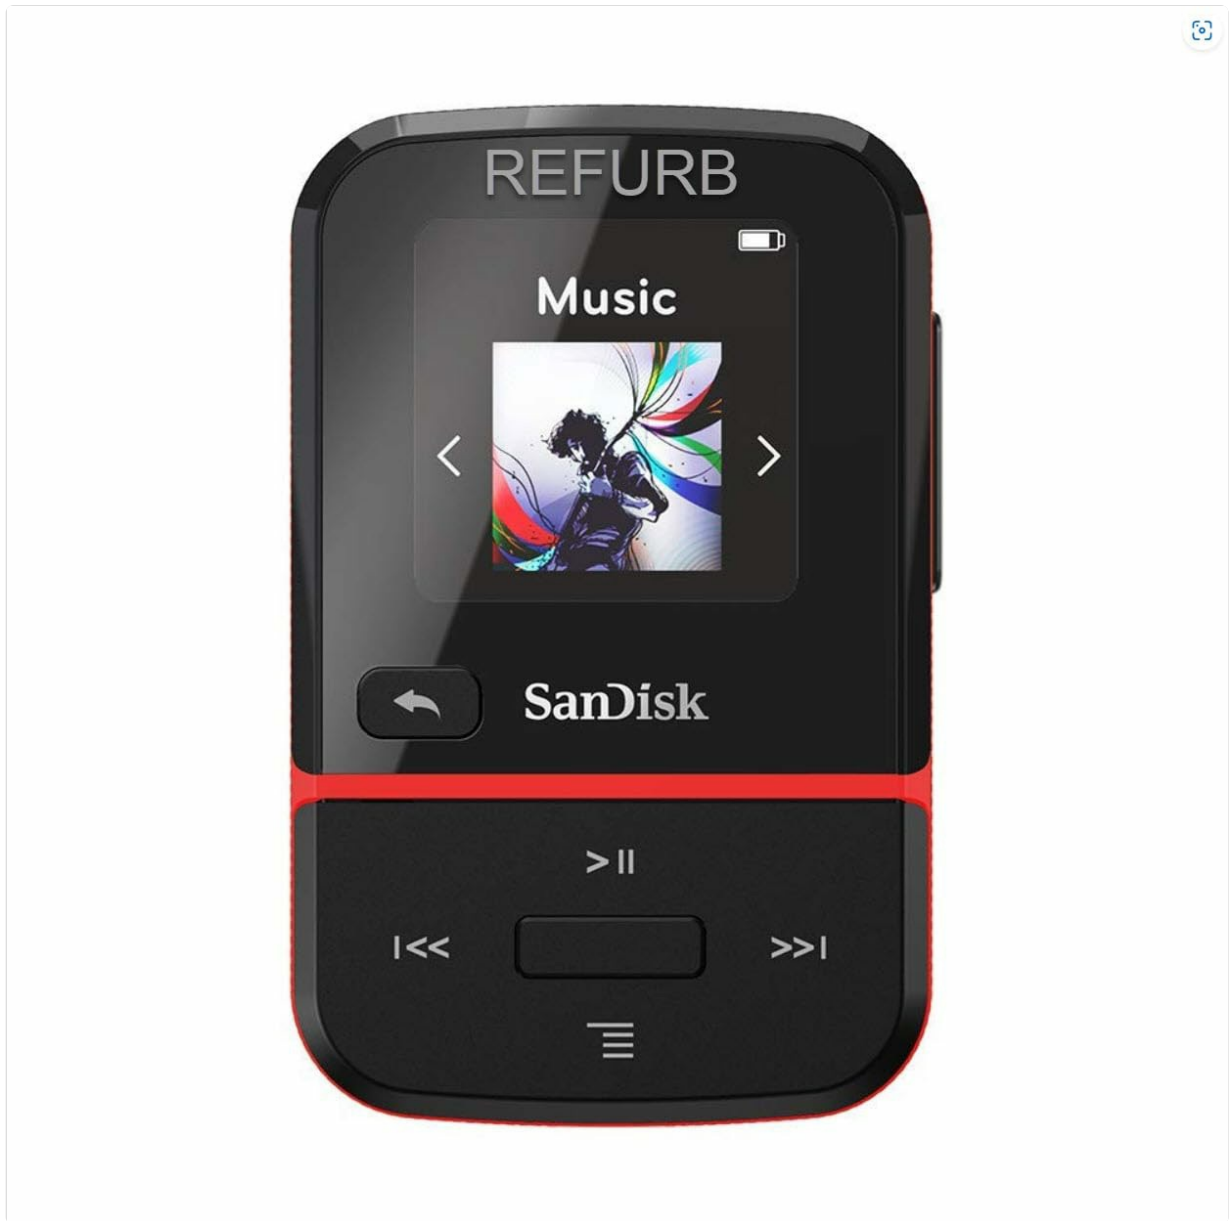


Figure 3.1: Front View

The front of the device features the LED screen, navigation buttons (back, play/pause, skip forward/backward), and a menu button.



Figure 3.2: Side View with Clip

The integrated clip on the back allows for secure attachment to clothing or gear, making it convenient for active use.



Figure 3.3: Side View with Ports

The side of the device includes the headphone jack and the micro-USB port for charging and data transfer.

4. SETUP

4.1. Charging the Device

Before initial use, fully charge your SanDisk Clip Sport Go MP3 Player. Connect the device to a computer's USB port or a USB wall adapter using the provided USB cable. The battery indicator on the screen will show charging status. A full charge typically takes a few hours.

4.2. Loading Music and Files

1. Connect the MP3 player to your computer using the USB cable.
2. The device will appear as a removable drive on your computer.
3. Drag and drop your music files (MP3, WMA, AAC, WAV, FLAC, Audible) into the 'Music' folder on the

device.

4. Safely eject the device from your computer once all files are transferred.

4.3. Initial Setup and Language Selection

Upon first power-on or after a factory reset, you may be prompted to select your preferred language. Use the navigation buttons to scroll through the language options and press the center button to confirm your selection.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

To power on the device, press and hold the power button (usually on the side) until the SanDisk logo appears on the screen. To power off, press and hold the power button again until the screen turns off.

5.2. Navigation

Use the physical buttons below the screen to navigate:

- **Center Button:** Selects an item or plays/pauses music.
- **Left/Right Arrows:** Navigate through menus, skip tracks, or fast forward/rewind.
- **Back Button (curved arrow):** Returns to the previous menu or screen.
- **Menu Button (three horizontal lines):** Accesses options within the current mode.

5.3. Playing Music

1. From the main menu, select 'Music'.
2. Browse by Artist, Album, Songs, Playlists, etc.
3. Select a song or album and press the center button to begin playback.
4. Use the left/right arrow buttons to skip tracks and the center button to play/pause.

5.4. Using the FM Radio

1. From the main menu, select 'FM Radio'.
2. Ensure headphones are connected, as they act as the antenna.
3. Use the left/right arrow buttons to tune to different stations.
4. The menu button may offer options like auto-scan or saving presets.

5.5. Voice Recording

1. From the main menu, select 'Voice'.
2. Press the center button to start recording.
3. Press the center button again to stop recording.
4. Recordings are saved and can be played back from the 'Voice' menu.

6. MAINTENANCE

6.1. Cleaning

Wipe the device with a soft, dry, lint-free cloth. Avoid using harsh chemicals, cleaning solvents, or strong detergents, as these may damage the finish or internal components.

6.2. Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. If storing the device for an extended period, ensure it has at least a 50% charge. Recharge the battery periodically if not in use.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot transfer files:** Verify the USB cable is data-capable and properly connected. Try a different USB port or computer. Ensure the device is recognized as a drive.
- **No sound:** Check headphone connection and volume level. Ensure headphones are functioning correctly.
- **FM Radio reception is poor:** Ensure headphones are fully plugged in and try moving to an open area for better signal.
- **Device is unresponsive:** Perform a soft reset by pressing and holding the power button for 10-15 seconds until the device restarts.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	2.2 x 1 x 0.5 inches
Item Weight	0.847 ounces
Item Model Number	Clip Sport Go
Batteries	1 Lithium Ion batteries required
Manufacturer	SanDisk
Date First Available	October 29, 2020

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official SanDisk support website. Keep your proof of purchase for warranty claims.