

DmofwHi DCG01 PRO

DmofwHi Cordless Electric Coffee Grinder (Model DCG01 PRO) Instruction Manual

Model: DCG01 PRO | Brand: DmofwHi

INTRODUCTION

Thank you for choosing the DmofwHi Cordless Electric Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the grinder.
- Do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the grinder with the lid securely in place.
- Do not use the appliance for other than intended use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your DmofwHi Cordless Electric Coffee Grinder.



Image: The DmofwHi Cordless Electric Coffee Grinder showing its main body, transparent lid, and a scoop. Ground coffee and beans are visible next to it.

- **Outer Cover:** Transparent cover for the grinding bowl.
- **Splash-Proof Lid:** Internal lid designed to prevent grounds from splashing during operation.
- **304 Stainless Steel Blades:** Durable blades for efficient grinding of coffee beans or spices.

- **Removable Bowl:** Stainless steel grinding bowl that detaches for easy cleaning.
- **Safety Lock Design:** Mechanism to ensure the grinding bowl is securely attached before operation.
- **Overheat Protection:** Feature that automatically shuts off the unit to prevent damage from overheating.
- **Battery Indicator:** Displays current battery charge level (100%, 70%, 50%, 20%).
- **USB-C Charging Port:** For convenient recharging of the internal battery.



Image: An exploded diagram illustrating the various components of the grinder, including the outer cover, splash-proof lid, stainless steel blades, removable bowl, safety lock, and overheat protection.

CHARGING THE GRINDER

The DmofwHi Cordless Electric Coffee Grinder is equipped with a rechargeable battery. Before first use, fully charge the device.

1. Locate the USB-C charging port on the side of the grinder.
2. Connect the provided USB-C cable to the grinder and a compatible USB power adapter (not included).
3. The battery indicator lights will illuminate to show the charging progress. A full charge typically takes approximately 3 hours.
4. Once fully charged, all indicator lights will be solid. Disconnect the charging cable.

Food Grade **Anti-Splash Cover**

Prevent splashing and keep countertop clean



Image: The DmofwHi coffee grinder connected to a power source via a USB-C cable, with its battery indicator lights illuminated.

OPERATING INSTRUCTIONS

1. Preparing for Grinding

1. Ensure the grinder is fully charged.
2. Twist the removable grinding bowl counter-clockwise to unlock and remove it from the motor base.
3. Add your desired amount of coffee beans or spices into the stainless steel grinding bowl. Do not exceed the 'MAX' fill line.
4. Place the splash-proof lid over the grinding bowl, then align the removable bowl with the motor base and twist clockwise to lock it securely in place.
5. Place the outer transparent cover on top.



Image: A hand pouring coffee beans into the removable stainless steel grinding bowl of the DmofwHi grinder.

2. Grinding Process

1. With the lid securely in place, gently press down on the top cover to activate the grinding mechanism.
2. Hold down the cover for the desired grinding time to achieve your preferred consistency.
 - Approximately 5 seconds for coarse grind (e.g., French Press).
 - Approximately 10 seconds for medium grind (e.g., Pour Over).
 - Approximately 20 seconds for fine grind (e.g., Espresso).
3. Release pressure to stop grinding.

Get Perfect Coffee Grind Size



Image: The DmofwHi coffee grinder next to three plates displaying different grind sizes: coarse for French Press, medium for Pour Over, and fine for Espresso, with recommended grinding times.

3. After Grinding

1. Remove the outer cover and then the splash-proof lid.
2. Twist the grinding bowl counter-clockwise to unlock and remove it from the motor base.
3. Carefully pour out the freshly ground coffee or spices.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Disconnect Power:** Ensure the grinder is not connected to a charging cable before cleaning.
2. **Remove Grinding Bowl:** Twist the removable grinding bowl counter-clockwise and lift it off the motor base.

- 3. **Clean Bowl and Lid:** The stainless steel grinding bowl and splash-proof lid can be rinsed directly under running water. Use mild soap if necessary. Ensure they are completely dry before reassembling.
- 4. **Clean Blades:** Use the specialized cleaning brush (if included) to remove any residual grounds from the blades and inside the grinding bowl.
- 5. **Clean Motor Base:** Wipe the exterior of the motor base with a damp cloth.**Do not immerse the motor base in water or any other liquid.**
- 6. **Reassemble:** Once all parts are clean and dry, reassemble the grinder by locking the grinding bowl back onto the motor base and placing the lids.

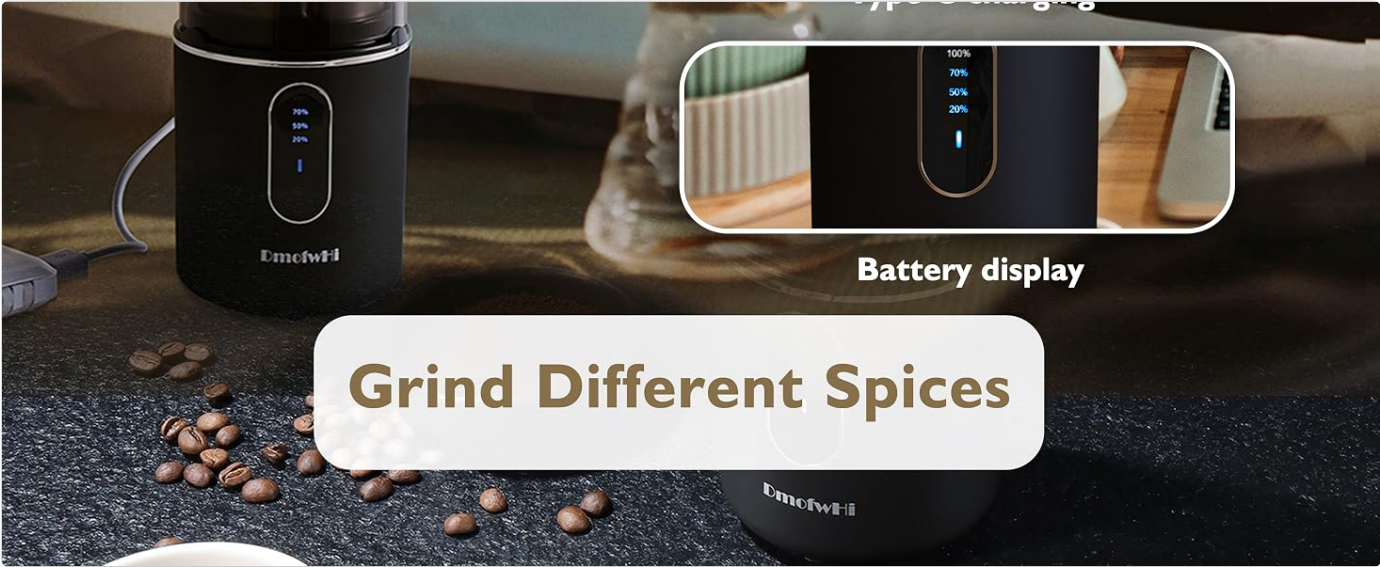


Image: A hand demonstrating the removal of the stainless steel grinding bowl from the DmofwHi grinder for cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not turn on.	Battery is low or depleted. Grinding bowl not securely locked. Overheat protection activated.	Charge the grinder fully. Ensure the grinding bowl is twisted clockwise until locked. Allow the unit to cool down for 15-20 minutes before attempting to use again.
Grinding is uneven or slow.	Too many beans/spices in the bowl. Blades are dull or obstructed.	Reduce the quantity of ingredients. Clean the blades and bowl thoroughly. If blades are dull, contact customer support.
Grinder stops during operation.	Overload or overheat protection. Battery is low.	Reduce the load and allow the unit to cool. Recharge the battery.
Grounds splash out.	Splash-proof lid or outer cover not properly installed.	Ensure both the splash-proof lid and outer cover are securely in place before grinding.

SPECIFICATIONS

- **Model:** DCG01 PRO
- **Brand:** DmofwHi
- **Color:** Matte Black
- **Product Dimensions:** 3.58"L x 3.58"W x 7.48"H
- **Capacity:** 170 Milliliters (approximately 12 cups of coffee)
- **Blade Material:** 304 Stainless Steel
- **Voltage:** 110 Volts
- **Item Weight:** 1.83 pounds
- **Battery Type:** Lithium Ion (3 batteries included)
- **Charging Time:** Approximately 3 hours
- **UPC:** 636882128428
- **ASIN:** B08PQRQ96L

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official DmofwHi website. Keep your purchase receipt for warranty claims.
Manufacturer: FeiweiHome

PRODUCT VIDEOS

No official product videos from the seller are available for embedding at this time.

© 2023 DmofwHi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question