

[Manuals.plus](#) /

› [GoWISE](#) /

› GoWISE USA 7-Quart Air Fryer & Dehydrator User Manual

GoWISE GW22972

GoWISE USA 7-Quart Air Fryer & Dehydrator User Manual

Model: GW22972 | Brand: GoWISE USA

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The GoWISE USA 7-Quart Air Fryer & Dehydrator is designed for versatile cooking, offering air frying, roasting, broiling, baking, grilling, and dehydrating functions.

Components



Image: The GoWISE USA 7-Quart Air Fryer & Dehydrator, showcasing its sleek black and copper design.

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Ergonomic touchscreen display for setting functions, temperature, and time.
- **Removable Basket:** 7-quart capacity, PFOA-free non-stick coating.
- **Crisper Tray:** Sits inside the basket for optimal air circulation.
- **Dehydrating Racks (3):** Stackable racks for dehydrating fruits, vegetables, and jerky.



Image: A hand demonstrating the insertion of the crisper tray into the air fryer basket.

Control Panel

The full touchscreen control panel provides intuitive access to all cooking functions and settings.



Image: A detailed view of the digital touchscreen control panel, showing various cooking icons and temperature display.

- **8 Cooking Functions:** Air Fry, Roast, Broil, Bake, Grill, Dehydrate, Keep Warm, Preheat.
- **Temperature Control:** Adjustable from 180°F to 400°F in 5-degree increments.
- **Timer:** Up to 60 minutes for most functions, up to 24 hours for Dehydrate.
- **Preheat Function:** Automatically preheats to desired temperature.
- **Mute Function:** Option to turn off button sounds.
- **Shake/Flip Reminder:** An alarm function to remind you to shake or flip ingredients for optimal results.

BEFORE FIRST USE

Before using your GoWISE USA Air Fryer for the first time, follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the basket and crisper tray with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure all parts are completely dry before use.

SETUP

Proper setup ensures safe and efficient operation of your air fryer.

1. Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is at least 6 inches of clear space on the back and sides, and 12 inches above the appliance.
2. Insert the crisper tray into the air fryer basket.
3. Slide the basket assembly back into the main unit until it clicks into place.
4. Plug the power cord into a grounded wall outlet.



OPERATING INSTRUCTIONS

General Operation

1. Place ingredients into the air fryer basket. Do not overfill.
2. Slide the basket back into the appliance.
3. Press the Power button to turn on the display.
4. Select a cooking function or manually set the temperature and time.
5. Press the Start/Pause button to begin cooking.
6. Some recipes may require shaking or flipping ingredients halfway through cooking. The appliance may beep to remind you.
7. Once cooking is complete, carefully pull out the basket and remove the food.



Image: The air fryer basket pulled out, showcasing a generous portion of crispy french fries.

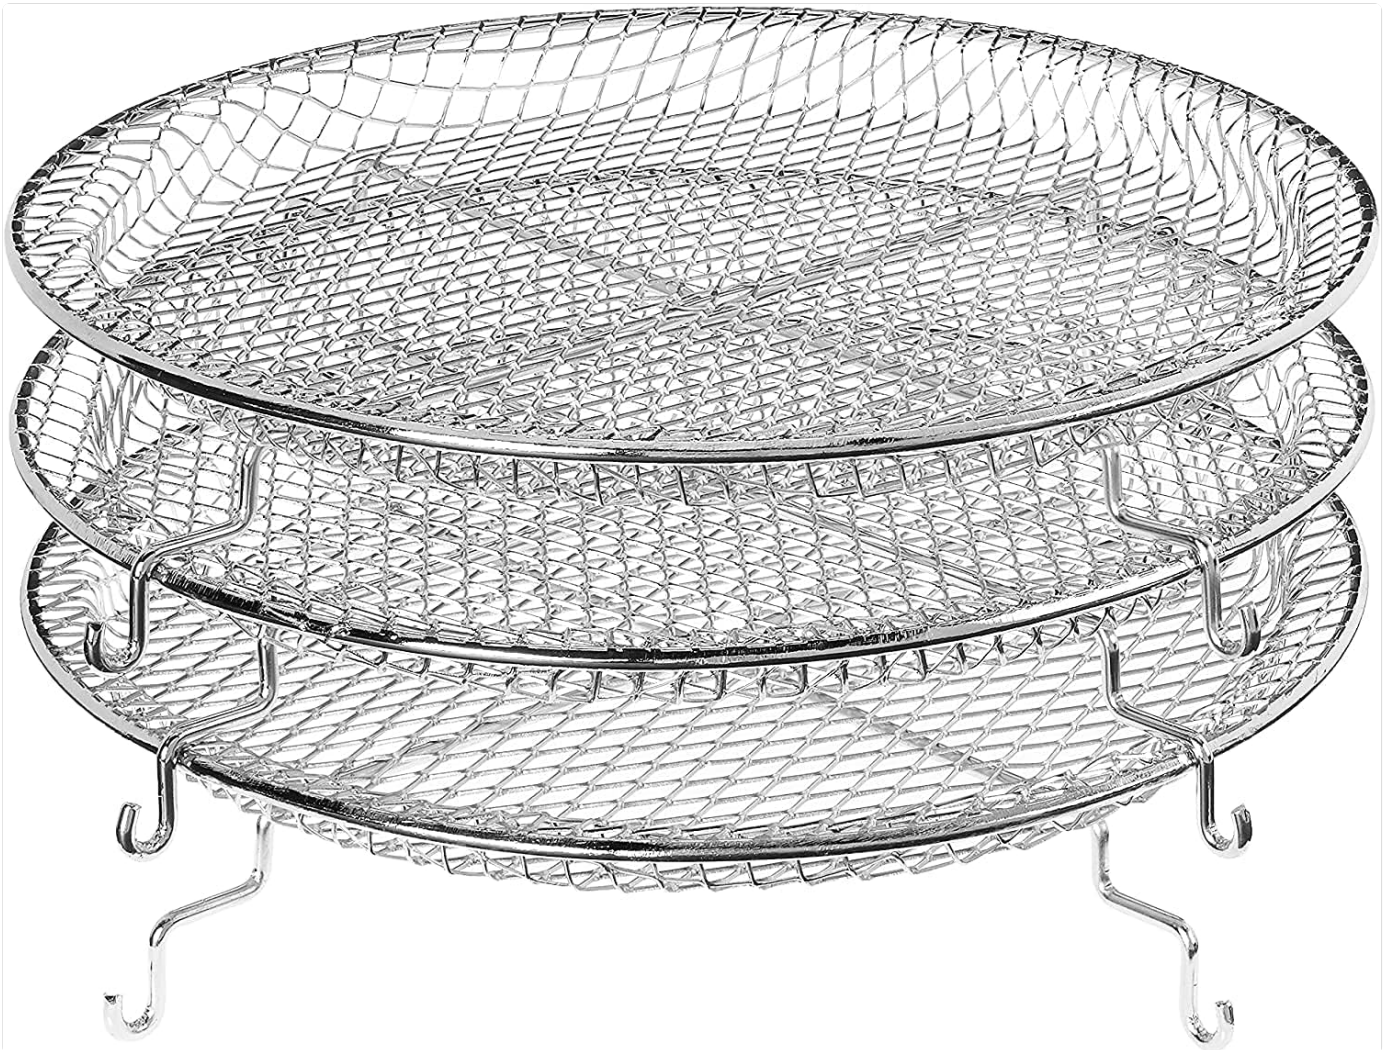


Image: A closer view of the air fryer basket, highlighting the texture of the cooked french fries.

Cooking Functions

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and nuggets.
- **Roast:** Perfect for meats and vegetables, achieving a tender interior and browned exterior.
- **Broil:** For quick browning and melting cheese.
- **Bake:** Suitable for cakes, muffins, and other baked goods.
- **Grill:** For grilling smaller cuts of meat or vegetables.
- **Dehydrate:** Use the included stackable racks to dehydrate fruits, vegetables, and make jerky. Temperature range for dehydrating is 90°F to 170°F, with a timer from 2 to 24 hours.



Image: The three stackable dehydrator racks, designed to fit inside the air fryer basket.



Image: The air fryer basket with one of the dehydrator racks placed inside, ready for use.

- **Keep Warm:** Maintains food at a warm temperature after cooking.
- **Preheat:** Activates a preheating cycle to bring the air fryer to the desired temperature before adding food. This ensures more consistent cooking results.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The removable pan and crisper tray are coated with PFOA-free non-stick material. Hand wash these parts with hot water, dish soap, and a non-abrasive sponge. Do not use metal utensils or abrasive cleaning materials.



Image: A hand carefully lifting the crisper tray out of the air fryer basket for cleaning.

3. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. Clean the interior of the appliance with a non-abrasive sponge and warm, soapy water.
5. Ensure all parts are thoroughly dry before storing or next use.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	The appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded wall outlet.
Food is not cooked evenly.	Basket is overloaded; food not shaken/flipped.	Cook in smaller batches. Shake or flip ingredients halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper tray thoroughly after each use. For fatty foods, drain excess oil.
Fresh fries are not crispy.	Insufficient oil; improper potato preparation.	Soak potato sticks in water for 30 minutes, dry thoroughly, then lightly coat with oil before air frying.

SPECIFICATIONS

Detailed technical specifications for the GoWISE USA 7-Quart Air Fryer & Dehydrator:

Feature	Detail
Model Name	Air Fryer with Dehydrator Max XL
Model Number	GW22972
Capacity	7 Quarts
Color	Black/Copper
Product Dimensions	12.5"D x 12.15"W x 15"H (12.5" with handle)
Item Weight	19.46 pounds
Material	Plastic, Stainless Steel
Inner Material	Stainless Steel
Wattage	1700 Watts
Voltage	120 Volts
Controller Type	Touch control
Dishwasher Safe	No (Hand Wash Recommended)
UPC	819687023666



Image: Diagram illustrating the dimensions of the GoWISE USA 7-Quart Air Fryer.

WARRANTY AND SUPPORT

GoWISE USA is committed to providing excellent customer support for your product.

- **Money Back Guarantee:** All GoWISE USA products come with a 30-day money back guarantee.
- **Warranty:** A 1-year warranty is provided for the product.
- **Extended Coverage:** Registered products receive an additional 60 days of warranty coverage.
- **Customer Care:** Forever support is available from GoWISE customer care.

- **Recipe Book:** Your air fryer includes a recipe book containing 100 tested recipes to help you get started and explore new culinary possibilities.



Image: The GoWISE USA air fryer displayed alongside its dehydrator racks and the included recipe book.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question