

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED YD1010 Height Adjustable Full Motion TV Wall Mount Instruction Manual

ELIVED YD1010

ELIVED YD1010 Height Adjustable Full Motion TV Wall Mount Instruction Manual

Model: YD1010 | Brand: ELIVED

IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before installation and use. Failure to follow these instructions could result in property damage, serious injury, or death. If you do not understand these instructions, or have doubts about the safety of the installation, please contact ELIVED customer support.

- This product is designed for installation on wood stud walls, solid concrete walls, or brick walls. Do not install on drywall alone.
- Ensure the mounting surface can safely support the combined weight of the mount and the TV.
- Do not exceed the maximum weight capacity of 66 lbs (30 kg).
- Use only the provided hardware. Do not use damaged parts.
- Always use a qualified technician for installation if you are unsure.
- Keep children and pets away during installation.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, contact ELIVED customer support for assistance.



Image: The ELIVED YD1010 full motion TV wall mount, shown with its articulating arm, VESA plate, and a small bubble level for installation.

- TV Wall Mount Assembly
- VESA TV Plate
- Wall Plate
- Mounting Hardware Kit (screws, anchors, washers, spacers)
- Bubble Level
- Instruction Manual

SPECIFICATIONS

Brand	ELIVED
Model	YD1010
Compatible TV Sizes	23 - 55 inches
Weight Capacity	11 - 66 lbs (5 - 30 kg)
VESA Compatibility	100x100mm to 400x400mm
Movement Type	Articulating, Swivel, Tilt, Height Adjustable
Tilt Angle	+5° / -15°
Swivel Angle	Up to 180° (depending on TV size)

Screen Level Adjustment	±3°
Extension from Wall	2.36 inches (retracted) to 23.11 inches (extended)
Material	Alloy Steel, Aluminum

SETUP AND INSTALLATION

1. Check TV Compatibility

Before installation, ensure your TV meets the following criteria:

- **TV Size:** Between 23 and 55 inches.
- **TV Weight:** Between 11 lbs (5 kg) and 66 lbs (30 kg).
- **VESA Pattern:** Compatible with VESA patterns from 100x100mm to 400x400mm. Measure the horizontal and vertical distance between the mounting holes on the back of your TV.

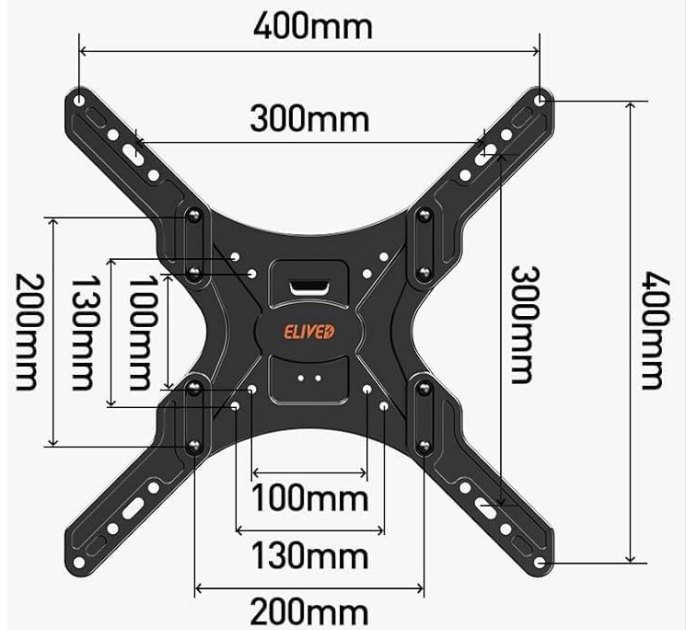


Image: A visual guide illustrating the compatibility requirements for TV size (23"-55"), TV weight (11-66 lbs), VESA range (Min 100x100mm, Max 400x400mm), and supported wall types (Wood Stud, Concrete/Brick Wall).

Available VESA Patterns



VESA = Horizontal x Vertical



✓ Suitable VESA Patterns

100 x 100mm	300 x 200mm
130 x 130mm	300 x 300mm
200 x 100mm	400 x 200mm
200 x 200mm	400 x 300mm
200 x 300mm	400 x 400mm
200 x 400mm	

✗ Unsuitable VESA Patterns

100 x 200mm	150 x 200mm
100 x 300mm	150 x 150mm
100 x 150mm	200 x 150mm
150 x 100mm	300 x 400mm

Image: A detailed diagram explaining how to measure VESA (Horizontal x Vertical) and a table listing suitable VESA patterns (e.g., 100x100mm, 200x200mm, 400x400mm) and unsuitable ones.

2. Wall Compatibility

This mount is designed for installation on:

- Wood Stud Walls
- Solid Concrete Walls
- Brick Walls

DO NOT install onto drywall alone. Concrete anchors will be required for concrete/brick walls.

Wall Compatibility



Image: A visual representation of the TV mount securely installed on a wood stud wall and a brick/concrete wall, emphasizing that it should not be mounted on drywall only.

3. Installation Steps

Follow these general steps for installation. Refer to the detailed graphic instructions included in your package for specific hardware and drilling requirements.

1. **Attach TV Plate to TV:** Secure the VESA TV plate to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure a snug fit without overtightening.

2. **Install Wall Plate to Wall:** Locate the desired mounting position on your wall. Use the provided bubble level to mark the drilling points accurately. Drill pilot holes and securely attach the wall plate to the wall studs (for wood) or concrete/brick using the appropriate anchors and lag bolts.
3. **Hang TV on Wall Plate:** Carefully lift the TV (with the attached TV plate) and hook it onto the wall plate. Secure the TV to the wall plate using the locking mechanisms or screws as indicated in the detailed instructions.

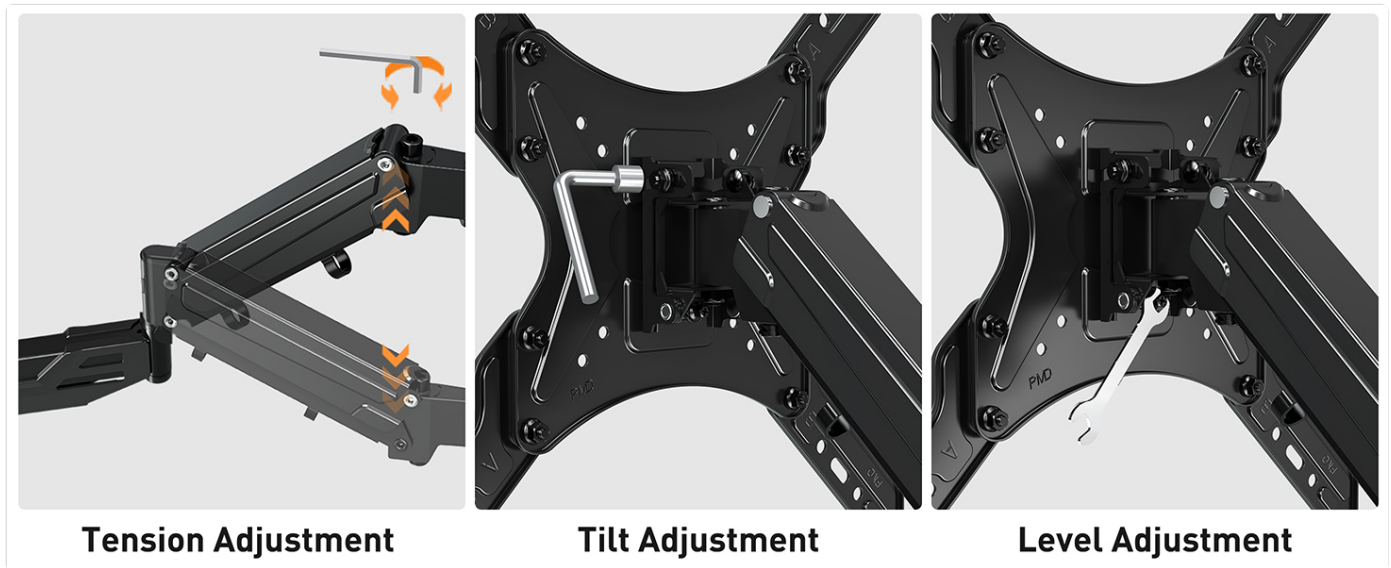


Image: A simplified three-step visual guide for installation: 1) Attaching the TV plate to the TV, 2) Installing the wall plate to the wall, and 3) Hanging the TV onto the wall plate.

OPERATING INSTRUCTIONS

Height Adjustment

The ELIVED YD1010 features a spring arm for smooth height adjustment. To adjust the height:

- Gently press the forearm of the mount to the horizontal position.
- If the TV/monitor rises up, it indicates the tension is too high for the TV's weight.
- If the TV/monitor sags down, it indicates the tension is too low. Turn the tension adjustment bolt clockwise to increase tension.
- Adjust the tension bolt located on the arm using an Allen key until the TV stays in the desired position. The lower nut will turn when the bolt is adjusted; this is normal and should not be stopped.

Easy Height Adjustment

Press the forearm to the horizontal



Note: The lower nut will turn when the bolt is adjusted, it's normal. DO NOT stop it turning.

Image: A diagram illustrating the process of adjusting the tension on the mount's arm to achieve easy height adjustment. It shows how to press the forearm horizontally and adjust a bolt, noting that the lower nut will turn.



Image: A TV mounted on the ELIVED YD1010 wall mount, illustrating its ability to adjust vertically by 8.6 inches, allowing for flexible positioning.

Extend and Retract

The articulating arm allows you to pull the TV out from the wall or push it back in:

- **Extend:** Gently pull the TV forward to extend the arm up to 23.11 inches from the wall.
- **Retract:** Push the TV back towards the wall until it is as close as 2.36 inches.

Extend and Retract



Image: A visual guide showing the TV mount extended to its maximum of 23.11 inches and retracted to its minimum of 2.36 inches from the wall.

Tilt, Swivel, and Level Adjustment

Adjust your TV for optimal viewing angles:

- **Tilt:** The screen can be tilted 5° upwards and 15° downwards to reduce glare and improve viewing comfort. Loosen the tilt adjustment screws, set the desired angle, and re-tighten.

- **Swivel:** The mount allows for up to 180° swivel left or right, depending on the TV size and wall distance. Gently pivot the TV to the desired angle.
- **Level:** If the TV appears slightly unlevel after installation, use the $\pm 3^\circ$ screen level adjustment feature. Loosen the leveling screws, adjust the screen, and re-tighten.



Image: A split image demonstrating the level adjustment of $\pm 3^\circ$ for horizontal alignment and the tilt adjustment range of $+5^\circ$ to -15° for vertical angle control.

Great View From Anywhere



Image: A TV mounted on the ELIVED YD1010 wall mount, illustrating its full motion capabilities with arrows indicating 180-degree swivel at multiple pivot points for flexible viewing from any angle.

Will This Wall Mount Fit Your TV?

1.TV Size:



Size: 23"-55"

2.TV Weight:



11-66LBS
5-30KG

3.VESA Range



MIN: 100x100mm/4x4"
MAX: 400x400mm/16x16"

4.Wall Type:



Wood Stud Concrete/Brick Wall

Image: A detailed view of the ELIVED TV mount highlighting the specific points for Tension Adjustment (using an Allen key on the arm), Tilt Adjustment (screws on the VESA plate), and Level Adjustment (screws on the VESA plate).

Cable Management

Integrated cable management clips help keep your cables organized and out of sight. Route your TV and power cables along the mount arm and secure them with the clips.

Cable Management



Image: A TV mounted on the ELIVED YD1010 wall mount, illustrating how cables are neatly routed and managed along the articulating arm, contributing to a clean installation.

MAINTENANCE

- Periodically check all screws and connections to ensure they remain tight and secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Do not attempt to lubricate any moving parts unless specifically instructed by ELIVED.

TROUBLESHOOTING

TV Does Not Stay at Desired Height

This indicates the tension of the spring arm is not correctly adjusted for your TV's weight.

- If the TV rises: The tension is too high. Turn the tension adjustment bolt counter-clockwise to decrease tension.
- If the TV sags: The tension is too low. Turn the tension adjustment bolt clockwise to increase tension.
- Refer to the "Height Adjustment" section for visual guidance.

Difficulty Adjusting Tilt or Level

Ensure the adjustment screws for tilt and level are sufficiently loosened before attempting to reposition the TV. Once the desired angle is achieved, re-tighten the screws firmly.

Mount Feels Loose or Unstable

Immediately check all mounting points:

- Verify that the lag bolts securing the wall plate to the wall are tight.
- Ensure the screws attaching the VESA plate to the TV are secure.
- Confirm that the TV is properly seated and locked onto the wall plate.
- If the issue persists, discontinue use and contact customer support.

WARRANTY AND SUPPORT

ELIVED products typically come with a manufacturer's warranty. Please refer to your purchase documentation or the ELIVED official website for specific warranty terms and conditions.

For technical assistance, missing parts, or warranty claims, please contact ELIVED customer support through the retailer where you purchased the product or visit the official ELIVED website.

ELIVED Store: [Visit ELIVED Store on Amazon](#)

© 2025 ELIVED. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question