

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED Universal Table Top TV Stand Instruction Manual

ELIVED YD1014 Max 55"

ELIVED Universal Table Top TV Stand Instruction Manual

Brand: ELIVED | **Model:** YD1014 Max 55"

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ELIVED Universal Table Top TV Stand. Designed for most 27 to 55 inch LCD, LED, and Plasma Flat Screen TVs, this stand offers a stable and height-adjustable solution for your television.

Key features include wide compatibility with VESA patterns up to 800x400mm, a maximum load capacity of 88 lbs, and a space-saving design ideal for narrow TV consoles. The stand also features non-slip pads to protect furniture and ensure stability.



TV size: 27"-55"



Load: 88LBS



Min: 200x100mm
Max: 800x400mm

An ELIVED TV stand supporting a flat-screen television on a wooden media console, illustrating its compact and stable design suitable for various living spaces. The image highlights the stand's compatibility with TVs ranging from 27 to 55 inches, a load capacity of 88 lbs, and VESA compatibility from 200x100mm to 800x400mm.

Safety Information

- Read all instructions carefully before assembly and use. Keep this manual for future reference.
- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- Ensure the TV's VESA mounting pattern is compatible with the stand (Min 200x100mm, Max 800x400mm).
- Assemble the stand on a soft, clean surface to prevent scratches.
- Always use two or more people to lift and place the TV onto the stand.
- Ensure all screws are securely tightened before use. Do not overtighten.
- Place the TV stand on a stable, level surface to prevent tipping.
- Keep children and pets away during assembly.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact ELIVED customer support.

Note: Specific screw sizes and quantities may vary slightly. Refer to the included hardware bag for exact counts.


Part	Description	Quantity
A	TV Stand Legs (Left & Right)	2
B	TV Mounting Brackets	2
C	Base Support Bars	2
D	Non-Slip Pads	4
E	Hardware Kit (various screws, washers, spacers)	1 set
F	Allen Key / Wrench	1

SETUP AND INSTALLATION

Follow these steps carefully to assemble your ELIVED TV stand. It is recommended to have a second person assist with lifting the TV.

Step 1: Attach Base Support Bars to Stand Legs

Align the base support bars (C) with the bottom of the TV stand legs (A). Secure them using the provided screws from the hardware kit (E). Ensure the flat side of the base support bar faces downwards.

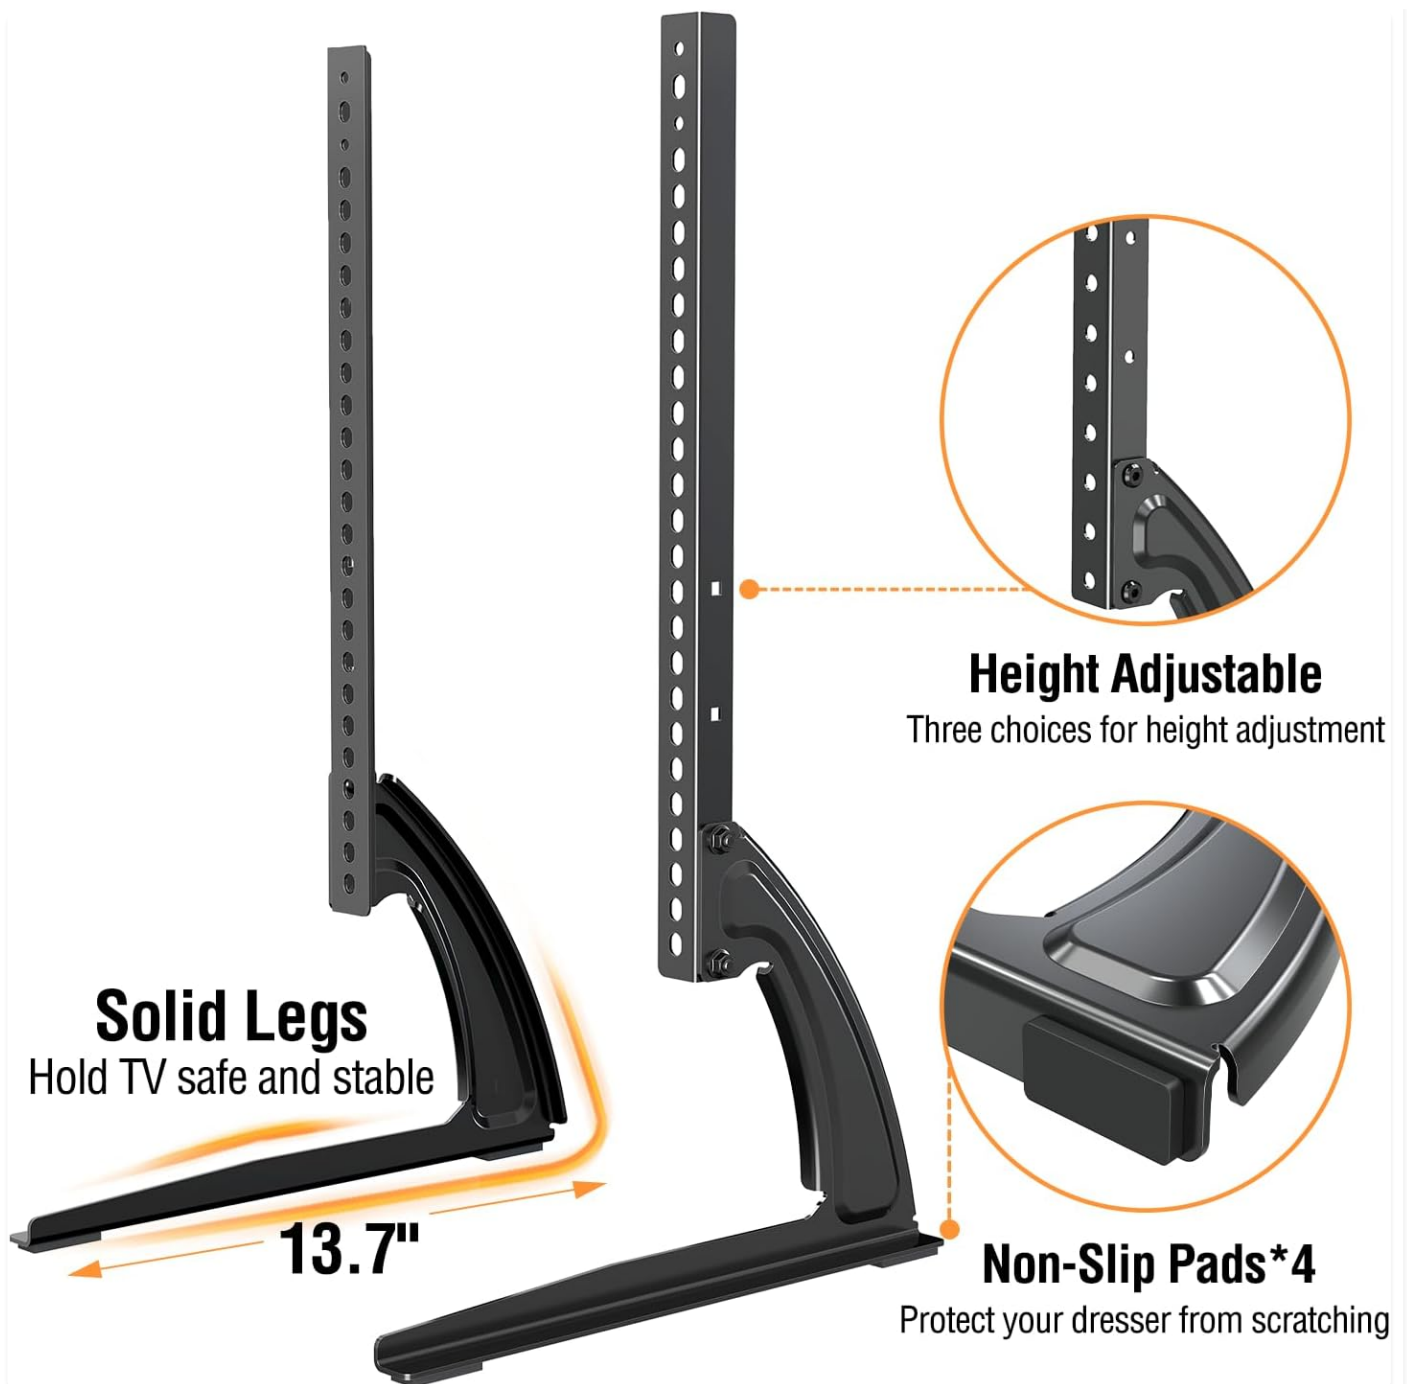


A detailed view of the ELIVED TV stand leg, highlighting the solid construction of the base and the attachment point for the vertical mounting bracket. The image also shows the non-slip pads on the underside of the base, designed to protect furniture surfaces.

Step 2: Attach TV Mounting Brackets to Stand Legs

Attach the TV mounting brackets (B) to the vertical arms of the TV stand legs (A). These brackets offer multiple height adjustment points. Choose your desired height and secure the brackets using the appropriate screws and washers from the hardware kit (E). Ensure both brackets are set to the same height.

THREE HEIGHT ADJUSTMENTS

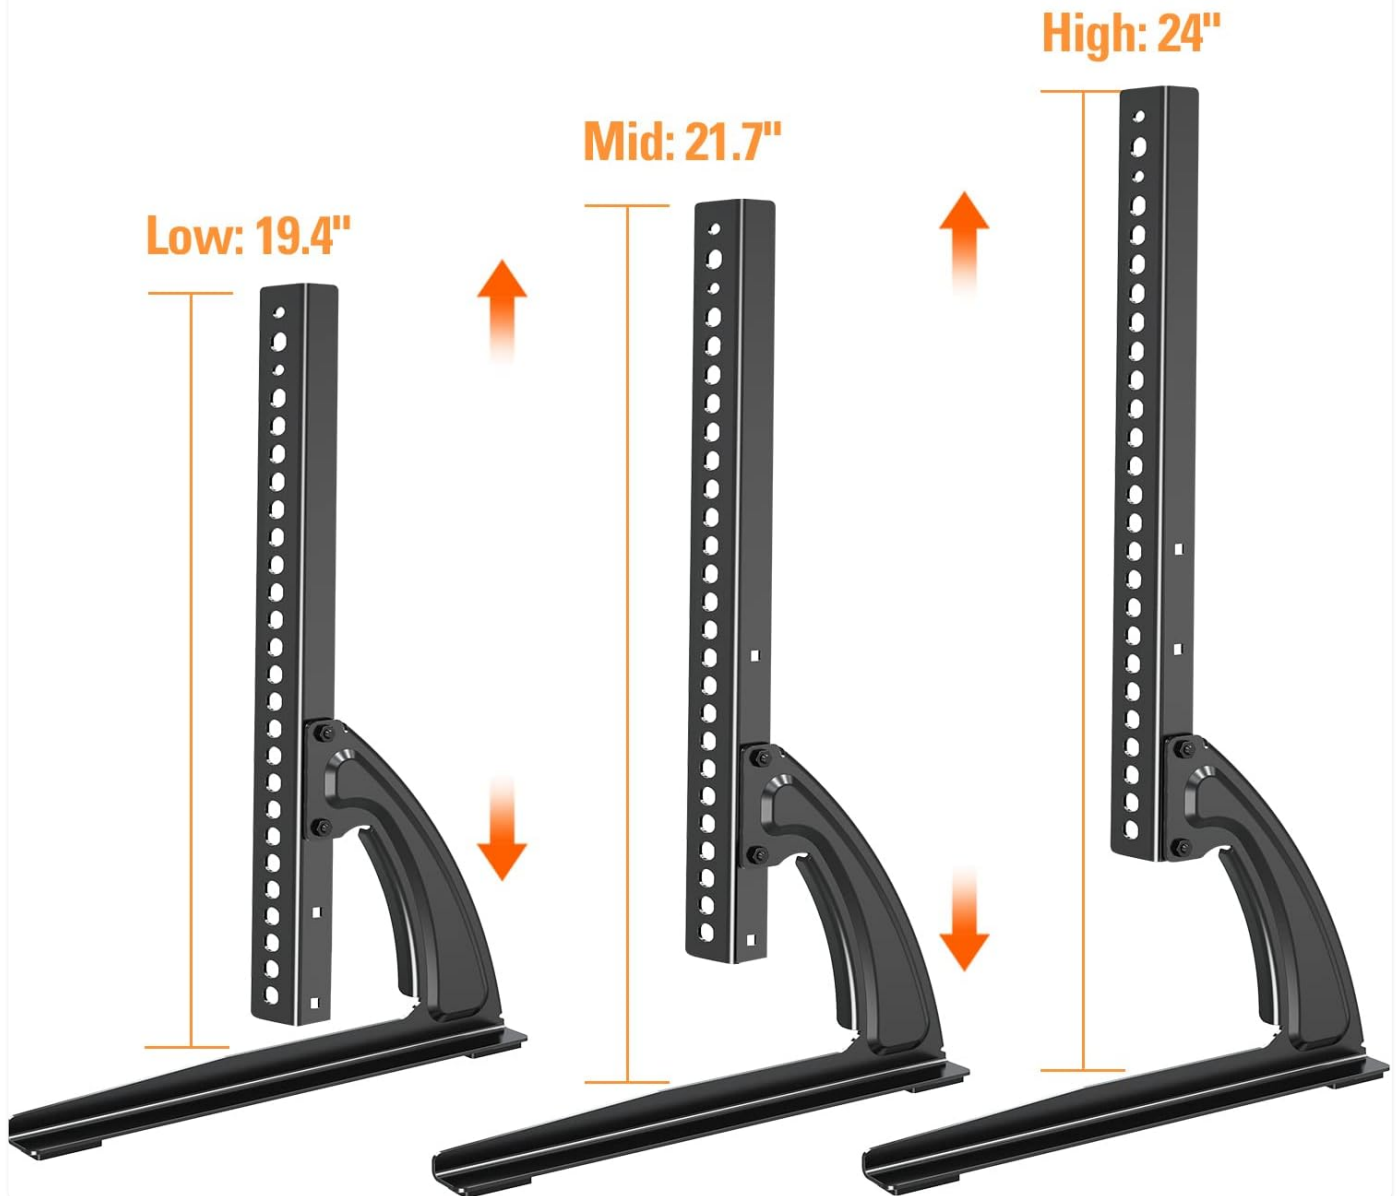

A diagram illustrating the three available height adjustment options for the ELIVED TV stand: Low (19.4 inches), Mid (21.7 inches), and High (24 inches). This shows how the vertical mounting brackets can be positioned to achieve different TV heights.

Step 3: Apply Non-Slip Pads

Peel and stick the non-slip pads (D) to the underside of the base support bars (C). These pads will protect your furniture surface and prevent the stand from sliding.

Quick Installation



**Non-Slip Pads
Avoid Scratch**



**Solid Base
Holds TV Stable**



An image demonstrating the quick installation process of the ELIVED TV stand, showing two individuals carefully lifting a TV onto the assembled stand. Insets highlight the non-slip pads on the base to prevent scratches and the solid base design for stability.

Step 4: Attach Assembled Stand to TV

Carefully place your TV face down on a soft, clean surface. Align the TV mounting brackets (B) with the VESA mounting holes on the back of your TV. Use the appropriate screws, washers, and spacers from the hardware kit (E) that fit your TV's specific VESA pattern. Ensure the brackets are securely fastened to the TV.



A rear view of a flat-screen television with the ELIVED table top TV stand securely attached. This image demonstrates how the stand's vertical mounting brackets connect to the VESA holes on the back of the TV, providing a stable and integrated support system.

Step 5: Position the TV

With assistance, carefully lift the TV with the attached stand and place it on your desired flat, stable surface, such as a media console or cabinet. Ensure the stand is centered and stable before releasing the TV.



A living room scene featuring a flat-screen TV mounted on the ELIVED table top stand, positioned on a media console. A person is seated on the floor, operating the TV with a remote control, illustrating the stand's practical use in a home environment.

OPERATING INSTRUCTIONS

Height Adjustment

The ELIVED TV stand offers three levels of height adjustment to optimize your viewing experience. To adjust the height, you will need to remove the TV from the stand, loosen the screws securing the TV mounting brackets to the stand legs, reposition the brackets to the desired height (Low: 19.4", Mid: 21.7", High: 24"), and then re-secure the screws. Always ensure both brackets are at the same height.

3 Height Adjustable




A visual representation of the three height settings for the ELIVED TV stand, showing the TV screen at 19.4 inches, 21.7 inches, and 24 inches from the bottom of the stand. This diagram clearly illustrates the vertical adjustability of the stand.

VESA Compatibility Check

Before mounting, ensure your TV's VESA pattern (the distance between the mounting holes on the back of your TV) falls within the supported range of this stand: Minimum 200x100mm to Maximum 800x400mm. The horizontal distance between mounting holes must be at least 200mm.

Additionally, check the distance 'D' from the bottom VESA holes to the bottom edge of your TV. This distance is crucial for proper fit, especially for larger TVs. Refer to the table below:

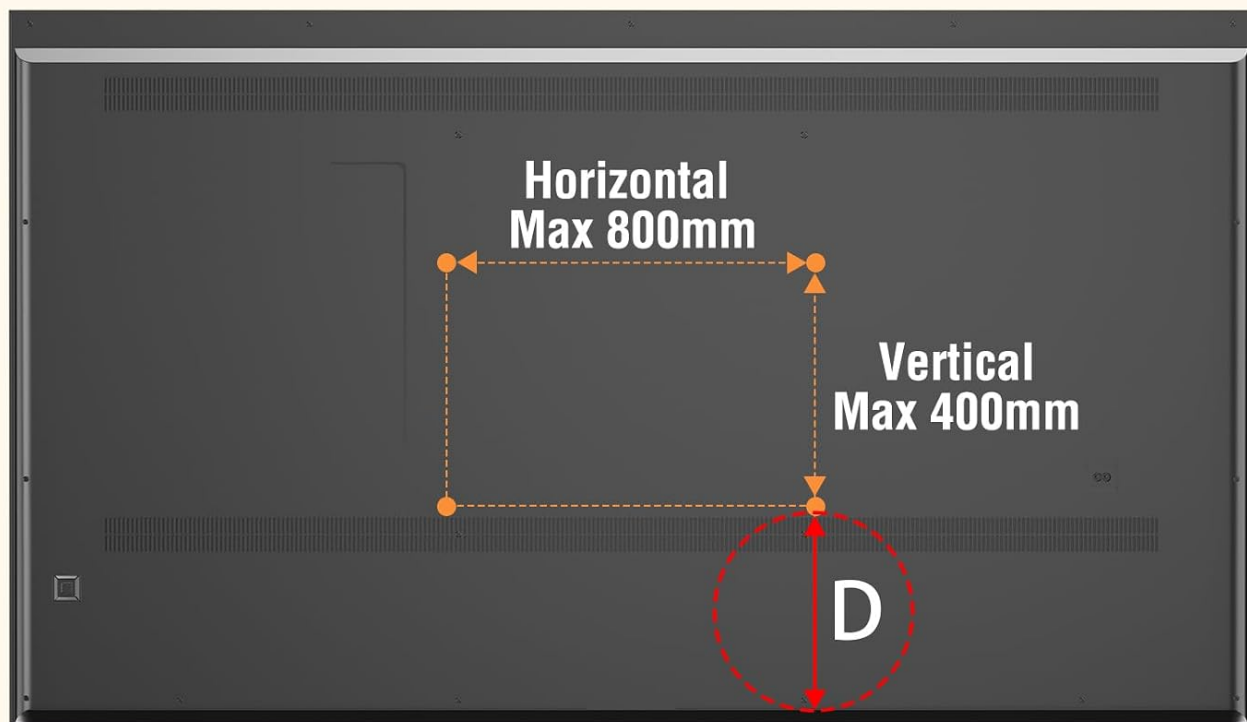

**Make Sure the Distance $D \leq$ Listed Below
Base on Different Vertical Size**

V	400mm	300mm	200mm	100mm
D	$\leq 5.1"$	$\leq 9.1"$	$\leq 13"$	$\leq 17.3"$

A diagram showing the VESA mounting pattern on the back of a TV, with horizontal and vertical maximum dimensions. Below the diagram is a table indicating the maximum allowable distance 'D' from the bottom VESA holes to the bottom edge of the TV for various vertical VESA sizes (400mm, 300mm, 200mm, 100mm).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the stand. Avoid abrasive cleaners or solvents that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Storage:** If disassembling for storage, keep all parts and hardware organized to facilitate future reassembly.

TROUBLESHOOTING

Problem: TV is not stable or wobbles.

Solution:

- Ensure all screws are fully tightened, especially those connecting the stand legs to the mounting brackets and the brackets to the TV.
- Verify the TV stand is placed on a flat, level, and sturdy surface.
- Check that the non-slip pads are properly applied to the base of the stand.
- Confirm the TV weight does not exceed the 88 lbs (40 kg) capacity.

Problem: TV does not fit the stand.


Solution:

- Re-check your TV's VESA mounting pattern against the stand's compatibility (Min 200x100mm, Max 800x400mm).
- Ensure the horizontal distance between your TV's mounting holes is at least 200mm.
- Verify the distance 'D' from the bottom VESA holes to the bottom edge of your TV is within the specified limits for your VESA size (refer to the VESA compatibility table in the Operating Instructions section).

SPECIFICATIONS

Feature	Detail
Model	YD1014 Max 55"
Compatible TV Sizes	27 - 55 inches
Max Load Capacity	88 lbs (40 kg)
VESA Compatibility	Min 200x100mm to Max 800x400mm
Height Adjustment	3 levels (19.4", 21.7", 24")
Material	Alloy Steel
Color	Black
Item Weight	4.77 pounds
Package Dimensions	16.97 x 9.53 x 2.2 inches

PRODUCT DIMENSION

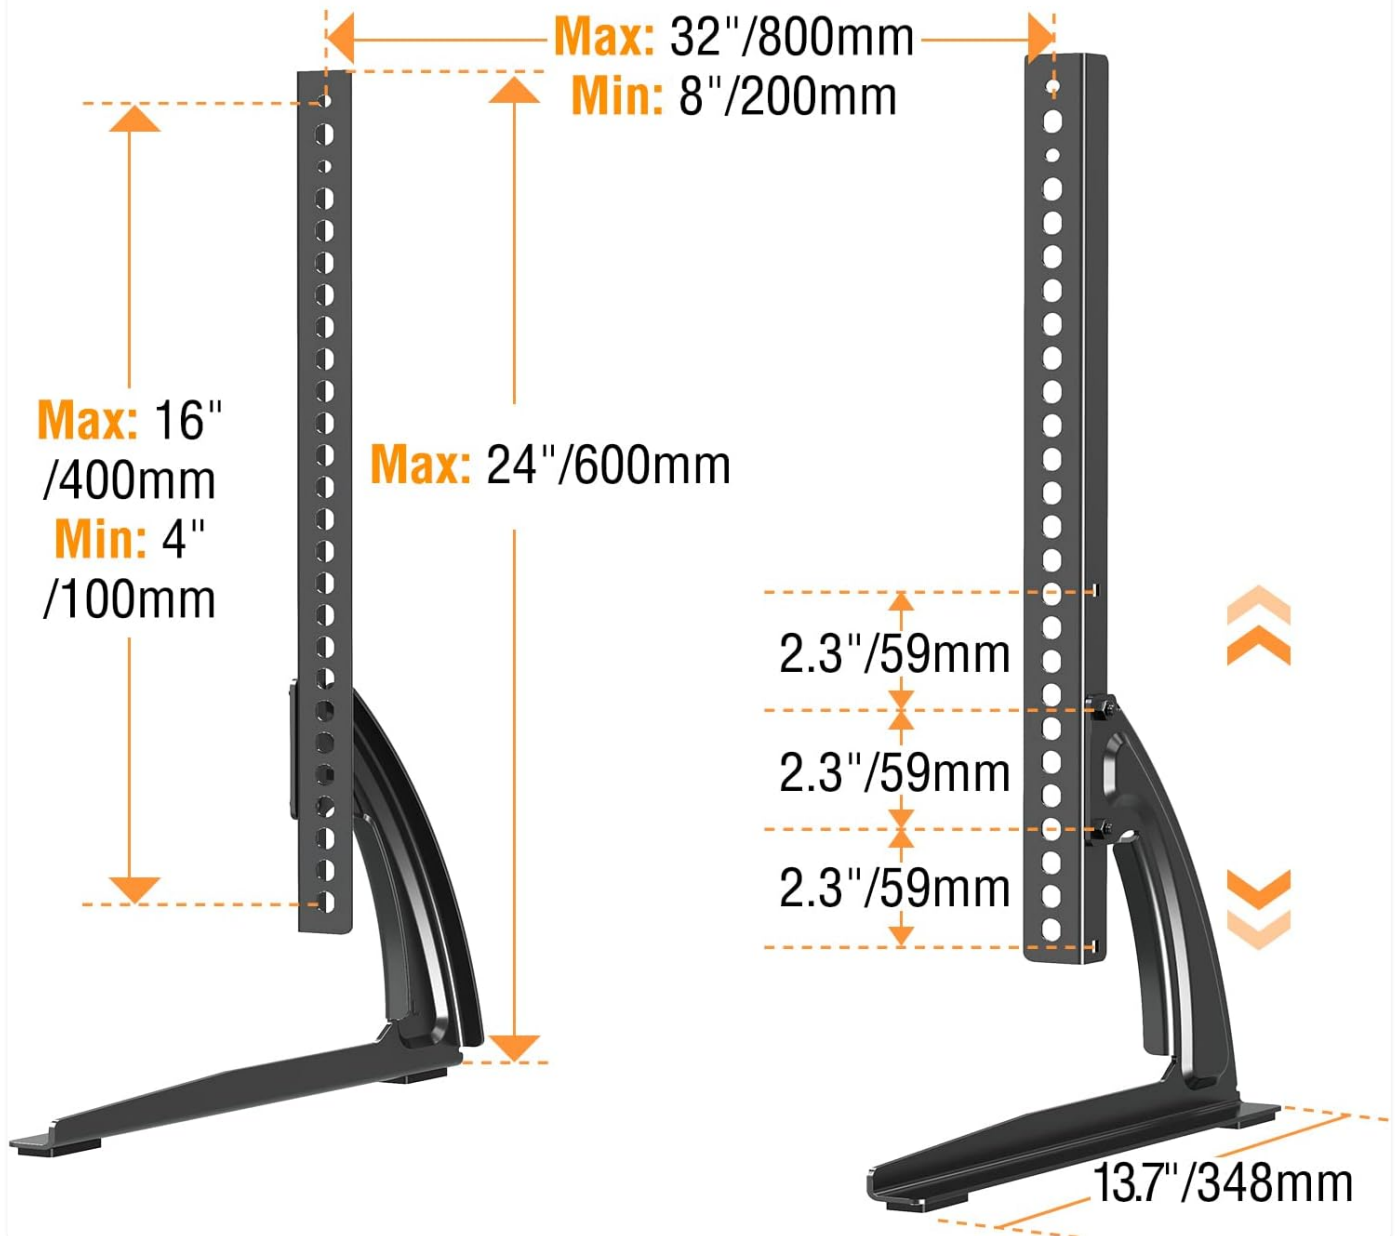

A diagram illustrating the key dimensions of the ELIVED TV stand, including the maximum and minimum heights of the vertical mounting brackets (Max 24 inches / 600mm, Min 8 inches / 200mm) and the base length (13.7 inches / 348mm). It also shows the spacing between height adjustment holes.

WARRANTY AND SUPPORT

ELIVED products are designed for durability and performance. For any questions, missing parts, or assistance with assembly, please contact ELIVED customer support. While specific warranty details are not provided in this manual, ELIVED is committed to customer satisfaction.

You can find more information and contact details on the official ELIVED store page: [ELIVED Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question