

NC XJ-665

XINJIA Electronic Voice Timekeeping Watch User Manual

Model: XJ-665

PRODUCT OVERVIEW

The XINJIA XJ-665 is an electronic voice timekeeping watch designed for ease of use, particularly for the visually impaired. It features clear time display, English voice announcements, an alarm function, and hourly timekeeping.

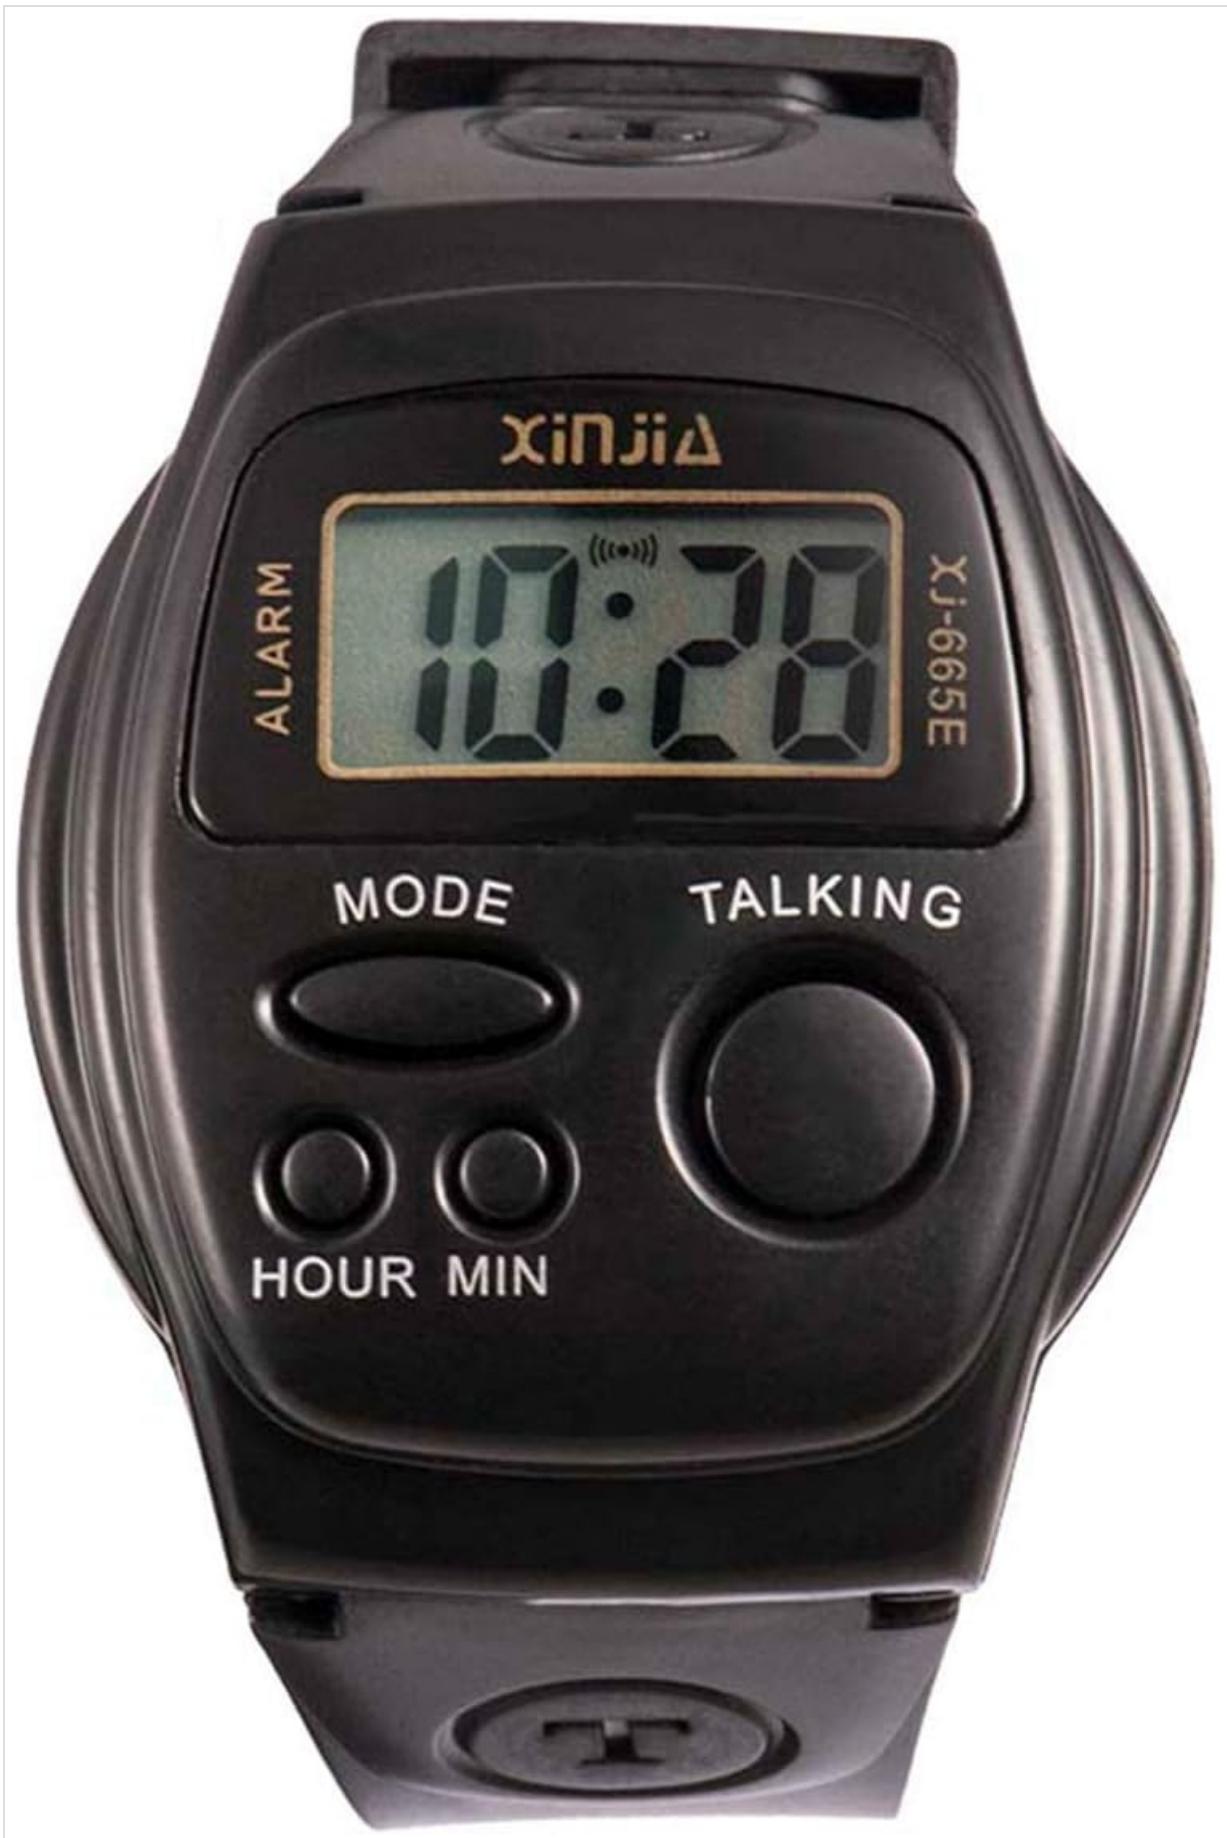


Figure 1: Front View of the XINJIA XJ-665 Watch. This image displays the watch face with its digital time display, the 'ALARM' indicator, and the four control buttons: 'MODE', 'TALKING', 'HOUR', and 'MIN'. The model number 'XJ-665E' is visible on the right side of the display.

Watch Components and Buttons

- **Digital Display:** Shows time, alarm settings, and other indicators.
- **B1 (MODE) Button:** Used to switch between time display, time setting, and alarm setting modes.
- **B2 (MINUTE) Button:** Used to adjust minutes during setting modes and to toggle the hourly timekeeping function.
- **B3 (HOUR) Button:** Used to adjust hours during setting modes and to select alarm tones or toggle alarm on/off.
- **B4 (TALKING) Button:** Used to broadcast the current time and to activate the snooze function during an alarm.

SETUP

Battery Installation/Replacement

The XINJIA XJ-665 watch requires 2 LR44 batteries. Batteries are included with the product.



Figure 2: Back View of the XINJIA XJ-665 Watch. This image shows the stainless steel back cover of the watch, labeled "TALKING WATCH", "MADE IN CHINA", "ALARM", and "STAINLESS STEEL BACK". The battery compartment is located underneath this cover.

1. Locate the battery compartment on the back of the watch. This is typically a circular cover that can be opened with a small screwdriver or a specialized watch tool.
2. Carefully remove the existing batteries if replacing.
3. Insert two new LR44 batteries, ensuring correct polarity (+ and -).
4. Securely close the battery compartment cover.

Note: When the display font is blurred, disappears, the sound becomes small, or the function operation is abnormal, a new battery needs to be replaced.

OPERATING INSTRUCTIONS

1. Setting the Time

1. In the normal time display mode, press the **B1 (MODE)** button once. The minute digits on the display will start flashing.
2. Press the **B2 (MINUTE)** button repeatedly to set the correct minutes.
3. Press the **B3 (HOUR)** button repeatedly to set the correct hour.
4. Press the **B1 (MODE)** button again to exit time setting mode and return to normal time display.

2. Setting the Alarm Time

1. In the normal time display mode, press the **B1 (MODE)** button twice. The "AL" symbol will appear on the display, and the alarm time digits will flash.
2. Press the **B2 (MINUTE)** button repeatedly to set the desired alarm minutes.
3. Press the **B3 (HOUR)** button repeatedly to set the desired alarm hour.
4. Press the **B1 (MODE)** button again to exit alarm setting mode.

3. Selecting Alarm Tone and Turning Alarm On/Off

1. In the normal time display mode, press the **B3 (HOUR)** button.
2. Each press will cycle through different alarm tones and the alarm on/off status.
3. When an alarm is set to "on", the alarm will play, and the LCD will display the alarm time. The alarm function is activated.
4. When the alarm is set to "off", the alarm symbol will disappear, and the watch will broadcast "DI" to confirm the setting.

4. Turning Hourly Timekeeping Function On/Off

1. In the normal time display mode, press the **B2 (MINUTE)** button.
2. Each press will toggle the hourly timekeeping function on or off.
3. When the hourly timekeeping function is activated, a symbol (often a bell or speaker icon) will be displayed on the dial, and the hour will be automatically reported on the hour.
4. When the hourly timekeeping function is turned off, the symbol will disappear.

5. Using the Snooze Function

1. When the alarm is sounding, press the **B4 (TALKING)** button.
2. This will stop the current alarm sound and activate the snooze function.
3. The alarm will sound again after approximately 5 minutes.

6. Broadcasting the Current Time

- In the normal time display mode, press the **B4 (TALKING)** button once.
- The watch will audibly announce the current time in English.

MAINTENANCE

Battery Replacement

Refer to the "Battery Installation/Replacement" section under Setup for detailed instructions on how to replace the watch batteries.

It is recommended to replace batteries when the display becomes dim, the sound volume decreases, or the watch functions become erratic.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blurred or disappears.	Low battery. Replace with new LR44 batteries.
Sound volume is low.	Low battery. Replace with new LR44 batteries.
Watch functions abnormally.	Low battery or internal malfunction. Try replacing batteries first. If the issue persists, contact customer support.
Time or alarm cannot be set.	Ensure you are in the correct setting mode (press MODE button). Follow the instructions carefully.
Hourly timekeeping not working.	Ensure the hourly timekeeping function is turned on (check for the symbol on the display). Press the MINUTE button to toggle.

SPECIFICATIONS

Brand	NC
Model	XJ-665
Manufacturer	Wuhan Prisco
Display Type	Digital
Power Source	Battery Powered
Battery Type	2 x LR44 (included)
Special Features	Alarm, Voice Timekeeping, Snooze Function, Hourly Chime
Product Dimensions	24.5 x 4.2 x 1.5 cm; 59 g
Color	Black
Item Shape	Round

WARRANTY AND SUPPORT

For warranty information or technical support regarding your XINJIA XJ-665 Electronic Voice Timekeeping Watch, please refer to the documentation provided at the time of purchase or contact your retailer. As specific warranty details are not provided in this manual, it is recommended to retain your proof of purchase for any warranty claims.