

JALL WX18039

JALL Wooden Digital Alarm Clock with Wireless Charging (Model WX18039) User Manual

Comprehensive instructions for setup, operation, and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Ensure the device is placed on a stable, flat surface.
- Keep away from water and high humidity environments.
- Do not expose to direct sunlight or extreme temperatures.
- Use only the provided USB power cable. Do not attempt to power with batteries.
- Avoid disassembling the device; refer servicing to qualified personnel.

1. SETUP

1.1 Package Contents

Verify that all items are present in the package:

- JALL Wooden Digital Alarm Clock (Model WX18039)
- USB Power Cable (Power adapter not included)
- User Manual (This document)

1.2 Powering On the Device

The JALL Digital Alarm Clock is powered exclusively via USB. It does not support battery operation.

1. Connect the small end of the USB power cable to the DC 5V port on the back of the alarm clock.
2. Plug the larger end of the USB cable into a standard USB power adapter (e.g., phone charger, computer USB port) or a wall outlet with a USB port.
3. The display will illuminate, indicating the device is powered on.

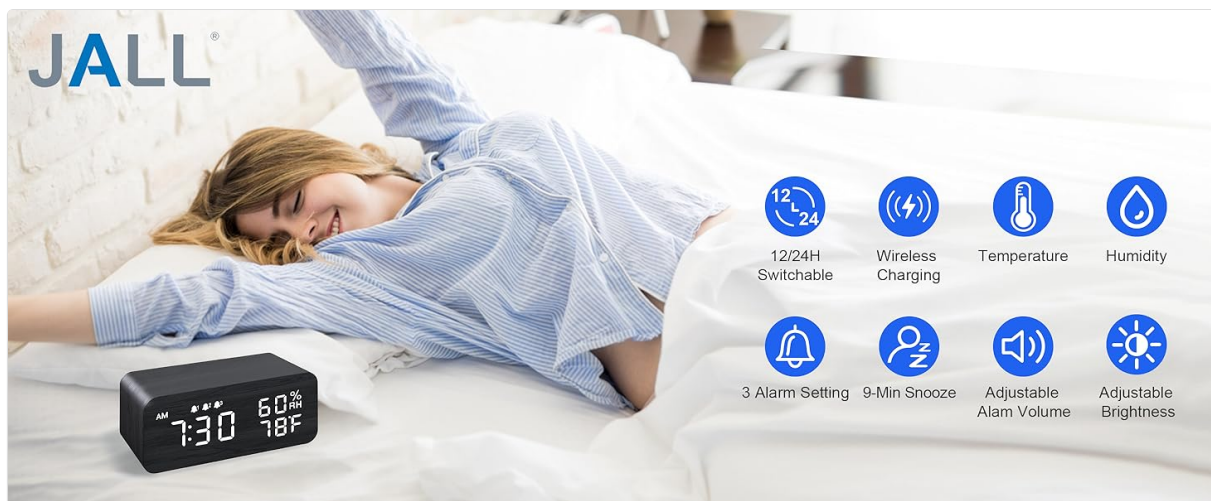


Image: The JALL alarm clock connected to a USB power source, illustrating the 'Powered by USB Only' feature. This clock requires continuous USB power to function.

1.3 Initial Time and Date Settings

Upon first power-on or after a power interruption, you may need to set the time and date.

1. **Accessing Settings:** Locate the 'SET' button (usually on the back or top). Press and hold it for a few seconds until the display flashes.
2. **Setting Time Format (12H/24H):** While the time is flashing, use the 'UP' or 'DOWN' buttons to switch between 12-hour and 24-hour formats. Press 'SET' to confirm.
3. **Setting Hour:** The hour digit will flash. Use 'UP' or 'DOWN' to adjust the hour. Press 'SET' to confirm.
4. **Setting Minute:** The minute digit will flash. Use 'UP' or 'DOWN' to adjust the minute. Press 'SET' to confirm.
5. **Setting Year, Month, Day:** Follow similar steps to set the current year, month, and day. Press 'SET' after each adjustment.
6. **Setting Temperature Unit:** After setting the date, the temperature unit (°C/°F) may flash. Use 'UP' or 'DOWN' to select your preferred unit. Press 'SET' to exit settings.



Image: The alarm clock showing both 12-hour (PM 3:00) and 24-hour (15:00) time formats, demonstrating the switchable display option.

2. OPERATING INSTRUCTIONS

2.1 Display Brightness Adjustment

The clock features adjustable brightness levels to suit your environment.

1. In normal time display mode, press the 'UP' or 'DOWN' button (or a dedicated brightness button if available) to cycle through the brightness levels.
2. There are typically multiple levels, from very dim (L1) to brightest (L6), allowing for comfortable viewing day or night.



Image: A visual representation of the alarm clock's six adjustable brightness levels, ranging from dim (L1) to bright (L6), suitable for various lighting conditions.

2.2 Setting Alarms (AL1, AL2, AL3)

The clock supports up to three independent alarms with customizable modes.

1. **Accessing Alarm Settings:** Press the 'ALARM' button (or 'SET' button repeatedly until 'AL1' appears).
2. **Setting Alarm Time:** When 'AL1' flashes, press and hold 'SET'. The hour will flash. Use 'UP' or 'DOWN' to adjust, then 'SET' to confirm. Repeat for minutes.
3. **Setting Alarm Mode:** After setting the time, the alarm mode will flash (e.g., 'MON-SUN', 'MON-FRI', 'SAT-SUN'). Use 'UP' or 'DOWN' to select the desired mode. Press 'SET' to confirm.
4. **Activating/Deactivating Alarm:** In normal time display, press the 'ALARM' button to cycle through AL1, AL2, AL3. Press 'UP' or 'DOWN' when an alarm is displayed to turn it ON or OFF. An alarm icon will appear on the display when active.
5. Repeat steps for AL2 and AL3 as needed.



Image: The alarm clock displaying three distinct alarm settings, each configurable for 'Everyday', 'Weekday', or 'Weekend' operation, allowing for flexible scheduling.

2.3 Snooze Function

When an alarm sounds, you can temporarily silence it using the snooze function.

1. When the alarm rings, press any button (except the 'OFF' button, if present) to activate snooze.
2. The alarm will pause for approximately 9 minutes and then sound again.
3. To turn off the alarm completely, press the designated 'OFF' button or follow the instructions in the manual for your specific model.

Three Independent Alarms



Image: A person reaching to press the top of the JALL alarm clock to activate the 9-minute snooze function, with the time set to 7:00 AM.

2.4 Wireless Charging Function

The top surface of the alarm clock features a wireless charging pad compatible with most Qi-enabled smartphones.

1. Ensure the alarm clock is powered on.
2. Place your Qi-enabled smartphone directly onto the center of the charging pad on top of the clock.
3. The phone's display should indicate that charging has begun. If not, slightly adjust the phone's position.
4. Remove any thick cases or metallic objects from your phone that may interfere with wireless charging.



Image: A smartphone placed on top of the JALL alarm clock, actively displaying a charging icon, demonstrating the wireless charging capability.

Universal Compatibility

Compatible with most universal wireless charging phone models.



Image: An illustration showing the JALL alarm clock's universal compatibility with various smartphone models for wireless charging, including iPhones and Samsung Galaxy devices.

2.5 Alarm Volume Adjustment

The alarm volume can be adjusted to your preference.

1. In normal time display mode, press the 'VOLUME' button (or a combination of 'SET' and 'UP'/'DOWN' if no dedicated button) to enter volume adjustment mode.
2. Use the 'UP' or 'DOWN' buttons to increase or decrease the alarm volume.
3. Confirm your selection by pressing 'SET' or waiting a few seconds for the setting to save automatically.

Three Independent alarm for a more organized lifestyle

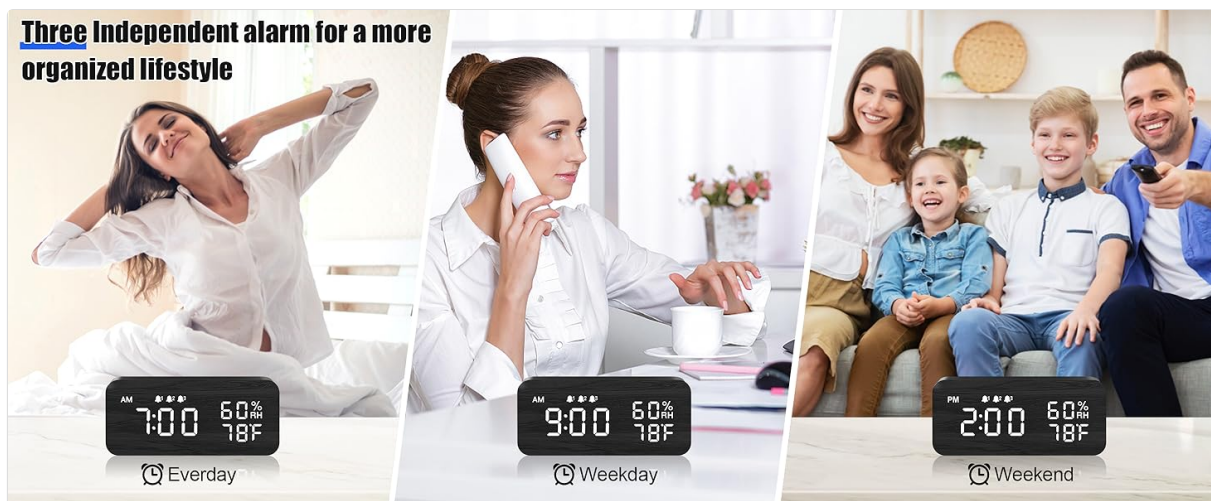


Image: The alarm clock displaying a volume bar with five distinct levels (V1 to V5), indicating the range of adjustable alarm sound intensity from 60dB to 85dB.

3. MAINTENANCE

3.1 Cleaning

- Before cleaning, disconnect the power cable.
- Wipe the surface of the clock with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.
- Ensure no liquid enters the device openings.

3.2 Storage

- If storing the device for an extended period, disconnect it from power.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

Issue	Possible Cause	Solution
Clock not powering on / Display is blank.	No power connection or faulty cable/adaptor.	Ensure the USB cable is securely connected to both the clock and a working power source. Try a different USB adapter or port.
Display is too dim or too bright.	Brightness level is set incorrectly.	Adjust the display brightness using the 'UP' or 'DOWN' buttons as described in Section 2.1.
Alarm not sounding.	Alarm is not activated, volume is too low, or incorrect alarm mode.	Verify the alarm is turned ON (check for alarm icon). Increase alarm volume (Section 2.5). Ensure the alarm mode (Weekday/Weekend/Everyday) is set correctly for the current day (Section 2.2).

Issue	Possible Cause	Solution
Wireless charging not working.	Phone not positioned correctly, phone case interference, or phone not Qi-enabled.	Reposition the phone centrally on the charging pad. Remove thick phone cases or metallic objects. Confirm your phone supports Qi wireless charging. Ensure the clock is powered on.
Clock losing time.	Internal clock drift or power interruptions.	Reset the time as per Section 1.3. Ensure a stable power supply. If the issue persists, contact customer support.

5. SPECIFICATIONS

Feature	Detail
Brand	JALL
Model Number	WX18039
Display Type	Digital LED
Material	Wood
Power Source	Corded Electric (USB DC 5V)
Battery Operation	Not Supported
Alarm Clocks	3 Independent Alarms
Special Features	Wireless Charging, Dimmable Display, Adjustable Volume, Snooze, Temperature Display, Humidity Display
Item Weight	9.9 ounces (0.62 Pounds)
Package Dimensions	7.24 x 3.46 x 3.23 inches

6. WARRANTY AND SUPPORT

6.1 Product Warranty

JALL products are manufactured with quality and performance in mind. This product comes with a standard manufacturer's warranty against defects in materials and workmanship under normal use. Please refer to the product packaging or the official JALL website for specific warranty terms and duration.

6.2 Customer Support

If you encounter any issues or have questions regarding your JALL Wooden Digital Alarm Clock, please contact JALL customer support. For the most up-to-date contact information, visit the official JALL website or refer to your purchase documentation.

Note: Please have your model number (WX18039) and purchase details ready when contacting support.



Comprehensive user manual for the V1021 Digital Alarm Clock by JALL, covering setup, time setting, alarm configuration, volume, brightness, temperature, snooze, reset, product features, and troubleshooting.



Comprehensive guide for the JALL V1502 Digital Alarm Clock, covering time and alarm settings, brightness, sound control, temperature units, snooze, reset functions, and troubleshooting tips. Learn how to set up your alarm clock for optimal use.



Comprehensive instructions and features for the V18050 Alarm Clock, covering setup, time setting, alarm configuration, brightness, volume, snooze, and troubleshooting.



User manual for the JALL Sunrise Alarm Clock, covering setup, operation, features like alarm settings, colorful light modes, FM radio, and troubleshooting.



Comprehensive guide to the V1021 Alarm Clock, covering setup, time and alarm settings, volume, brightness, temperature display, snooze function, reset procedures, product features, and troubleshooting.




Comprehensive instructions for the WX18039 Alarm Clock, covering setup, features like wireless charging, alarm settings, temperature display, and troubleshooting.

WX18039 Alarm Clock Instructions

We value every customer and commit to providing a lifetime warranty service to each and every one of them. Missing accessories, incorrect color, unable to wirelessly charge your phone or any other problems, please contact us: ThreeDucksDirect@outlook.com

Front

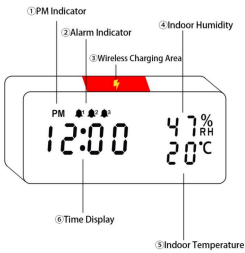

1/8

[pdf] User Manual Instructions Warranty Accessories


Administrator JALL WX18039 Wooden Digital Alarm Clock User Manualmanual internal 2024 06 Manual
|||

WX18039 Alarm Clock Instructions We value every customer and commit to providing a lifetime warranty service to each and every one of them. Missing accessories, incorrect color, unable to wirelessly charge your phone or any other problems, please contact us: ThreeDucksDirect outlook.com Front 1/8 ...
lang:en score:39 filesize: 1.08 M page_count: 8 document date: 2023-03-17

WX18039 Alarm Clock Instructions

We value every customer and commit to providing a lifetime warranty service to each and every one of them. Missing accessories, incorrect color, unable to wirelessly charge your phone or any other problems, please contact us: ThreeDucksDirect@outlook.com

Front

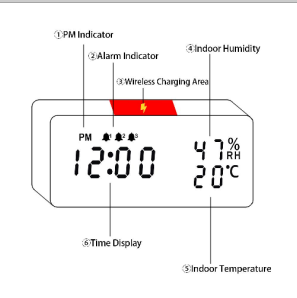

1/8

WX18039 Alarm Clock Instructions and Features

Comprehensive instructions for the WX18039 Alarm Clock, covering setup, features like wireless charging, alarm settings, temperature display, and troubleshooting.
lang:en score:36 filesize: 1.08 M page_count: 8 document date: 2023-03-17