

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [George Foreman](#) /
- › George Foreman 5-Serving Removable Plate Grill and Panini Press User Manual

George Foreman GRP472P

George Foreman 5-Serving Removable Plate Grill and Panini Press

Model: GRP472P



INTRODUCTION

Welcome to the user manual for your George Foreman 5-Serving Removable Plate Grill and Panini Press. This appliance is designed for convenient indoor grilling and pressing of various foods. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFEGUARDS

WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The George Foreman 5-Serving Removable Plate Grill and Panini Press is a versatile kitchen appliance designed for efficient cooking. It features a compact design suitable for various countertops.



Image: Top view of the George Foreman Grill, showcasing its sleek platinum and black design.

Key Features:

- **5-Serving Capacity:** Designed to cook meals for the whole family quickly.
- **Removable Plates:** Nonstick grill plates are easily removable for convenient cleaning.
- **Panini Press Functionality:** Doubles as a panini press for delicious sandwiches.
- **Temperature-Ready Indicator Light:** Illuminates when the grill has reached the optimal cooking temperature.
- **Premium Ceramic Nonstick Coating:** Ensures easy food release and quick cleanup.



Feed the whole family fast!
5 SERVINGS

Image: The George Foreman Grill in use, demonstrating its 5-serving capacity with multiple mini-burgers.



Image: A close-up view of the grill plate, highlighting the premium ceramic nonstick coating and ribbed design.

SETUP

1. **Unpack:** Carefully remove all packaging materials, labels, and stickers from the grill.
2. **Clean Plates:** Wash the removable grill plates and drip tray in warm, soapy water. Rinse and dry thoroughly.
3. **Assemble:** Ensure the drip tray is properly positioned under the front of the grill to collect excess fat and liquids. Insert the clean, dry grill plates securely into their slots.
4. **Placement:** Place the grill on a stable, heat-resistant, and level surface, away from walls and curtains, ensuring adequate ventilation.

OPERATING INSTRUCTIONS

Preheating the Grill:

1. Close the grill lid.

2. Plug the power cord into a standard electrical outlet. The indicator light will illuminate, signaling that the grill is preheating.
3. Allow the grill to preheat for approximately 5 minutes, or until the temperature-ready indicator light turns green. This indicates the grill has reached its optimal cooking temperature.

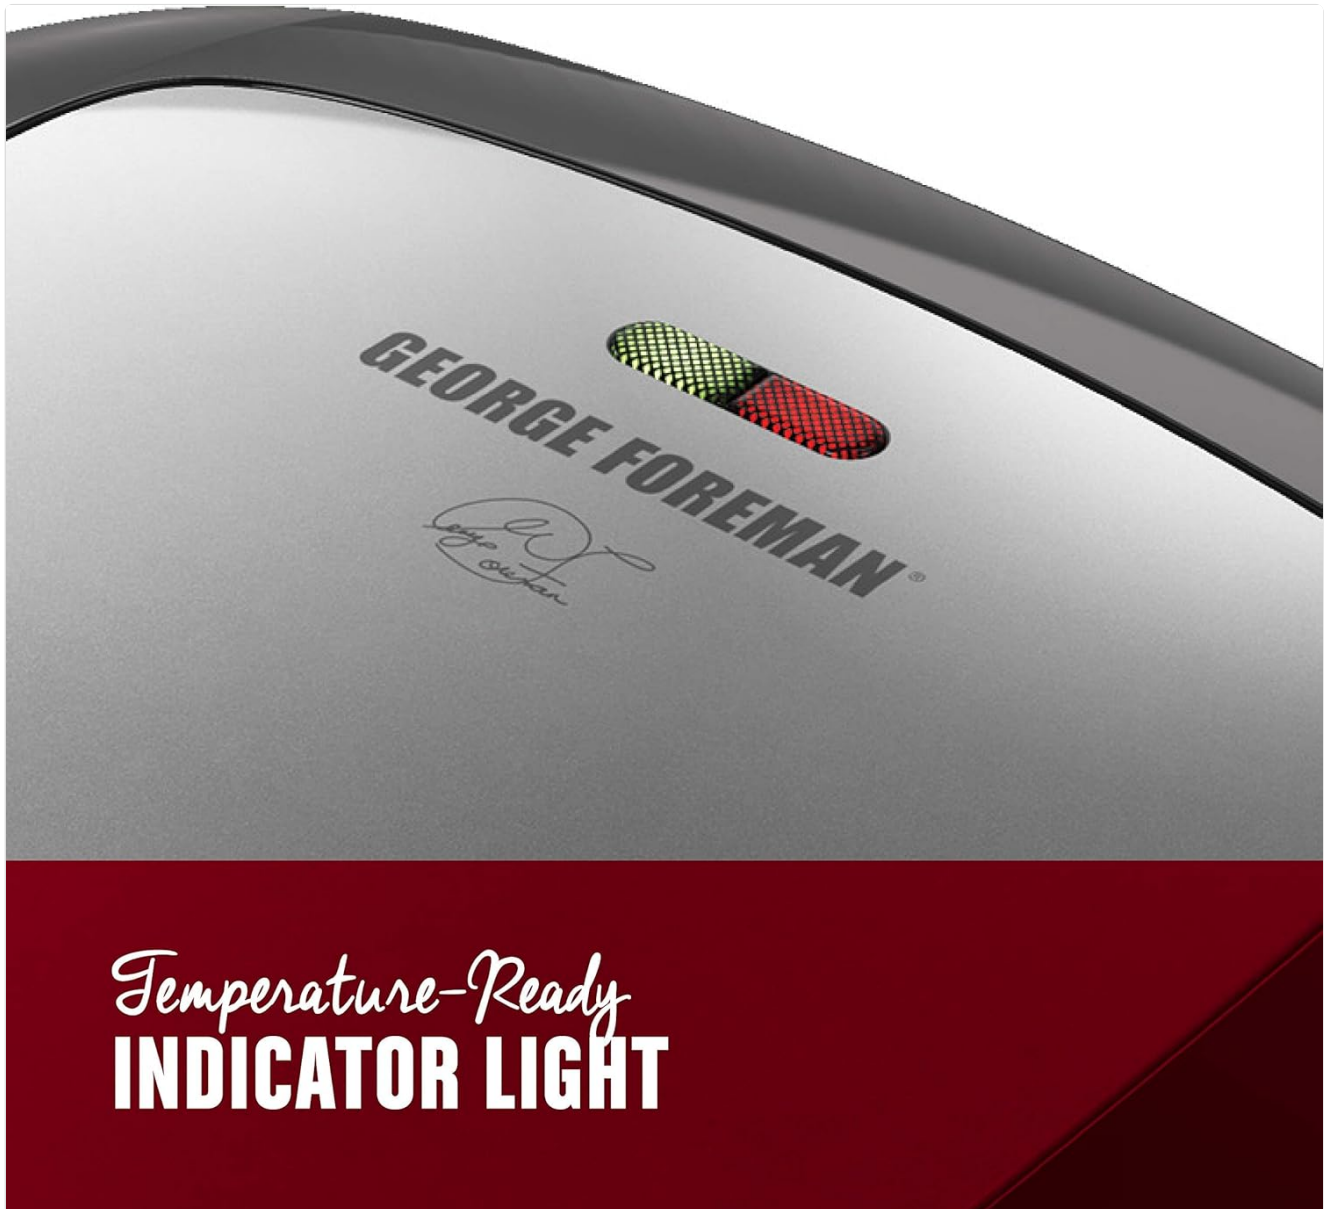


Image: A detailed view of the grill's lid, showing the red and green temperature-ready indicator lights.

Grilling Food:

1. Once preheated, carefully open the grill lid.
2. Place food directly onto the bottom grill plate. Do not overload the grill.
3. Close the lid. The floating hinge allows the top plate to adjust to the thickness of your food.
4. Cook for the recommended time or until desired doneness is achieved. Cooking times will vary based on food type and thickness.
5. Use heat-resistant plastic or wooden utensils to remove food. Do not use metal utensils, as they can damage the nonstick coating.
6. Unplug the grill immediately after use.



Image: The George Foreman Grill open, showing three steaks cooking on the grill plates, with fat dripping into the tray below.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your George Foreman Grill.

1. **Cool Down:** Always unplug the grill and allow it to cool completely before cleaning.
2. **Remove Drip Tray:** Empty the drip tray and wash it in warm, soapy water.
3. **Remove Plates:** Press the plate release buttons and carefully remove the grill plates.
4. **Clean Plates:** The removable grill plates are dishwasher-safe. Alternatively, they can be washed by hand in warm, soapy water using a non-abrasive sponge or cloth. Rinse thoroughly and dry.
5. **Clean Exterior:** Wipe the exterior of the grill with a damp cloth. Do not immerse the grill base in water or any other liquid.
6. **Storage:** Once clean and dry, reattach the plates and store the grill in a clean, dry place.



Dishwasher-Safe
REMOVABLE PLATES

Image: A hand placing one of the removable grill plates into a dishwasher rack, demonstrating their dishwasher-safe feature.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet not working.	Ensure the grill is securely plugged into a working electrical outlet. Check circuit breaker.
Food sticks to plates.	Plates not properly cleaned; food not suitable for nonstick; plates worn.	Ensure plates are clean before use. Lightly brush plates with cooking oil if needed. Avoid using metal utensils.
Smoke coming from grill.	Excess fat buildup; food burning.	Ensure drip tray is empty. Clean plates thoroughly after each use. Reduce cooking time or food quantity.

Problem	Possible Cause	Solution
Indicator light not working.	Appliance malfunction.	If the grill heats but the light doesn't work, contact customer service. If it doesn't heat, refer to "Grill does not heat up" solution.

SPECIFICATIONS

- **Model:** GRP472P
- **Brand:** George Foreman
- **Color:** Platinum
- **Material:** Plastic (housing), Ceramic (plate coating)
- **Special Feature:** Removable Surface
- **Product Dimensions:** 5.5 x 16.5 x 11.13 inches (Height x Width x Depth)
- **Item Weight:** 8.64 pounds
- **UPC:** 649661903246

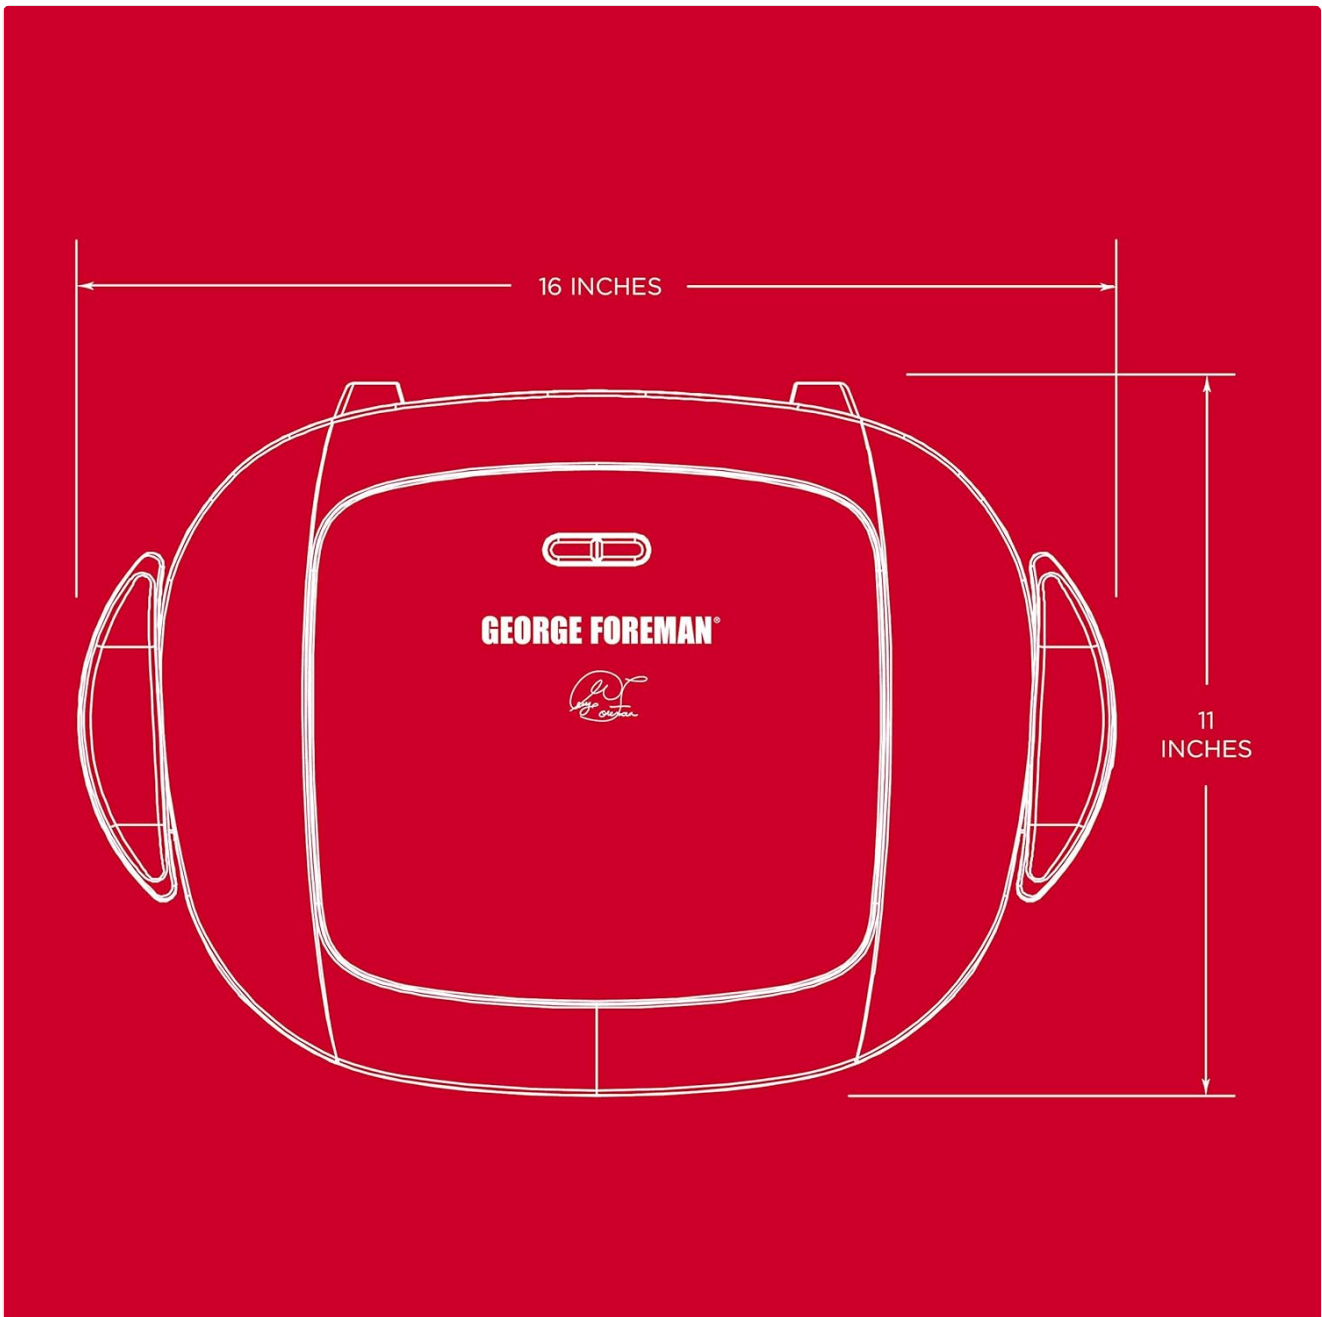


Image: A schematic diagram illustrating the approximate dimensions of the George Foreman Grill, showing 16 inches in width and 11 inches in depth.

WARRANTY AND SUPPORT

This product is covered by a 90-day limited warranty. For warranty service, technical support, or product inquiries, please contact the manufacturer or the retailer from whom the product was purchased.

Please retain your proof of purchase for warranty claims.

© 2023 George Foreman. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

