

ohho OH-AFM06-SS

ohho 6L Air Fryer and Multicooker Instruction Manual

Model: OH-AFM06-SS

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the ohho 6L Air Fryer and Multicooker. Retain this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or storing.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not block any ventilation openings.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.

2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The ohho 6L Air Fryer and Multicooker is designed for versatile cooking, combining air frying with multiple other cooking functions. Ensure all components are present upon unpacking.

Everything You Need

High quality material, All-In-One pot



Image: Exploded view showing the various components of the ohho 6L Air Fryer and Multicooker, including the air fryer lid, steam rack, air fryer basket, non-stick inner pot, stainless steel body, and glass lid.

Package Contents:

- Main Unit (Stainless Steel Body with Control Panel)
- Non-stick Inner Pot (6 Liters Capacity)
- Air Fryer Lid (with heating element and fan)
- Glass Lid (for slow cooking, steaming, etc.)
- Air Fryer Basket
- Steam Rack
- Basic Cooking Utensils (e.g., ladle, tongs, spatula)



FREE

DELUXE VALUE PACK



Image: The ohho 6L Air Fryer and Multicooker displayed with its various accessories, including the inner pot, air fryer basket, steam rack, glass lid, and several cooking utensils.

3. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Inspect the appliance for any damage. Do not use if damaged.

Initial Cleaning:

1. Wash the non-stick inner pot, air fryer basket, steam rack, and glass lid with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Placement:

1. Place the main unit on a stable, level, heat-resistant surface.
2. Ensure there is at least 15 cm (6 inches) of clear space around the appliance for proper air circulation.
3. Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

The ohho 6L Air Fryer and Multicooker features a touch control panel for easy operation across various cooking modes.



Image: Front view of the ohho 6L Air Fryer and Multicooker, highlighting the digital touch control panel with various function buttons and a display for time and temperature.

Control Panel Overview:

- **Digital Display:** Shows time, temperature, and selected cooking mode.
- **Function Buttons:** Dedicated buttons for various cooking presets (e.g., Rice, Steam, Broil, Fries, Stew, Yogurt, Bake, Beef, Saute, Slow Cook, Roast, Dehydrate).
- **Temperature/Time Adjustment:** Buttons to increase or decrease cooking temperature and time.
- **Start/Pause Button:** To begin or temporarily stop a cooking cycle.
- **Power Button:** To turn the appliance on or off.

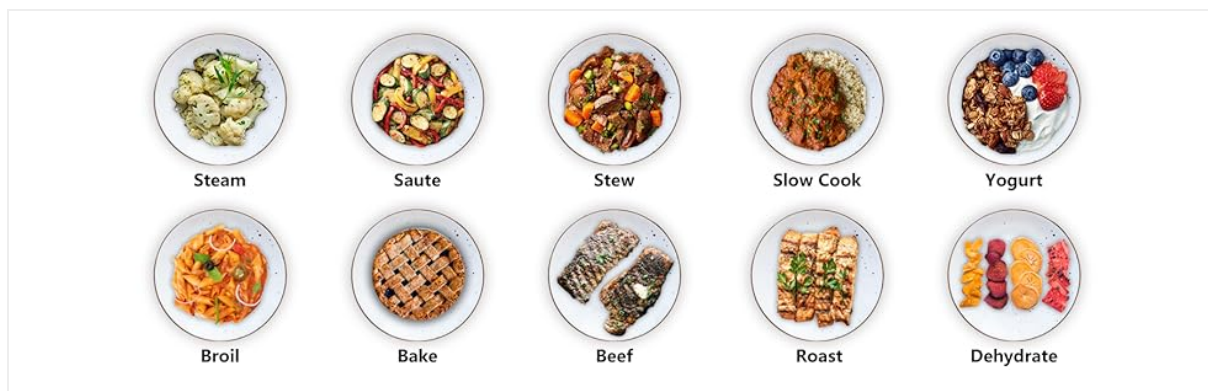


Image: A visual representation of the ohho 6L Air Fryer and Multicooker's multi-function capabilities, displaying icons for Rice, Steam, Broil, Fries, Stew, Yogurt, Bake, Beef, Saute, Slow Cook, Roast, and Dehydrated modes.

Basic Operation:

1. **Prepare Food:** Place ingredients into the non-stick inner pot or air fryer basket as required by your recipe.
2. **Select Lid:** Choose the appropriate lid for your cooking method. Use the Air Fryer Lid for air frying, roasting, broiling, and dehydrating. Use the Glass Lid for slow cooking, steaming, sautéing, and stewing.
3. **Power On:** Press the Power button. The display will illuminate.
4. **Select Function:** Press the desired function button (e.g., 'Fries' for air frying, 'Slow Cook' for slow cooking). The appliance will display default time and temperature settings.
5. **Adjust Settings (Optional):** Use the temperature and time adjustment buttons to modify the default settings according to your recipe or preference. The appliance features precise temperature control.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
7. **Monitor Progress:** For functions using the Air Fryer Lid, you may need to shake or flip food halfway through cooking for even results.
8. **Finish Cooking:** The appliance will beep when the cooking cycle is complete. Carefully remove the lid and food.

Rapid Heat Air Circulation (Air Fryer Mode):

When using the Air Fryer Lid, the 1330W heating element and fan circulate hot air rapidly, ensuring even cooking and crispy results with minimal oil.

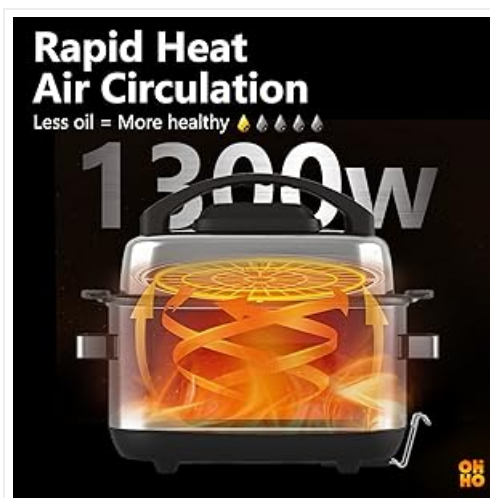


Image: A diagram illustrating the rapid heat air circulation technology within the ohho Air Fryer, showing hot air moving around food for efficient and even cooking.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Dishwasher Safe Parts:** The non-stick inner pot, air fryer basket, steam rack, and glass lid are dishwasher safe. For best results and to prolong their lifespan, hand washing with warm, soapy water is recommended.
3. **Cleaning the Main Unit:** Wipe the exterior of the main unit and the control panel with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
4. **Cleaning the Air Fryer Lid:** Wipe the interior and exterior of the air fryer lid with a damp cloth. For stubborn residue, use a non-abrasive sponge with mild soap. Ensure the heating element area is clean and free of food debris.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.



Image: A visual demonstrating that the removable components of the ohho 6L Air Fryer and Multicooker, such as the inner pot and air fryer basket, are dishwasher safe for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your ohho 6L Air Fryer and Multicooker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the lid is correctly placed and locked.
Food is not cooked evenly.	Overcrowding the basket; insufficient shaking/flipping; incorrect temperature/time.	Do not overcrowd the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the inner pot and air fryer lid thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Error code displayed.	Internal malfunction or sensor issue.	Unplug the appliance, wait 5 minutes, then plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Technical details for the ohho 6L Air Fryer and Multicooker.

Feature	Detail
Brand	ohho
Model Number	OH-AFM06-SS
Capacity	6 Liters
Material	Stainless steel
Wattage	1330 watts
Control Method	Touch
Operation Mode	Automatic
Dishwasher Safe Parts	Yes (Inner Pot, Air Fryer Basket, Steam Rack, Glass Lid)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact ohho customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official ohho website or contact their customer support channels.