

WALKINGPAD C2

WALKINGPAD C2 Folding Treadmill User Manual

Model: C2 | Brand: WALKINGPAD

INTRODUCTION

The WALKINGPAD C2 Folding Treadmill offers a compact and efficient solution for daily exercise in various home and office environments. Its innovative folding design allows for easy storage, while smart control features and a quiet motor ensure a user-friendly and unobtrusive workout experience. This manual provides essential information for setup, operation, maintenance, and troubleshooting to help you maximize your use of the WALKINGPAD C2.

KEY FEATURES

- **Innovative Folding Design:** The unique 180-degree folding mechanism allows the treadmill to be easily stored under furniture, saving significant space. It weighs approximately 55 lbs and features portable wheels for effortless relocation.
- **Smart Control System:** Operate the treadmill via a dedicated mobile application (KS Fit) or the included remote control. It supports both manual speed adjustment and an intelligent automatic mode that adapts to your pace.
- **Adjustable Speed Range:** Offers a speed range from 0.5 MPH to 3.72 MPH, with precise control for various walking intensities.
- **Enhanced Safety and Comfort:** Equipped with a child lock feature, a low-profile 5-inch design, an anti-slip surface, and a 4-layer shock-absorbing belt to ensure stability and joint protection during exercise.
- **Quiet and Efficient Operation:** Features a brushless motor with a peak power of 2HP, operating below 40dB, making it suitable for quiet environments like home offices.
- **Integrated LED Display:** A high-brightness LED display tracks essential workout data including speed, distance, time, and calories burned in real-time.



Figure 1: WALKINGPAD C2 in use, highlighting its folding capability.

Easy to store and use at any time



under bed



under sofa



under desk

Figure 2: The ultra-slim design allows for convenient storage under various furniture pieces.

No assembly required, slim and light to move



Figure 3: The treadmill requires no assembly and features portable wheels for easy movement.



Figure 4: Detailed dimensions and weight specifications of the WALKINGPAD C2.

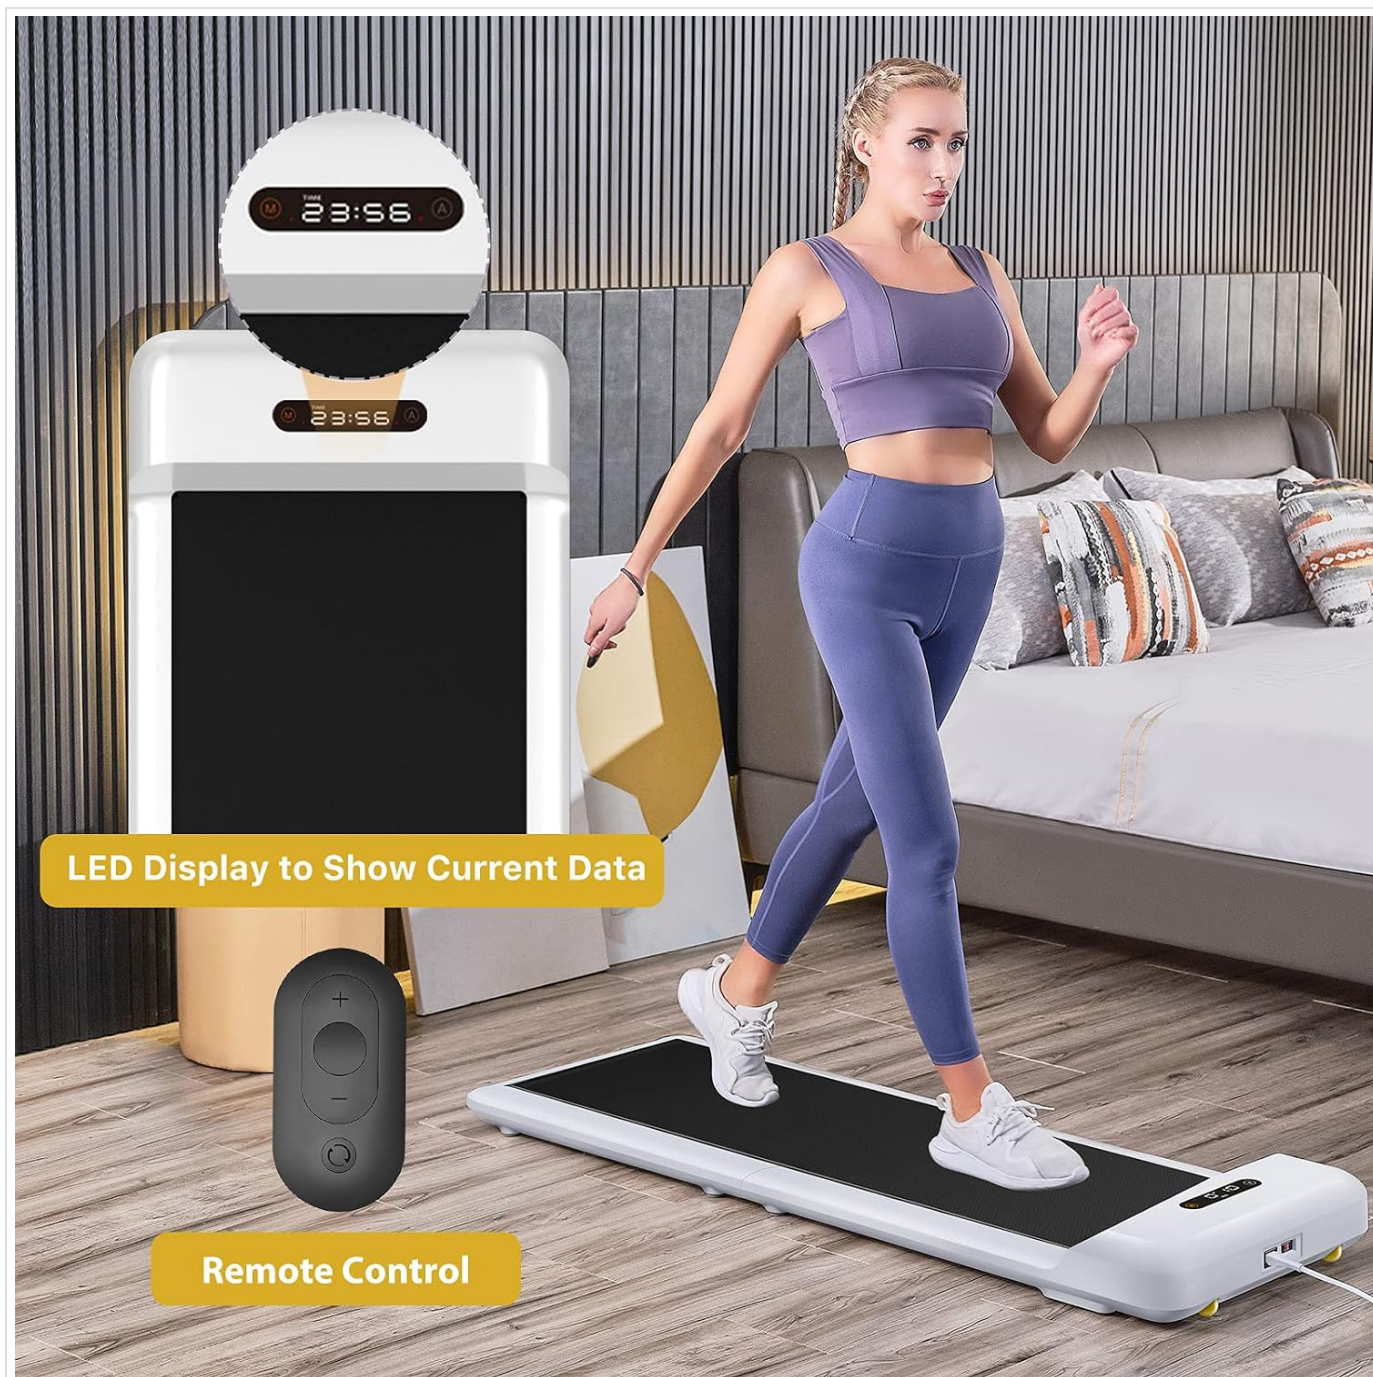


Figure 5: The integrated LED display provides real-time workout data, controlled by a convenient remote.

SETUP GUIDE

Unpacking and Placement

1. Carefully remove the WALKINGPAD C2 from its packaging. It is recommended to have two people for this step due to the unit's weight.
2. Choose a flat, hard surface for placement. Avoid thick carpets or soft cushions, as this can affect performance and safety.
3. Unfold the walking pad slowly until it lies completely flat on the floor. Ensure the folding mechanism locks securely into place.

Initial Power-On

1. Locate the power cord and connect it to the power input port on the treadmill.
2. Plug the power cord into a standard 110V, 60Hz electrical outlet.
3. Press the power switch to turn on the unit. The LED display should illuminate.

Belt Alignment

1. After unfolding, check the walking belt to ensure it is centered. If the belt is off-center, gently fold the unit partially to loosen the belt.
2. Use the provided Allen wrench to adjust the belt tension screws located at the rear of the treadmill. Turn the screw clockwise to move the belt to the right, and counter-clockwise to move it to the left. Make small adjustments (quarter turns) and test.
3. Unfold the treadmill completely and run it at a low speed (e.g., 0.5 MPH) for a few minutes to check alignment. Repeat adjustments if necessary.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the setup and basic features of the WALKINGPAD C2.

OPERATING INSTRUCTIONS

Control Modes

- **Remote Control Mode (M):** Use the provided remote control to manually adjust the speed. Press the middle button to start/stop, and the '+' or '-' buttons to increase or decrease speed in 0.5 MPH increments. The maximum speed in this mode is 1.9 MPH by default, but can be increased to 3.72 MPH via the KS Fit app.
- **Automatic Mode (A):** This mode uses pressure sensors on the treadmill to automatically adjust speed based on your foot placement. Stepping towards the front increases speed, stepping towards the rear decreases speed, and staying in the middle maintains a constant speed. This mode needs to be unlocked via the KS Fit app or by walking 1 kilometer in manual mode.

Using the KS Fit App

- Download the "KS Fit" app from your device's app store (Apple App Store or Google Play).
- Open the app and follow the prompts to pair your WALKINGPAD C2 via Bluetooth.
- The app allows you to unlock all functions, adjust maximum speed, set auto mode sensitivity, and track your workout data (distance, calories, time, steps).

MAINTENANCE

- **Cleaning:** Regularly wipe down the treadmill surface with a damp cloth. Avoid using abrasive cleaners or solvents.
- **Belt Lubrication:** The walking belt may require lubrication after extended use. Refer to the detailed instructions in the full user manual for proper lubrication procedures and frequency.
- **Belt Tension Adjustment:** If the belt feels loose or slips, adjust the tension using the Allen wrench at the rear of the treadmill. Ensure the belt is not too tight, as this can damage the motor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Treadmill does not start	Power cord not connected; Power switch off; Child lock active.	Ensure power cord is securely plugged in; Turn on power switch; Deactivate child lock via KS Fit app.
Walking belt slips or is off-center	Belt tension too loose; Belt misalignment.	Adjust belt tension using the Allen wrench; Realign the belt as per setup instructions.
Unusual noise during operation	Loose components; Lack of lubrication; Belt rubbing.	Check for loose screws and tighten; Lubricate the walking belt; Adjust belt alignment.
Automatic mode not functioning correctly	Automatic mode not unlocked; Incorrect foot placement.	Unlock Automatic mode via KS Fit app; Ensure proper foot placement on the designated speed zones.

SPECIFICATIONS

Attribute	Detail
Brand	WALKINGPAD
Model Name	C2
Color	White
Product Dimensions (Unfolded)	56.88"D x 20.39"W x 4.92"H
Folded Size	32.4" x 20.3" x 5.35"
Item Weight	55 Pounds
Maximum Weight Recommendation	220 Pounds
Material	Aluminum
Maximum Speed	3.72 Miles per Hour
Minimum Speed	0.5 Miles per Hour
Maximum Horsepower	2 Horsepower
Display Type	LCD
Control Program Name	KS Fit
Included Components	Remote Control, Power Cord, Manual

WARRANTY AND SUPPORT

The WALKINGPAD C2 comes with a **1-Year Warranty** from the date of purchase. For any queries, technical assistance, or warranty claims, please contact WALKINGPAD customer support. Support is typically available within 12 hours via the Amazon platform or through the official WALKINGPAD website.

For more information or to access additional resources, please visit the official [WALKINGPAD Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question