

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROCAM](#) /

› [ROCAM Digital Mirror Alarm Clock User Manual](#)

## ROCAM CR1018i

# ROCAM Digital Mirror Alarm Clock User Manual

Model: CR1018i

## INTRODUCTION

Thank you for choosing the ROCAM 8.7" Large LED Digital Mirror Alarm Clock with Bed Shaker. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new alarm clock. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

## PACKAGE CONTENTS

- ROCAM Digital Mirror Alarm Clock
- Bed Shaker (6.6ft cord)
- DC Power Adapter
- User Manual (this document)

## PRODUCT OVERVIEW



*The ROCAM Digital Mirror Alarm Clock with its bed shaker and USB charging capability.*

The ROCAM Digital Mirror Alarm Clock is designed to provide a reliable and versatile wake-up experience, especially for heavy sleepers. It features an 8.7-inch large LED display, a reflective mirror surface, multiple wake-up modes, and convenient charging options.

### **Key Features:**

- **8.7-inch Large LED Mirror Display:** Provides clear time visibility and doubles as a functional mirror.
- **Multiple Wake-up Modes:** Choose from loud buzz, super shaker, or a combination of both.
- **Adjustable Brightness & Volume:** 7 levels of brightness and alarm volume (92dB-110dB) for personalized comfort.
- **Dual Alarm Setting:** Set two independent alarms for different wake-up times.
- **Snooze Function:** Provides an extra 9 minutes of sleep, repeatable up to 9 times.
- **USB Charging Port:** Conveniently charge your mobile devices directly from the clock.
- **Battery Backup:** Maintains time and alarm settings during power outages (CR2032 battery included).

## 3 Wake-up Modes for You Choose



The alarm clock offers three distinct wake-up modes: vibration from the bed shaker, a loud audible alarm, or a combination of both.

## Modern Mirror Design

8.7 inch LED mirror display,stylish and beautiful,  
the HD mirror display can map your beauty.



The 8.7-inch mirror surface is not only for time display but also functions as a practical makeup mirror.



# USB Charger Ports



*The integrated USB charging port allows you to conveniently charge your electronic devices.*

# Dual Alarm Clock

Set 2 Alarms Separately with 2 Buttons

Get up



Afternoon tea



*The dual alarm feature allows for setting two distinct alarms, useful for different wake-up times or reminders.*

## SETUP

### 1. Power Connection

1. Insert the DC power adapter into the "DC IN 5V" port on the back of the alarm clock.
2. Plug the adapter into a standard electrical outlet.
3. The display will light up, and the clock will be ready for initial setup.



*Rear view of the alarm clock showing the power input, USB charging port, and vibrator port.*



*The alarm clock includes a CR2032 battery for backup, preserving settings during power interruptions.*

## **2. Bed Shaker Connection**

1. Locate the bed shaker cable.
2. Plug the bed shaker cable into the "VIBRATOR PORT" on the back of the alarm clock.
3. Place the bed shaker under your pillow or mattress for effective vibration.



*The bed shaker connects to the alarm clock via a dedicated port, providing a strong vibration for heavy sleepers.*

## OPERATING INSTRUCTIONS

---

### 1. Setting the Time

1. Press and hold the **TIME SET** button on the top of the clock. The hour digits will start flashing.
2. Press the **HOUR** button to adjust the hour.
3. Press the **MINUTE** button to adjust the minute.
4. Press **TIME SET** again to confirm the time.

### 2. Setting Alarms (Alarm 1 & Alarm 2)


1. Press and hold the **ALARM 1** button. The alarm hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Press **ALARM 1** again to select the wake-up mode (Buzz, Shaker, or Both). An icon will appear on the display.
4. Press **ALARM 1** once more to confirm.
5. Repeat steps for **ALARM 2** using the **ALARM 2** button.

### 3. Snooze Function

When the alarm sounds, press the large **SNOOZE** button on the top of the clock to temporarily silence the alarm for 9 minutes. This can be repeated up to 9 times.

### 4. Brightness Adjustment


Press the **DIMMER** button repeatedly to cycle through 7 levels of display brightness (L1 to L7) or turn the display completely off.

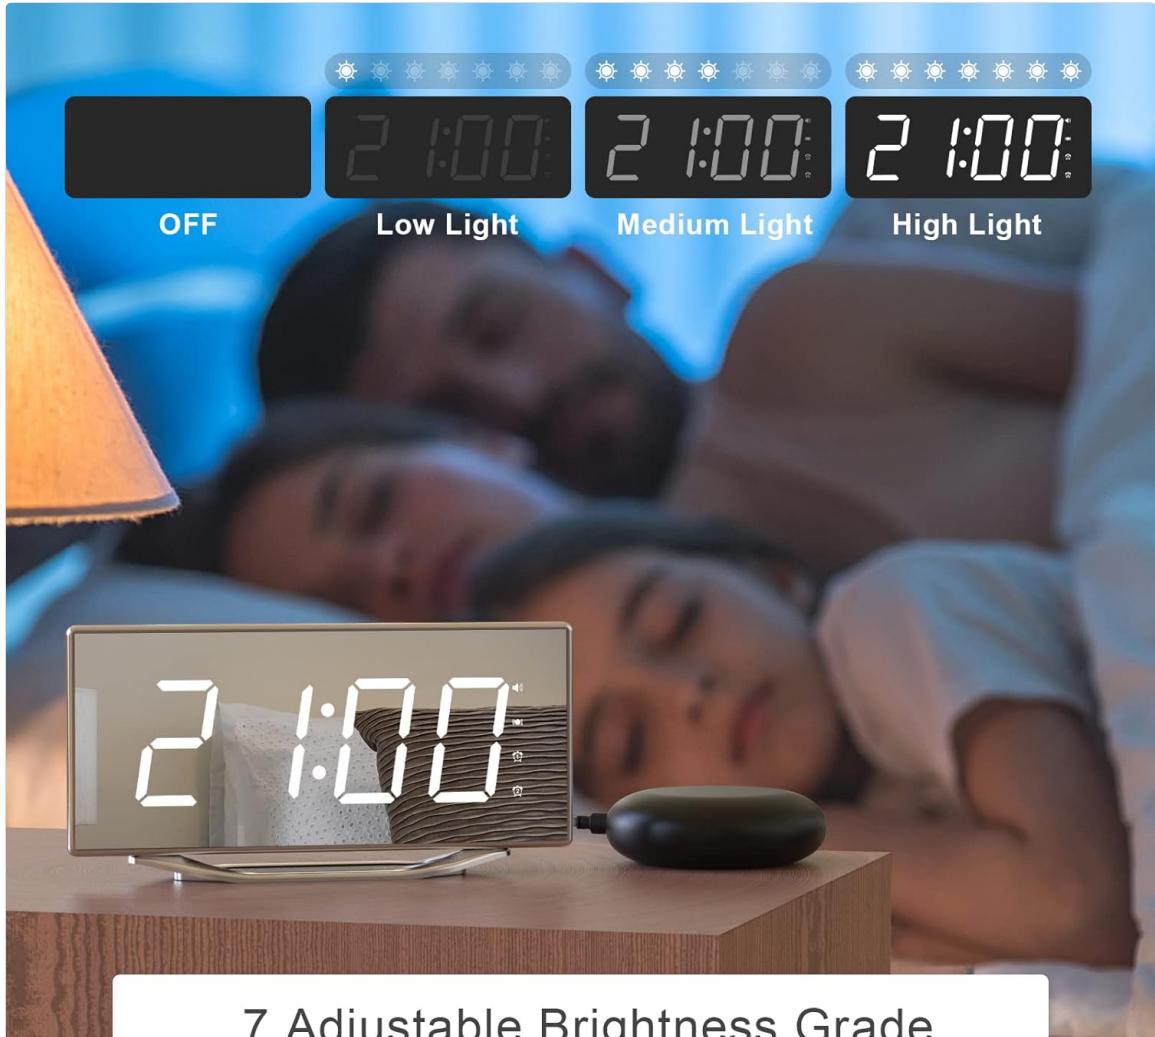

*The display offers 7 adjustable brightness levels to suit various lighting conditions and preferences.*

## 5. Volume Adjustment

Press the **VOLUME/DST** button repeatedly to cycle through 7 levels of alarm volume (L1 to L7, ranging from 92dB to 110dB).

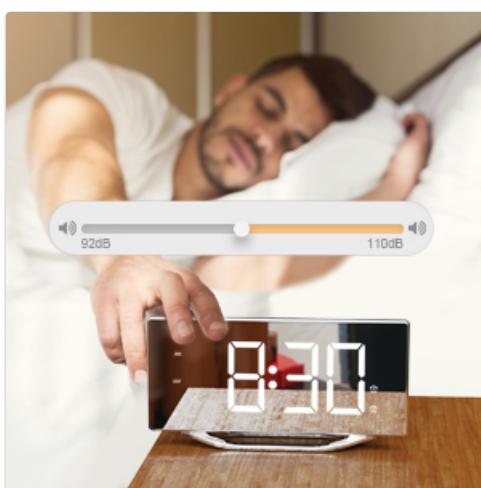

*Adjust the alarm volume from a quiet 92dB to a very loud 110dB across 7 levels.*

## 6. 12/24 Hour Format

Press the **TIME 12/24H** button to switch between 12-hour and 24-hour time formats.

## 7. Alarm Off

To turn off an active alarm, press the **ALARM OFF** button.

## 8. Official Product Video

*Watch this official video demonstrating the ROCAM Extra Loud Alarm Clock with Bed Shaker in action.*

## MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** The CR2032 battery is for backup only. If the clock loses time during a power outage, replace the battery. Open the battery compartment on the back, remove the old battery, and insert a new CR2032 battery with the correct polarity.
- **Storage:** If storing the clock for an extended period, unplug it from the power outlet and remove the backup battery.

## TROUBLESHOOTING

| Issue                         | Possible Cause  | Solution   |
|-------------------------------|---|--|
| Clock display is blank.       | No power or power outage.                               | Ensure the DC adapter is securely plugged into the clock and a working outlet. Check household power.  |
| Alarm does not sound/vibrate. | Alarm not activated, volume too low, or incorrect mode. | Verify alarm is set and activated (alarm icon visible). Increase alarm volume. Ensure correct wake-up mode (Buzz, Shaker, or Both) is selected. Check bed shaker connection. |
| Time is incorrect or resets.  | Power interruption or backup battery depleted.          | Reset the time manually. Replace the CR2032 backup battery.  |
| Display is too bright/dim.    | Brightness setting needs adjustment.                    | Press the <b>DIMMER</b> button to adjust to desired brightness level.  |
| Phone not charging via USB.   | Cable issue or device incompatibility.                  | Ensure USB cable is functional and correctly connected. The USB port provides 5V/1A output.  |

## SPECIFICATIONS

| Feature            | Detail  |
|--------------------|---|
| Brand              | ROCAM   |
| Model Number       | CR1018i   |
| Display Type       | Digital LED   |
| Display Size       | 8.7 inches  |
| Power Source       | Corded Electric, Battery Powered                        |
| Battery Type       | 1 Lithium Metal battery (CR2032, included)              |
| USB Output         | 5V/1A Charging Port                                     |
| Alarm Volume       | 7 levels (92dB-110dB)                                   |
| Brightness Levels  | 7 levels + OFF  |
| Product Dimensions | 8.7"W x 8.7"H (approximate, based on image description) |
| Material           | Plastic   |
| Item Weight        | 6.9 ounces  |

## WARRANTY AND SUPPORT

ROCAM products are designed for reliability and performance. This product comes with a limited warranty. For specific warranty details, please refer to the warranty card included in your package or contact ROCAM customer support.

For further assistance, you may refer to the official User Guide PDF:

[Download User Guide \(PDF\)](#)

You can also visit the [ROCAM Store on Amazon](#) for more product information and support.