

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Roxicosly](#) /

› [Roxicosly Digital Alarm Clock User Manual](#)

Roxicosly CR1018

Roxicosly Digital Alarm Clock User Manual

Model: CR1018

PRODUCT OVERVIEW

The Roxicosly Digital Alarm Clock is designed for modern living, featuring a large LED display with a mirror finish, dual USB charging ports, and customizable settings for brightness and alarm volume. Its sleek design makes it a versatile addition to any room.

ROXICOSLY Multi-functional Digital Alarm Clock

Design for modern life



8.7" Mirror Surface



7-Level Brightness



7-Level Volume



9-Min Snooze



Dual Alarms



12/24H Conversion



Memory Function



2 USB Ports

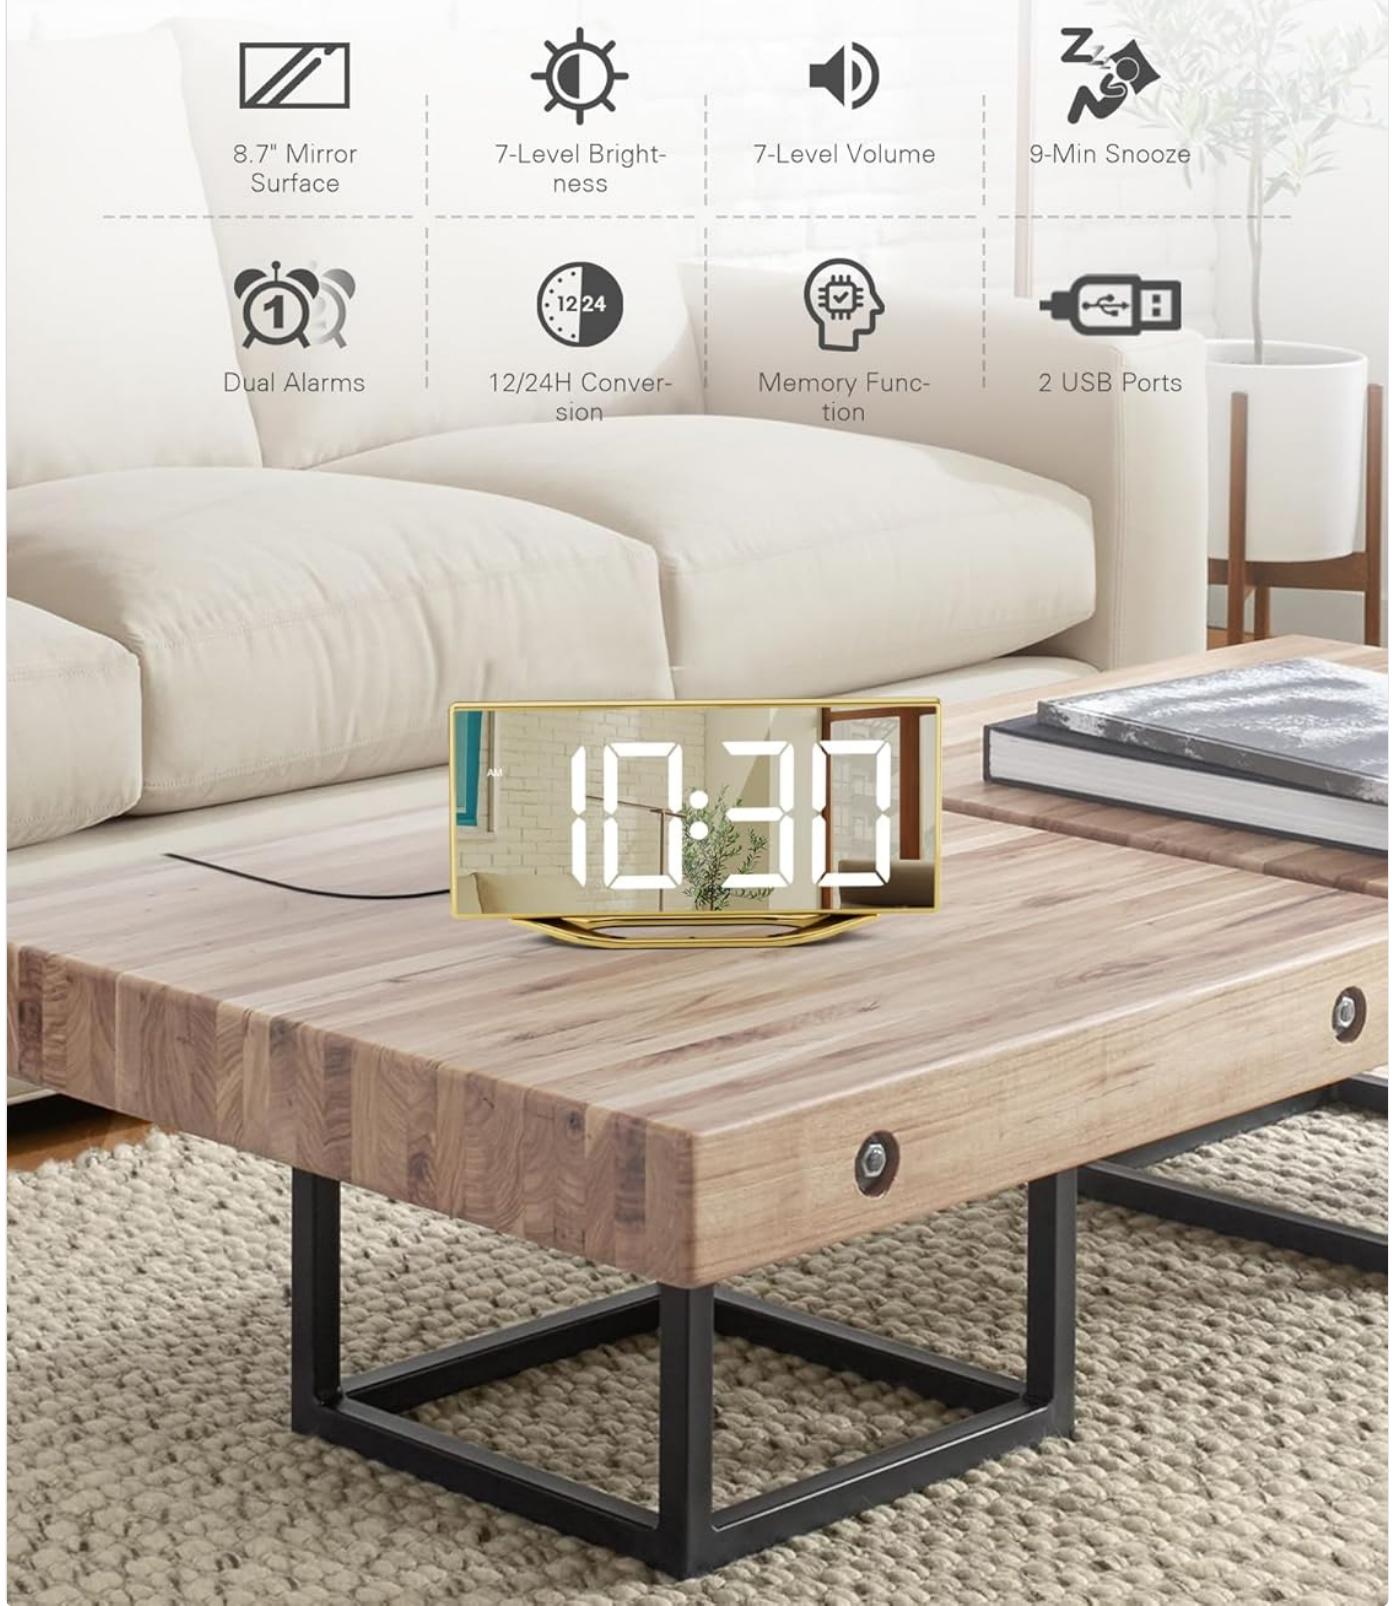


Image: Overview of the Roxicosly Digital Alarm Clock highlighting its features like 8.7" mirror surface, 7-level brightness, 7-level volume, 9-min snooze, dual alarms, 12/24H conversion, memory function, and 2 USB ports.

PACKAGE CONTENTS

- Digital Alarm Clock (Model CR1018)

- DC Adapter
- USB Charging Cable
- User Manual



Image: The digital alarm clock, USB cable, DC adapter, and user manual are shown as included items.

SETUP

Power Connection

1. Connect the provided DC adapter to the power input port on the back of the alarm clock.
2. Plug the DC adapter into a standard wall outlet. The clock display will illuminate.

Battery Backup (CR2032)

The clock includes a built-in CR2032 coin cell battery for power-off memory. This battery saves your time and alarm settings during unexpected power outages. The time will not be displayed during a power outage, but settings will be retained when power returns.



Image: The clock is shown connected to a power outlet, with an illustration of the CR2032 battery for backup.

OPERATING INSTRUCTIONS

Setting Time

1. Press and hold the **MODE** button to enter time setting mode. The hour digits will flash.
2. Use the **HOUR** button to adjust the hour.
3. Use the **MINUTE** button to adjust the minute.
4. Press the **MODE** button again to confirm and exit time setting.

12/24 Hour Format & DST

- To switch between 12-hour and 24-hour (military) time formats, press and hold the **12H/24H** button.
- The clock also supports Daylight Saving Time (DST) adjustment. Refer to the specific instructions in the included paper manual for DST activation.

12/24H Format & DST

Satisfy the reading habits of different people



Image: The clock display is shown in 12-hour format (5:38), 24-hour format (17:38), and with DST enabled (18:38).

Setting Alarms (Dual Alarms)

This clock features two independent alarm settings (Alarm 1 and Alarm 2).

1. Press the **ALARM 1** or **ALARM 2** button to select the desired alarm. The alarm time will flash.

2. Use the **HOUR** button to set the alarm hour.
3. Use the **MINUTE** button to set the alarm minute.
4. Press the selected **ALARM** button again to confirm and activate the alarm. An alarm icon will appear on the display.
5. To turn off an active alarm, press the corresponding **ALARM** button. The alarm icon will disappear.

Dual Alarms & Snooze

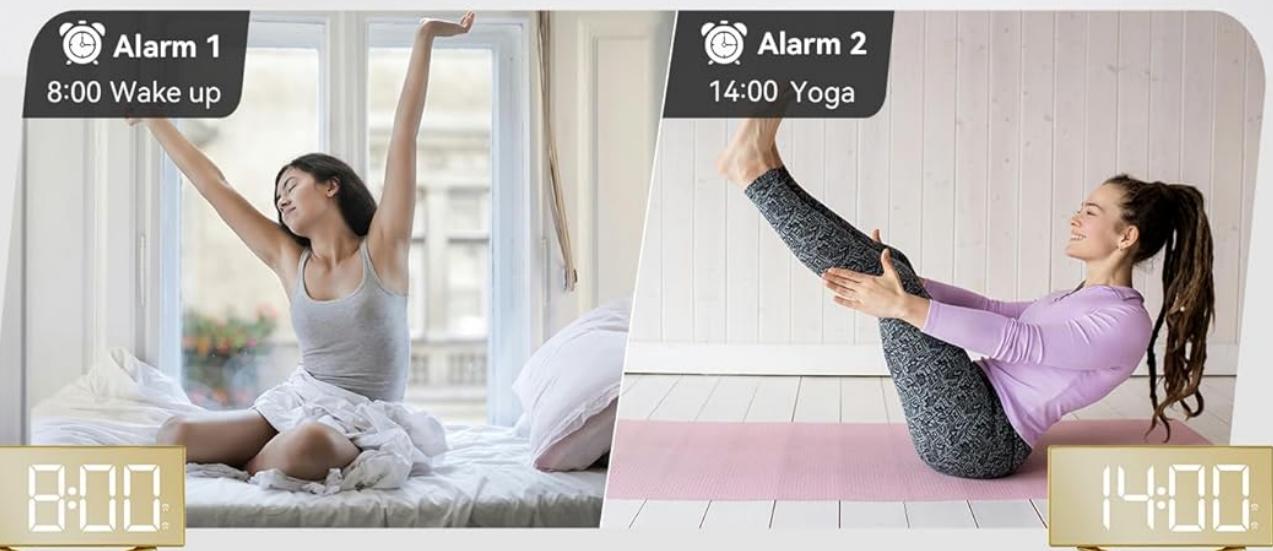


Image: A hand pressing the snooze button on top of the clock, with illustrations of Alarm 1 set for 8:00 AM (wake up) and Alarm 2 set for 2:00 PM (yoga).

Snooze Function

- When an alarm sounds, press the large **SNOOZE** button on top of the clock to temporarily silence the alarm for 9 minutes.
- The alarm will sound again after 9 minutes. This can be repeated multiple times.

Adjusting Brightness (7 Levels)

- Press the **DIMMER** button repeatedly to cycle through 7 levels of display brightness.
- Select the brightness level that is most comfortable for your environment, from very dim for night to bright for daytime visibility.

7 Levels of Brightness Adjustment



Image: The clock display is shown at various brightness levels, from 1-level (dimmest) to 7-level (brightest).

Adjusting Alarm Volume (7 Levels)

- When an alarm is sounding, or while setting an alarm, press the **VOLUME** button to cycle through 7 levels of alarm volume.
- The maximum volume is up to 110 decibels, suitable for heavy sleepers.

7-Level Adjustable Volume

From very low for light sleepers to extra loud for heavy sleepers adults.



Image: A person waking up, with illustrations showing the alarm volume ranging from 92dB to 110dB.

Using USB Charging Ports

- The clock is equipped with two USB charging ports on the back.
- Connect your smartphone, tablet, or other USB-powered devices to these ports using their respective charging cables.
- These ports provide convenient charging at your bedside, reducing clutter.

Dual USB Charging Ports

Convenient 2 USB port for charging electronic devices



Image: A person in bed using the clock's dual USB ports to charge a smartphone, with an inset showing the two USB ports on the back of the clock.

Maintenance

- To clean the clock, gently wipe the surface with a soft, dry cloth.

- Avoid using abrasive cleaners or solvents, as these may damage the mirror finish or display.
- Keep the clock away from excessive heat, direct sunlight, and moisture.

Clear Mirror Surface

Can be used as makeup mirror in daily life



Image: A woman using the clock's clear mirror surface as a makeup mirror, demonstrating its dual functionality.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Clock display is off.	Ensure the DC adapter is securely plugged into both the clock and a working power outlet. Check if the power outlet is functional.
Alarm does not sound.	Verify that the alarm is set and activated (alarm icon visible). Check the alarm volume level.
Time is incorrect after power outage.	The internal CR2032 battery may need replacement if it's depleted. While the battery saves settings, the display will not show time during a power outage. Reset time if necessary.
USB charging not working.	Ensure the clock is powered on. Check the USB cable and the device being charged. The USB ports are for charging only, not data transfer.

SPECIFICATIONS

Feature	Detail
Brand	Roxicosly
Model Number	CR1018
Display Type	LED
Display Size	8.7 inches (diagonal)
Product Dimensions	7.79"W x 4.02"H (approx. 19.8cm W x 10.2cm H)
Item Weight	6.9 ounces (approx. 0.2 kg)
Power Source	Corded Electric (DC Adapter Included)
Battery Backup	1 x CR2032 (for memory retention, not included for main power)
Brightness Levels	7 levels adjustable
Alarm Volume Levels	7 levels adjustable (up to 110dB)
USB Ports	2 (for charging devices)
Time Format	12H/24H selectable
Snooze Duration	9 minutes
Material	Plastic, Acrylonitrile Butadiene Styrene



Image: The clock with its dimensions indicated: 7.79 inches width and 4.02 inches height.

WARRANTY AND SUPPORT


This Roxicosly Digital Alarm Clock comes with a 30-day money-back guarantee and an 18-month warranty from the date of purchase.

For product support, troubleshooting assistance, or warranty claims, please contact Roxicosly customer service through the retailer's platform or the contact information provided in your purchase documentation.

© 2023 Roxicosly. All rights reserved.

Related Documents - CR1018

	<p>Roxicosly CR1024 Projection Alarm Clock User Manual</p> <p>User manual for the Roxicosly CR1024 projection alarm clock. Features include a large display, date, day, temperature, humidity, dual alarms, USB charging, snooze, and backlight. Projects time onto walls and ceilings.</p>
	<p>ROXICOSLY CR1013 Wakeup Alarm Clock User Manual - Features & Setup</p> <p>Comprehensive user manual for the ROXICOSLY CR1013 Wakeup Alarm Clock. Learn how to set time, alarms, use sunrise simulation, sleep mode, light controls, and USB charging.</p>

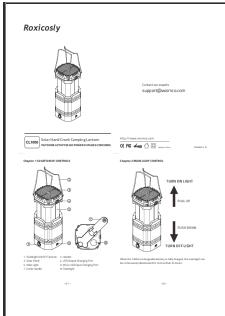

[Roxicosly CL1000 Solar Hand Crank Camping Lantern User Manual](#)

User manual for the Roxicosly CL1000 Solar Hand Crank Camping Lantern. Features include LED flashlight, power bank, USB charging, solar charging, and hand crank power. Ideal for outdoor activities and power outages.