

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Russell Hobbs](#) /
- › [Russell Hobbs 11-in-1 Digital Multicooker 6L \(RHPC3000\) Instruction Manual](#)

## Russell Hobbs RHPC3000

# Russell Hobbs 11-in-1 Digital Multicooker 6L

Model: RHPC3000

## INTRODUCTION

---

The Russell Hobbs 11-in-1 Digital Multicooker is a versatile kitchen appliance designed to simplify your cooking experience. This multicooker combines the functions of a pressure cooker, slow cooker, rice cooker, steamer, and more, offering 11 pre-set programs to prepare a wide variety of meals with ease. Its 6-liter capacity and non-stick bowl make it ideal for family meals and easy cleanup.



Figure 1: Russell Hobbs 11-in-1 Digital Multicooker (RHPC3000)

This image displays the Russell Hobbs 11-in-1 Digital Multicooker in its matte black finish, showcasing its compact design and front control panel.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Russell Hobbs Multicooker:

- **Main Unit:** Houses the heating element and control panel.
- **Lid:** Securely seals the cooking pot for pressure cooking.
- **Inner Cooking Pot:** 6L capacity, non-stick, and dishwasher-safe.
- **Condensation Collector:** Gathers excess moisture.
- **Steam Rack:** For steaming food.
- **Measuring Cup:** For precise ingredient measurement.
- **Serving Ladle:** For serving cooked food.



Figure 2: Included Accessories

This image shows the steam rack, measuring cup, and serving ladle that come with the Russell Hobbs Multicooker.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the inner cooking pot, lid, steam rack, measuring cup, and serving ladle with warm, soapy water. Rinse thoroughly and dry all parts. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the multicooker on a stable, level, heat-resistant surface, away from walls and cabinets to allow for proper ventilation. Ensure there is sufficient space above the unit for steam release.
4. **Condensation Collector:** Attach the condensation collector to the back of the multicooker.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

## OPERATING INSTRUCTIONS

The Russell Hobbs 11-in-1 Digital Multicooker features a user-friendly control panel with pre-set programs and manual adjustments. Refer to the control panel image below for button layout.

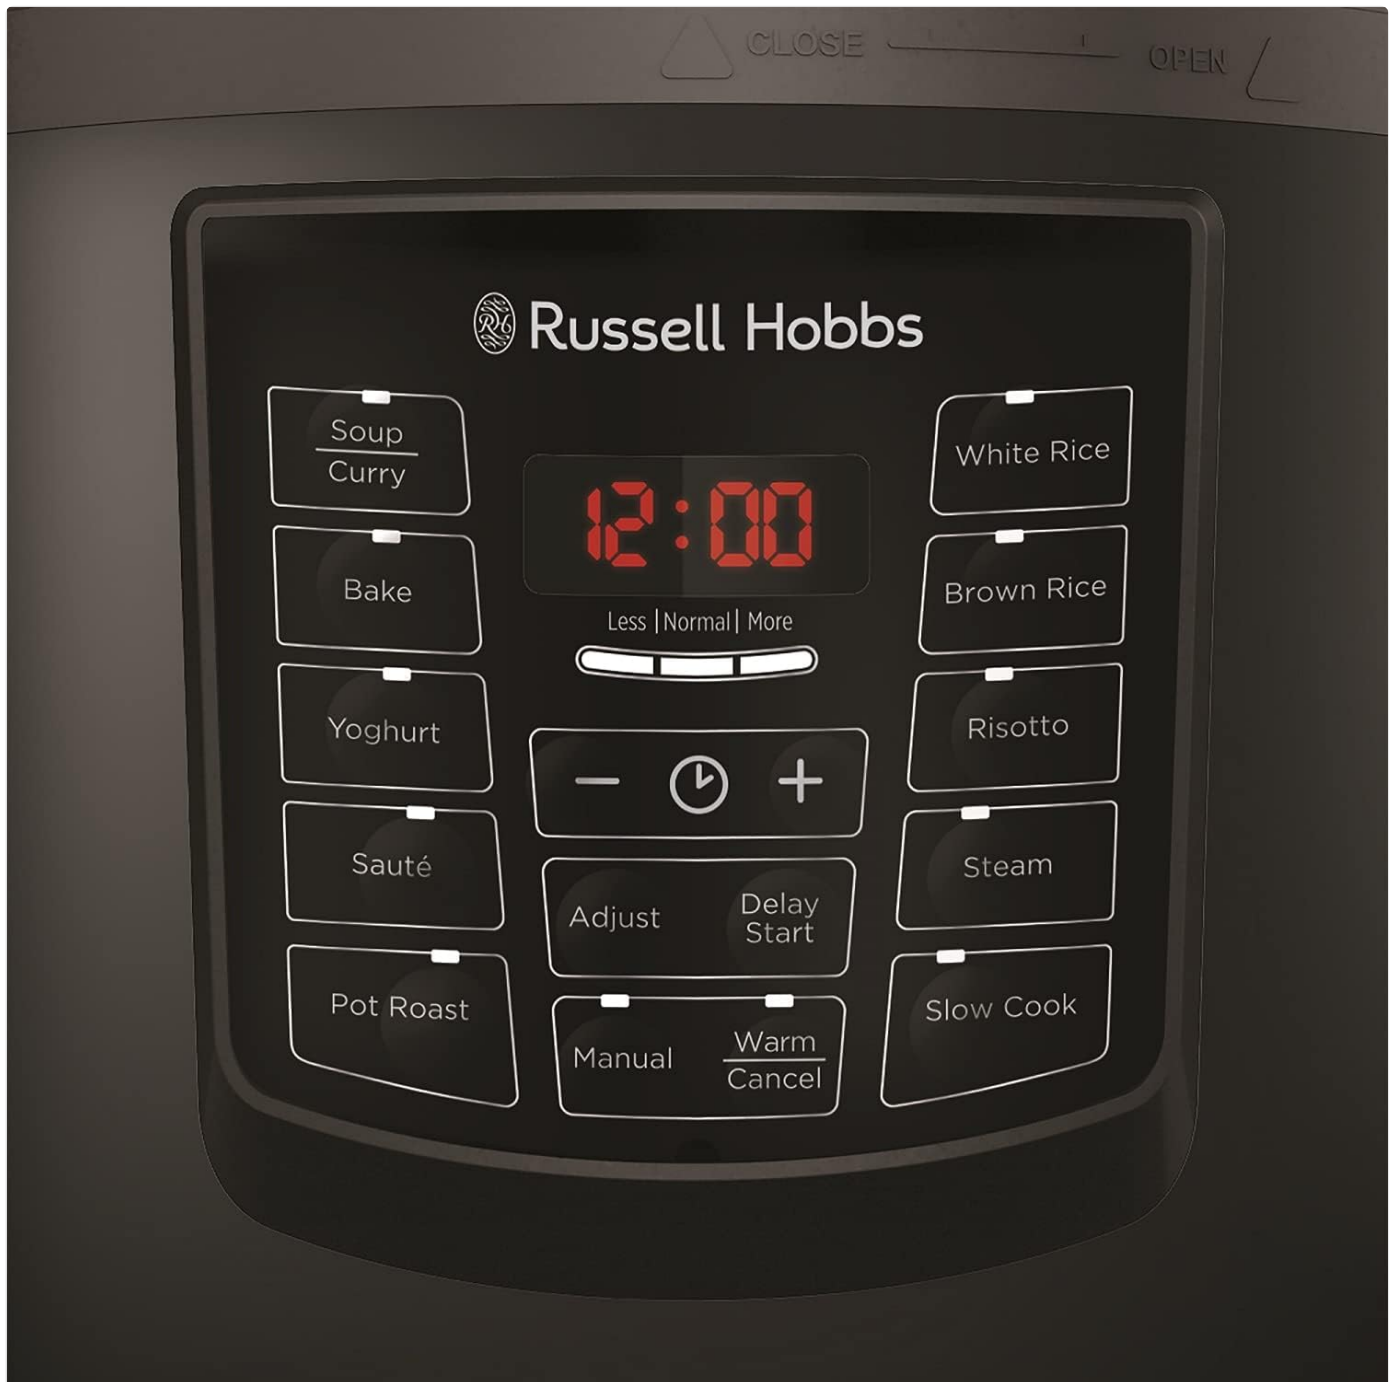


Figure 3: Control Panel Overview

This image provides a detailed view of the multicooker's digital display and various function buttons, including Soup/Curry, Bake, Yoghurt, Sauté, Pot Roast, Manual, White Rice, Brown Rice, Risotto, Steam, Slow Cook, Adjust, Delay Start, and Warm/Cancel.

### Pre-set Programs:

- **Soup/Curry:** Ideal for preparing soups, stews, and curries under pressure.
- **Bake:** For baking cakes, bread, and other desserts.
- **Pot Roast:** Optimized for cooking tender pot roasts.
- **White Rice:** Automatically cooks white rice to perfection.
- **Brown Rice:** Specific setting for brown rice, requiring longer cooking times.
- **Risotto:** Designed for creamy risotto with minimal stirring.
- **Steam:** For steaming vegetables, fish, and other foods.
- **Slow Cook:** For traditional slow cooking, allowing ingredients to simmer over extended periods.
- **Yoghurt:** Creates homemade yogurt by maintaining a consistent temperature for fermentation.

- **Sauté:** Allows you to brown meats and sauté vegetables before pressure cooking or slow cooking.

## General Operation Steps:

1. **Prepare Ingredients:** Place your ingredients into the inner cooking pot. Ensure the liquid level does not exceed the MAX fill line for pressure cooking.
2. **Secure the Lid:** Place the lid on the multicooker and turn it clockwise until it locks into place. Ensure the pressure release valve is in the correct position (usually sealed for pressure cooking).
3. **Select Program:** Press the desired pre-set program button (e.g., "White Rice", "Soup/Curry"). The default cooking time will appear on the display.
4. **Adjust Time/Pressure (Optional):** Use the "Adjust" button and the "+" / "-" buttons to modify the cooking time or pressure level if needed.
5. **Delay Start (Optional):** Press the "Delay Start" button and use "+" / "-" to set a delayed start time.
6. **Start Cooking:** The multicooker will automatically begin the preheating process. Once the desired pressure/temperature is reached, the cooking countdown will begin.
7. **Release Pressure (Pressure Cooking):** Once cooking is complete, allow for natural pressure release or use the quick release method as per recipe instructions. Always exercise caution when releasing steam.
8. **Serve:** Carefully open the lid away from your face and serve your meal.



Figure 4: Multicooker in use for baking

This image shows the Russell Hobbs Multicooker on a kitchen counter, demonstrating its use for baking, with a freshly baked cake beside it.



Figure 5: Multicooker in use for yogurt

This image shows the Russell Hobbs Multicooker on a kitchen counter, demonstrating its use for making yogurt, with prepared yogurt cups nearby.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your multicooker.

- **Always Unplug:** Before cleaning, always unplug the multicooker from the power outlet and allow it to cool completely.
- **Inner Cooking Pot:** The 6L non-stick inner cooking pot is dishwasher-safe for convenient cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Lid:** Wash the lid, sealing ring, and pressure release valve assembly with warm, soapy water. Ensure all food particles are removed from the valve. The sealing ring can be removed for thorough cleaning.
- **Condensation Collector:** Empty and wash the condensation collector after each use.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Accessories:** The steam rack, measuring cup, and serving ladle can be washed with warm, soapy water or placed in the

dishwasher.

- **Storage:** Ensure all parts are completely dry before storing the multicooker. Store in a cool, dry place.

## TROUBLESHOOTING

If you encounter issues with your multicooker, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Multicooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker.
Steam leaking from lid during pressure cooking.	Lid not properly sealed; sealing ring not in place or damaged; food debris on sealing ring.	Ensure lid is locked correctly. Check sealing ring for proper placement and damage. Clean sealing ring and lid rim.
Food not cooking properly.	Incorrect program/time selected; insufficient liquid (for pressure cooking); lid not sealed.	Verify program and cooking time. Add sufficient liquid. Ensure lid is properly sealed.
Error code on display.	Specific internal issue.	Unplug the unit, wait a few minutes, then plug it back in. If the error persists, contact customer support.

For more detailed troubleshooting or issues not listed here, please refer to the full product manual or contact Russell Hobbs customer support.

## SPECIFICATIONS

- **Brand:** Russell Hobbs
- **Model Number:** RHPC3000
- **Capacity:** 6 Litres
- **Material:** Stainless Steel (exterior), Non-stick (inner pot)
- **Colour:** Matte Black
- **Item Weight:** 5.3 kg
- **Special Features:** 8 pressure cooking programs and 3 non-pressure programs
- **Dimensions (approx.):** 36.1 x 32.4 x 31.9 cm (Package Dimensions)

## WARRANTY AND SUPPORT

Your Russell Hobbs 11-in-1 Digital Multicooker (RHPC3000) comes with a **2-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or general inquiries, please visit the official Russell Hobbs website or contact their customer service department. You may also find additional information and recipes at [11-in-1-digital-multi-cooker.com.au](https://www.russellhobbs.com.au/11-in-1-digital-multi-cooker).