

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Szelam](#) /

› [Szelam Digital Alarm Clock 14cm with Large LED Display and USB Charger User Manual](#)

Szelam Digital Alarm Clock

Szelam Digital Alarm Clock User Manual

Model: Digital Alarm Clock

INTRODUCTION

Thank you for purchasing the Szelam Digital Alarm Clock. This manual provides detailed instructions for setting up and operating your new alarm clock. Please read it thoroughly to ensure proper use and to maximize the features of your device.

PRODUCT OVERVIEW

Key Features:

- **Large 14cm LED Display:** High-resolution display clearly shows time, date, and temperature. HD white LED digits ensure visibility from a distance.
- **Adjustable Brightness:** 6 levels of brightness (5% to 100%) to suit various lighting conditions.
- **8 Alarm Ringtones:** Choose from 8 distinct alarm tones.
- **Adjustable Alarm Volume:** 6 volume levels, ranging from 30 to 90 dB.
- **Snooze Function:** Provides an additional 9 minutes of sleep after the alarm sounds.
- **12/24 Hour Format:** Switch between 12-hour (AM/PM) and 24-hour time displays.
- **Date and Temperature Display:** Shows current date and indoor temperature.
- **USB Powered with Battery Backup:** Operates via USB cable; 3 AAA batteries (not included) provide memory function for settings during power outages.

Package Contents:

- 1 x Szelam Digital Alarm Clock
- 1 x USB Charging Cable
- 1 x User Manual



Image: Front view of the Szelam Digital Alarm Clock displaying time, date, and temperature.



5.5" LED Display



Alarm Setting



Snooze Mode



6-Level Brightness



6-Level Volume



8 Alarm Ringtones



Calendar Display



Temperature Display



Plug in / Battery

Image: Graphic illustrating key features: 5.5" LED Display, Alarm Setting, Snooze Mode, 6-Level Brightness, 6-Level Volume, 8 Alarm Ringtones, Calendar Display, Temperature Display, Plug in / Battery operation.

SETUP

Powering the Clock:

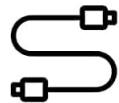
- Connect USB Power:** Insert the provided USB cable into the clock's USB port and connect the other end to a USB power adapter (not included) or a powered USB port. The clock will power on and the display will illuminate.
- Install Backup Batteries (Optional but Recommended):** Open the battery compartment on the back of the clock. Insert 3 new AAA batteries (not included), ensuring correct polarity (+/-). These batteries will preserve your time and alarm settings in case of a power outage. **Note:** The clock display will not remain continuously lit when operating solely on battery power. The display will turn off after 10 seconds to conserve energy; press any button to temporarily illuminate it. For continuous display, USB power is required.



Battery Backup

(for storing the clock time and settings)

Note: Battery only for memory function, the alarm clock only works with the USB cable connected



With Wires Plugged in Use

The alarm clock is equipped with type-C power cable, which can be used when connected to the power supply. It is suitable for long-term use, and the screen will be lit for a long time.



Image: Illustration showing the alarm clock powered by a USB cable for continuous display and a note about battery backup for memory function only.

OPERATING INSTRUCTIONS

Refer to the back panel diagram for button locations.



Image: Rear view of the alarm clock, highlighting the USB port, 6 Levels Volume switch, Alarm/Time Setting buttons, Alarm Sounds Switch, °C/°F switch, and 12/24H switch, and 6 Levels Brightness switch.

1. Setting Time and Date:

1. Press and hold the "SET" button (located on the back) until the hour digits flash.
2. Use the "UP" or "DOWN" buttons to adjust the hour.
3. Press "SET" again to move to minute setting, then use "UP" or "DOWN" to adjust minutes.
4. Continue pressing "SET" to cycle through year, month, and day settings, adjusting each with "UP" or "DOWN".
5. Press "SET" one last time or wait a few seconds for the settings to save automatically.

2. Switching 12/24 Hour Format:

- Locate the "12/24H" switch on the back of the clock.
- Slide the switch to select either 12-hour (with AM/PM indicator) or 24-hour format.

3. Setting the Alarm:

1. Press the "ALARM" button (located on the back) once. The alarm time will appear, and the hour digits will flash.

2. Use the "**UP**" or "**DOWN**" buttons to adjust the alarm hour.
3. Press "**ALARM**" again to move to minute setting, then use "**UP**" or "**DOWN**" to adjust alarm minutes.
4. Press "**ALARM**" one last time or wait a few seconds to save the alarm setting.
5. To activate/deactivate the alarm, press the "**ALARM**" button briefly. An alarm icon (bell symbol) will appear on the display when the alarm is active.

4. Adjusting Alarm Volume:

- Locate the "**6 Levels Volume**" switch on the back of the clock.
- Slide the switch to your desired volume level (L1 to L6).

8 Pleasant Alarm Bells

8 kinds of alarm bells, such as leisurely piano music, sweet bird singing, classic alarm bell, etc. You can choose one according to your mood or preference.



Image: A family enjoying the alarm clock, illustrating the 8 pleasant alarm bells feature and volume adjustment levels.

5. Selecting Alarm Ringtones:

- Locate the "**Alarm Sounds Switch**" on the back of the clock.
- Slide the switch to cycle through the 8 available alarm tones. Select your preferred tone.

6. Using the Snooze Function:

- When the alarm sounds, press the large "**SNOOZE**" button on the top of the clock.

- The alarm will pause for 9 minutes and then sound again.
- To turn off the alarm completely, press any other button on the back of the clock.

7. Adjusting Display Brightness:

- Locate the "6 Levels Brightness" switch on the back of the clock.
- Slide the switch to cycle through the 6 brightness levels (from 5% to 100%).
- The clock also features an automatic dimming function between 6 PM and 7 AM. You can adjust the brightness during these hours, and the setting will be saved for the night mode.



Image: A series of six alarm clock displays showing the different brightness levels from dimmest to brightest.

8. Temperature Display:

- The clock displays the indoor temperature by default.
- To switch between Celsius (°C) and Fahrenheit (°F), locate the "°C/°F" switch on the back of the clock and slide it to your desired unit.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using backup batteries, replace them annually or when the clock fails to retain settings during a power interruption. Ensure correct polarity when inserting new batteries.
- **Storage:** If storing the clock for an extended period, remove the AAA batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off or flickering.	No USB power; loose USB connection; batteries depleted (if running on battery only).	Ensure USB cable is securely connected to a working power source. If using batteries, replace them. Remember, continuous display requires USB power.
Clock does not keep correct time.	Incorrect time setting; backup batteries depleted or not installed.	Re-set the time following the "Setting Time and Date" instructions. Ensure fresh AAA batteries are installed for backup.
Alarm does not sound.	Alarm not activated; alarm volume too low; incorrect alarm time set.	Verify the alarm icon is visible on the display. Adjust alarm volume using the switch. Check and re-set the alarm time.
Snooze function not working.	Snooze button not pressed correctly.	Ensure you press the large "SNOOZE" button on top when the alarm sounds. Pressing other buttons will turn off the alarm.
Display is too bright or too dim.	Brightness level needs adjustment.	Adjust the "6 Levels Brightness" switch on the back of the clock to your preferred level.

SPECIFICATIONS

Brand:	SZELAM
Model:	Digital Alarm Clock
Color:	White
Display Type:	Digital LED
Product Dimensions (L x W x H):	13.31 x 3.81 x 9.3 cm (5.24 x 1.5 x 3.66 inches)
Item Weight:	200 grams
Power Source:	USB Powered (for continuous display), 3x AAA Batteries (for memory backup only, not included)
Special Features:	Temperature Display, Alarm, Snooze, Adjustable Brightness, Adjustable Volume, 12/24H Format



Image: Diagram showing the approximate visual dimensions of the Szelam Digital Alarm Clock, including display size and overall width.

WARRANTY AND SUPPORT

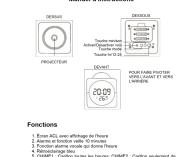
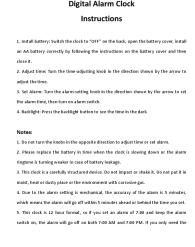
Your Szelam Digital Alarm Clock comes with a **1-year warranty** from the date of purchase. We also offer a **30-day unconditional refund/exchange policy**.

If you encounter any issues or have questions regarding your product, please contact our customer support team via email. We aim to provide solutions within 24 hours.

For further assistance, please refer to the contact information provided on the product packaging or the seller's page.

Related Documents - Digital Alarm Clock

	<p>Szelam EN8813-RGB Digital LED Alarm Clock User Manual</p> <p>Comprehensive user manual for the Szelam EN8813-RGB Digital LED Alarm Clock, covering setup, features, alarm functions, dimming modes, and color options. Learn how to set time, alarms, and customize your clock.</p>

	<p>EN8836-B Digital Alarm Clock User Manual - Features, Setup, and Operation</p> <p>Comprehensive user manual for the EN8836-B Digital Alarm Clock. Learn how to set time, alarms, use snooze, adjust brightness, and understand all features. Includes troubleshooting and safety information.</p>
	<p>Digital Projection Alarm Clock - Instruction Manual</p> <p>Comprehensive instruction manual for the digital projection alarm clock, covering functions like time, date, alarm, temperature, night mode, and projection. Includes detailed operating instructions in multiple languages, synthesized into English.</p>
	<p>Digital Alarm Clock User Manual with Time Projection</p> <p>Comprehensive user manual for a digital alarm clock. Details include setup, operation, alarm functions, chime settings, time projection, and format adjustments. Features include an LCD display, blue backlight, and multiple alarm sounds.</p>
	<p>Digital Alarm Clock Instructions and Guide</p> <p>Comprehensive guide for the Digital Alarm Clock, covering battery installation, time and alarm setting, backlight usage, and important operational notes. Learn how to use your alarm clock effectively.</p>