

[manuals.plus](#) /

› [JOYOUNG](#) /

› [JOYOUNG 4L Multi-Function Rice Cooker Steamer Instruction Manual \(Model: B09LMM3Q4R\)](#)

JOYOUNG B09LMM3Q4R

JOYOUNG 4L Multi-Function Rice Cooker Steamer Instruction Manual

Model: B09LMM3Q4R

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your JOYOUNG 4L Multi-Function Rice Cooker Steamer. Please read it thoroughly before first use and retain it for future reference.

The JOYOUNG Rice Cooker Steamer is designed to simplify your cooking process, offering various functions including rice cooking, oatmeal preparation, and steaming. Its 4-liter capacity is suitable for preparing meals for individuals or families.



Image 1.1: The JOYOUNG 4L Multi-Function Rice Cooker Steamer, featuring a sleek gray and black design with an LED display and control panel.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your JOYOUNG Rice Cooker Steamer for optimal use.



Image 3.1: Exploded view showing the main components of the rice cooker, including the removable lid, multi-steaming system, 5-layer inner pot, and the main unit with its square pot design.

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** A 5-layer non-stick pot for cooking. It has internal markings for water levels.
- **Removable Inner Lid:** Detachable for easy cleaning.
- **Steamer Basket:** For steaming vegetables or other foods.
- **Measuring Cup:** For precise ingredient measurement.
- **Rice Paddle:** Non-scratch utensil for serving cooked rice.

4. SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and accessories.
- Cleaning:** Before first use, wash the inner pot, removable inner lid, steamer basket, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Placement:** Place the rice cooker on a stable, level, heat-resistant surface, away from walls or cabinets to allow for proper ventilation during operation.
- Power Connection:** Ensure the power cord is securely plugged into the appliance's socket and then into a suitable wall outlet.

5. OPERATING INSTRUCTIONS

The JOYOUNG Rice Cooker features a user-friendly control panel with an LED display and six pre-programmed settings.



Image 5.1: Detailed view of the control panel, showing the "Keep Warm", "Delay Timer", "Menu", and "Start/Cancel" buttons, along with the LED display and program indicators.

5.1 General Operation

- 1. Add Ingredients:** Place the desired amount of food (e.g., rice and water) into the inner pot. Ensure the water level does not exceed the maximum fill line.
- 2. Close Lid:** Securely close the lid.
- 3. Select Program:** Press the "Menu" button repeatedly to cycle through the available cooking programs (Oatmeal, White Rice, Brown Rice, Quick Rice, Slow Cook, Steam). The selected program will be indicated on the LED display.
- 4. Start Cooking:** Press the "Start/Cancel" button to begin the cooking process. The display will show the remaining cooking time.
- 5. Keep Warm:** Once cooking is complete, the cooker will automatically switch to the "Keep Warm" function. Press "Keep Warm" to manually activate or deactivate this function.
- 6. Cancel:** To stop a program at any time, press the "Start/Cancel" button.

5.2 Cooking Programs and Estimated Times

C6 Pre-Programmed Settings

For you to explore more possibilities



* Data from Joyoung Laboratory

Image 5.2: Visual representation of the six pre-programmed settings and their approximate cooking durations.

- **1. Oatmeal:** Approximately 10 minutes. Ideal for creamy oatmeal.
- **2. White Rice:** Approximately 43 minutes. For perfectly cooked white rice.
- **3. Brown Rice:** Approximately 51 minutes. For wholesome brown rice.
- **4. Quick Rice:** Approximately 5 minutes. For faster rice cooking when time is limited.
- **5. Slow Cook:** Approximately 6 hours (e.g., for beef stew). Suitable for various slow-cooked dishes.
- **6. Steam:** Approximately 40 minutes (e.g., for salmon). Use with the steamer basket for healthy steamed foods.

Note: Cooking times are approximate and may vary based on ingredients and desired consistency.

5.3 Using the Delay Timer

The Delay Timer allows you to set a future start time for your cooking program.

1. Prepare your ingredients in the inner pot.
2. Select your desired cooking program using the "Menu" button.

3. Press the "Delay Timer" button. Use the "Menu" button to adjust the delay time in hours.
4. Press "Start/Cancel" to confirm the delay timer. The cooker will start automatically after the set delay period.

5.4 Multi-Steaming System

The multi-steaming system allows you to steam food simultaneously while cooking rice or other grains in the inner pot.



Image 5.3: The multi-steaming system in use, showing a steamer basket filled with vegetables placed above rice cooking in the inner pot.

1. Add rice and water to the inner pot as usual.
2. Place the steamer basket with your desired vegetables or other foods on top of the inner pot.
3. Close the lid and select your desired cooking program (e.g., White Rice). The steam generated during the cooking process will cook the food in the steamer basket.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your rice cooker.

- 1. Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. Inner Pot:** Wash the non-stick inner pot with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry.
- 3. Removable Inner Lid:** Detach the inner lid (refer to Image 3.1 for guidance) and wash it with warm, soapy water. Rinse and dry completely before reattaching.
- 4. Steamer Basket, Measuring Cup, Rice Paddle:** Wash these accessories with warm, soapy water, rinse, and dry.
- 5. Main Unit Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- 6. Steam Vent:** Ensure the steam vent on the lid is clear of any food debris.



Image 6.1: A hand demonstrating the removal of the inner lid for thorough cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your JOYOUNG Rice Cooker Steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into both the cooker and a working wall outlet. Check household circuit breaker.
Rice is too hard or undercooked.	Insufficient water; incorrect rice-to-water ratio; lid not properly closed.	Add more water next time; ensure lid is sealed; refer to recipe for correct ratios.
Rice is too soft or mushy.	Too much water; incorrect rice-to-water ratio.	Reduce water next time; refer to recipe for correct ratios.
Steam leaking from lid.	Lid not properly closed; inner lid not seated correctly; seal damaged.	Ensure lid is securely closed. Check if the removable inner lid is correctly installed. Inspect the sealing gasket for damage.
Food sticks to the inner pot.	Non-stick coating damaged; insufficient oil (for some recipes).	Avoid using metal utensils. Ensure proper cleaning. For certain dishes, a small amount of cooking oil can prevent sticking.

8. SPECIFICATIONS

Feature	Detail
Brand	JOYOUNG
Model Number	B09LMM3Q4R
Capacity	4 Litres (8 Cups)
Power / Wattage	860 Watts
Voltage	220 Volts
Material	Aluminium (Inner Pot), Metal (Exterior)
Special Features	Non-Stick, Thermal, Timer, Keep Warm, LED Display
Colour	Silver/Gray
Item Weight	4.2 kg
Package Dimensions	38.5 x 33.79 x 29.7 cm
Product Care	Hand Wash (Inner Pot and accessories)

9. WARRANTY AND SUPPORT

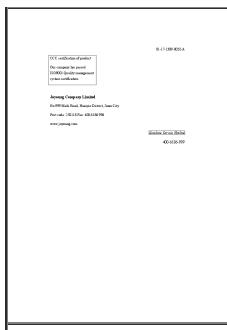
For warranty information and customer support, please refer to the warranty card included with your product or contact JOYOUNG customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit the official JOYOUNG website or contact their customer support channels.

© 2023 JOYOUNG. All rights reserved.

Related Documents - B09LMM3Q4R

	<p><u>Joyoung F-40FY750 Intelligent Rice Cooker Operation Manual</u></p> <p>Official operation instruction manual for the Joyoung F-40FY750 Microcomputer Intelligent Rice Cooker, detailing features, usage, safety precautions, and troubleshooting.</p>
	<p><u>Joyoung Y-50C19 Pressure Cooker Troubleshooting Guide</u></p> <p>A comprehensive troubleshooting guide for the Joyoung Y-50C19 electric pressure cooker, detailing common faults, their causes, and recommended solutions for issues such as lid closure problems, steam leaks, float valve errors, and digital display alarms.</p>

	<p><u>Joyoung DJ13E-ME Full-automatic Domestic Soy Milk Machine Operation Manual</u></p> <p>Comprehensive operation manual for the Joyoung DJ13E-ME Full-automatic Domestic Soy Milk Machine, covering safety precautions, parts identification, usage instructions, maintenance, and troubleshooting.</p>
	<p><u>K08-WY601U</u></p> <p>K08-WY601U</p>
	<p><u>DJ13U-G91</u></p> <p>DJ13U-G91</p>
	<p><u>Y1/Y966</u></p> <p>Y1/Y966</p>