

e-vibra A5C

Vibrating Alarm Watch Silent Medical Reminder Watch

Model: A5C | Brand: e-vibra

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your e-vibra Vibrating Alarm Watch. Designed for discreet reminders, this watch helps users stay on track with daily schedules, medication reminders, potty training, and establishing healthy routines through silent, strong vibrations.

PRODUCT OVERVIEW

Key Features:

- Preset repeat interval timer options: 1min, 5min, 10min, 15min, 20min, 30min, 45min, 60min, 90min, 120min, or 3 hours for various reminders.
- Up to 15 discrete vibrating alarms per day with auto-repeating functionality.
- Silent, strong vibration for discreet reminders without disturbing others.
- Easy-to-use programming directly on the band.
- Power-Off Memory: Saves all alarm settings even when powered off.
- Lightweight design with a soft silicone wristband, fitting wrists from approximately 4" to 7.3" in diameter.
- Rechargeable battery, lasting up to 30 days on a single full charge.
- Flashing LED display for visual notification.
- 12/24 Hour Time format option.

What's in the Box:

- 1 x e-vibra Vibrating Alarm Watch (with silicone strap)
- 1 x Micro-USB Charging Cable
- 1 x English User Manual (this document)

Product Images:



Figure 1: Front view of the e-vibra Vibrating Alarm Watch, showing the digital display with the time 8:08 PM and an alarm icon.



Figure 2: The e-vibra Vibrating Alarm Watch laid flat on a wooden surface, showcasing its full length and the digital display showing 1:00 AM.

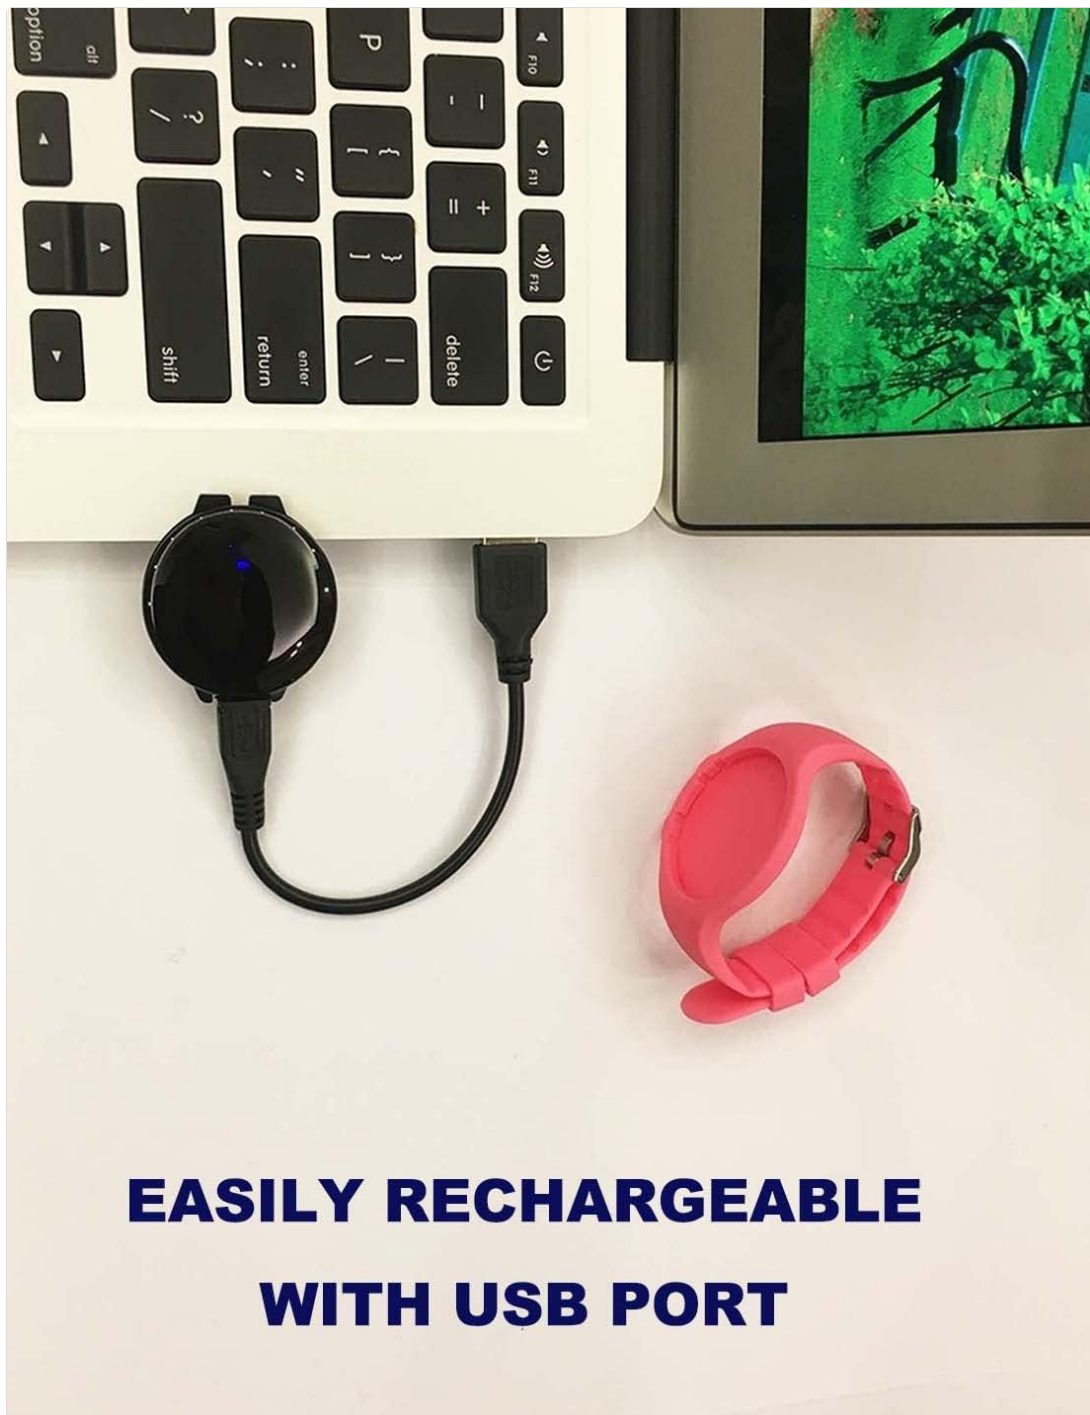


Figure 3: The e-vibra Vibrating Alarm Watch connected to a laptop's USB port with its charging cable, demonstrating the easy rechargeable feature. A pink watch is also visible nearby.

SETUP

1. Initial Charging:

Before first use, fully charge your e-vibra watch. Connect the provided micro-USB charging cable to the watch's charging port and the other end to a USB power source (e.g., computer USB port, wall adapter). A full charge typically takes a few hours and can last up to 30 days depending on usage. Refer to Figure 3 for charging illustration.

2. Powering On:

The watch typically powers on automatically when charged or when a button is pressed. If the

screen is blank, press any button to activate the display.

3. Setting Time and Date:

Detailed instructions for setting the time (including 12/24 hour format) and date are provided in the "Operating Instructions" section. It is recommended to set the correct time immediately after initial charging.

OPERATING INSTRUCTIONS

Your e-vibra watch is designed for simple operation. The watch typically has two main buttons for navigation and setting: a "Mode" button and a "Set" button (or similar functions).

1. Setting the Time (12/24 Hour Format):

1. Press the **Mode** button repeatedly until the time setting mode is displayed (e.g., flashing hours).
2. Use the **Set** button to adjust the flashing hour.
3. Press **Mode** again to move to minutes, then use **Set** to adjust.
4. Continue pressing **Mode** to cycle through other settings like AM/PM (for 12-hour format) or 12/24 hour format selection. Use **Set** to change these options.
5. Once all settings are correct, press **Mode** to exit the setting mode.

2. Setting Daily Alarms (Up to 15 Alarms):

The watch allows you to set up to 15 discrete vibrating alarms for specific times throughout the day. These alarms will auto-repeat daily.

1. Press the **Mode** button until you reach the alarm setting mode (often indicated by an alarm icon).
2. The first alarm time will likely flash. Use the **Set** button to adjust the hour.
3. Press **Mode** to move to minutes, then use **Set** to adjust.
4. After setting the time for the current alarm, press **Mode** to save it and move to the next alarm slot.
5. Repeat steps 2-4 for each of the 15 available alarm slots. If you do not wish to set all 15, simply exit the alarm setting mode after setting your desired number of alarms.
6. To enable/disable an alarm, there may be a specific toggle within the alarm setting mode for each slot. Consult the on-screen prompts.

3. Setting Interval Timer (Repeat Reminders):

This feature is ideal for regular, recurring reminders like potty training or hydration. You can preset the repeat interval.

1. Press the **Mode** button until you reach the interval timer setting mode.
2. The current interval setting (e.g., 1min, 5min) will flash.
3. Use the **Set** button to cycle through the available interval options: 1min, 5min, 10min, 15min, 20min, 30min, 45min, 60min, 90min, 120min, or 3 hours.
4. Once your desired interval is selected, press **Mode** to confirm and activate the interval timer.
5. The watch will now vibrate at the chosen interval until the feature is deactivated or the

watch is powered off.

4. Using the Flashing LED Display:

In addition to vibration, the watch features a flashing LED display to provide a visual cue when an alarm or interval reminder is active. This is particularly useful for users who may not feel the vibration immediately or prefer a visual confirmation.

MAINTENANCE

Cleaning:

To clean your e-vibra watch, gently wipe the silicone strap and watch face with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port is dry before charging.

Battery Care:

The watch contains a rechargeable Lithium Ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the watch regularly, even if not completely depleted.
- Store the watch in a cool, dry place if not used for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not vibrating.	Alarm/Interval timer not set or enabled; low battery.	Ensure alarms/interval timers are correctly set and activated. Charge the watch fully.
Display is blank or unresponsive.	Battery is depleted; watch is off.	Charge the watch. Press any button to wake the display.
Time is incorrect.	Time not set correctly after power cycle or initial setup.	Refer to "Setting the Time" in Operating Instructions to reset the time.
Watch not holding charge.	Charging cable issue; faulty battery; charging port issue.	Ensure charging cable is securely connected. Try a different USB power source. If problem persists, contact customer support.

SPECIFICATIONS

Model Number: A5C

Brand: e-vibra

Package Dimensions: 2.76 x 2.56 x 1.77 inches

Item Weight: 1.76 ounces

Wristband Fit: Approximately 4 inches to 7.3 inches

Face Diameter: 1.57 inches

Battery: 1 Lithium Ion battery (included)

Battery Life: Up to 30 days on a full charge

Clasp Type: Tang Buckle

First Available Date: February 23, 2022

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the e-vibra brand page on Amazon: [e-vibra Store](#)