



Manuals.plus /

› Mienta /

› Mienta Air Fryer AF47634A User Manual

Mienta AF47634A

Mienta Air Fryer AF47634A User Manual

Model: AF47634A | Brand: Mienta

INTRODUCTION

Thank you for purchasing the Mienta Air Fryer AF47634A. This appliance is designed to provide a healthier way to cook your favorite foods, using rapid air circulation to fry, grill, roast, and bake with little to no oil. With an 8-liter capacity, it is ideal for family-sized meals, serving up to 12 persons. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not immerse the cord, plug, or the appliance itself in water or other liquid to prevent electric shock.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The appliance operates on 220V supply voltage and 50Hz. Ensure your power supply matches these specifications.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Mienta Air Fryer.



Figure 1: Front view of the Mienta Air Fryer AF47634A, showing the main unit and handle.



Figure 2: Side view of the Mienta Air Fryer AF47634A, highlighting its compact design.



Figure 3: The air fryer with its non-stick basket removed, showing the interior cavity.

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display with temperature and timer controls.
- **Removable Basket:** Non-stick coated basket for holding food.
- **Handle:** For safely pulling out and inserting the basket.
- **Air Inlet/Outlet:** For proper air circulation during cooking.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Before first use, clean the basket and any removable parts with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.
4. **Power Connection:** Ensure the power cord is fully extended and plugged into a grounded 220V, 50Hz electrical outlet.

OPERATING INSTRUCTIONS

Basic Operation

1. **Preheating (Optional):** For best results, preheat the air fryer for 3-5 minutes at the desired cooking temperature.
2. **Loading Food:** Pull out the basket from the air fryer. Place your ingredients into the basket. Do not overfill; ensure there is enough space for air to circulate.
3. **Setting Temperature and Time:**
 - Plug in the air fryer. The display will light up.
 - Use the temperature control buttons to set the desired cooking temperature, ranging from 80°C to 200°C.
 - Use the timer control buttons to set the cooking time, up to 60 minutes.
4. **Starting Cooking:** Press the start button to begin the cooking process. The air fryer will automatically turn off when the timer reaches zero, indicated by a "ready signal" sound.
5. **Shaking/Flipping (Optional):** For even cooking, especially with smaller items like fries, pull out the basket halfway through the cooking time and shake or flip the contents. Then, slide the basket back in.
6. **Removing Food:** Once cooking is complete, carefully pull out the basket. Use tongs to remove the cooked food.

6-in-1 Functions

The Mienta Air Fryer AF47634A offers versatile cooking options:



Figure 4: Visual representation of the six cooking functions: Defrost, Grill, Roast, Preheat, Bake, and Fry.

- **Fry:** Ideal for crispy foods like French fries, chicken wings, and spring rolls.
- **Grill:** Perfect for grilling meats, fish, and vegetables.
- **Defrost:** Gently thaws frozen items before cooking.
- **Reheat:** Warms up leftovers quickly and efficiently.
- **Roast:** Suitable for roasting larger items like chicken, lamb, or beef.
- **Bake:** Use for baking cakes, muffins, and other baked goods.



Figure 5: Example of food cooked in the air fryer basket, demonstrating its capacity.



Figure 6: The 8-liter capacity can accommodate a whole chicken, rack of lamb, or roast beef, serving up to 12 persons.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Cleaning the Basket and Tray:** The non-stick basket and tray are dishwasher safe. Alternatively, they can be cleaned with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in hot water for 10 minutes.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food particles, use a soft brush. Do not use abrasive cleaners or steel wool.
4. **Cleaning the Exterior:** Wipe the exterior with a damp cloth. Never immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; timer not set.	Ensure the plug is securely in a working outlet. Set the timer.
Food not cooked evenly.	Basket overloaded; food not shaken/flipped.	Do not overload the basket. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Greasy residue from previous use; cooking fatty food.	Clean the basket and interior thoroughly. For fatty foods, add a little water to the bottom of the drawer to prevent smoke.
Food not crispy.	Not enough oil (if applicable); temperature too low; cooking time too short.	Lightly brush food with oil. Increase temperature or cooking time.

SPECIFICATIONS

Feature	Detail
Model Number	AF47634A
Brand	Mienta
Capacity	8 Liters (2.5 KG food capacity)
Power / Wattage	1700 Watts
Voltage	220 Volts
Frequency	50 Hz
Temperature Range	80°C to 200°C
Timer	Up to 60 minutes with auto-off
Material	Aluminum, Plastic
Color	Black
Item Weight	2 Kilograms
Package Dimensions	61 x 42.6 x 42 cm

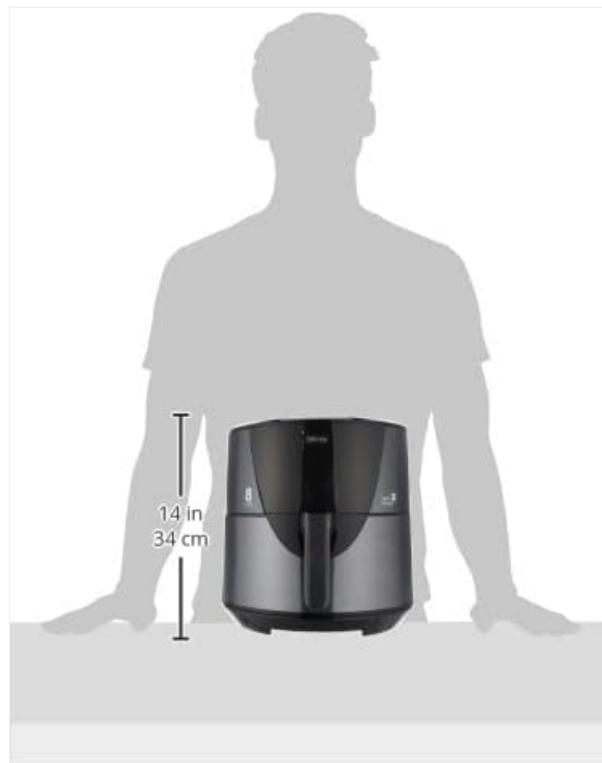


Figure 7: Approximate dimensions of the Mienta Air Fryer AF47634A.

WARRANTY AND SUPPORT

Mienta products are manufactured to the highest quality standards. For warranty information, service, or support, please refer to the warranty card included with your purchase or contact Mienta customer service directly.

Please retain your proof of purchase for warranty claims.

For further assistance, you may visit the official Mienta website or contact their authorized service centers.

