

## Juilist GS-310L

# Juilist Centrifugal Juicer Machine User Manual

Model: GS-310L

## 1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the juicer.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is switched off and unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the feed chute during operation to prevent injury.
- Always use the food pusher provided. Never push food with your fingers.
- Do not operate the appliance if the power cord or plug is damaged.
- This appliance is for household use only. Do not use outdoors.
- Ensure the safety locking arm is securely in place before operating.
- The juicer is equipped with an overheat protection feature that automatically shuts it off to prevent damage. Allow it to cool down before resuming use.

## 2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Juilist Centrifugal Juicer for proper assembly and operation.

# Less price, High nutrition

Make healthy fruits&vegs juice  
with high nutrition and delicious taste

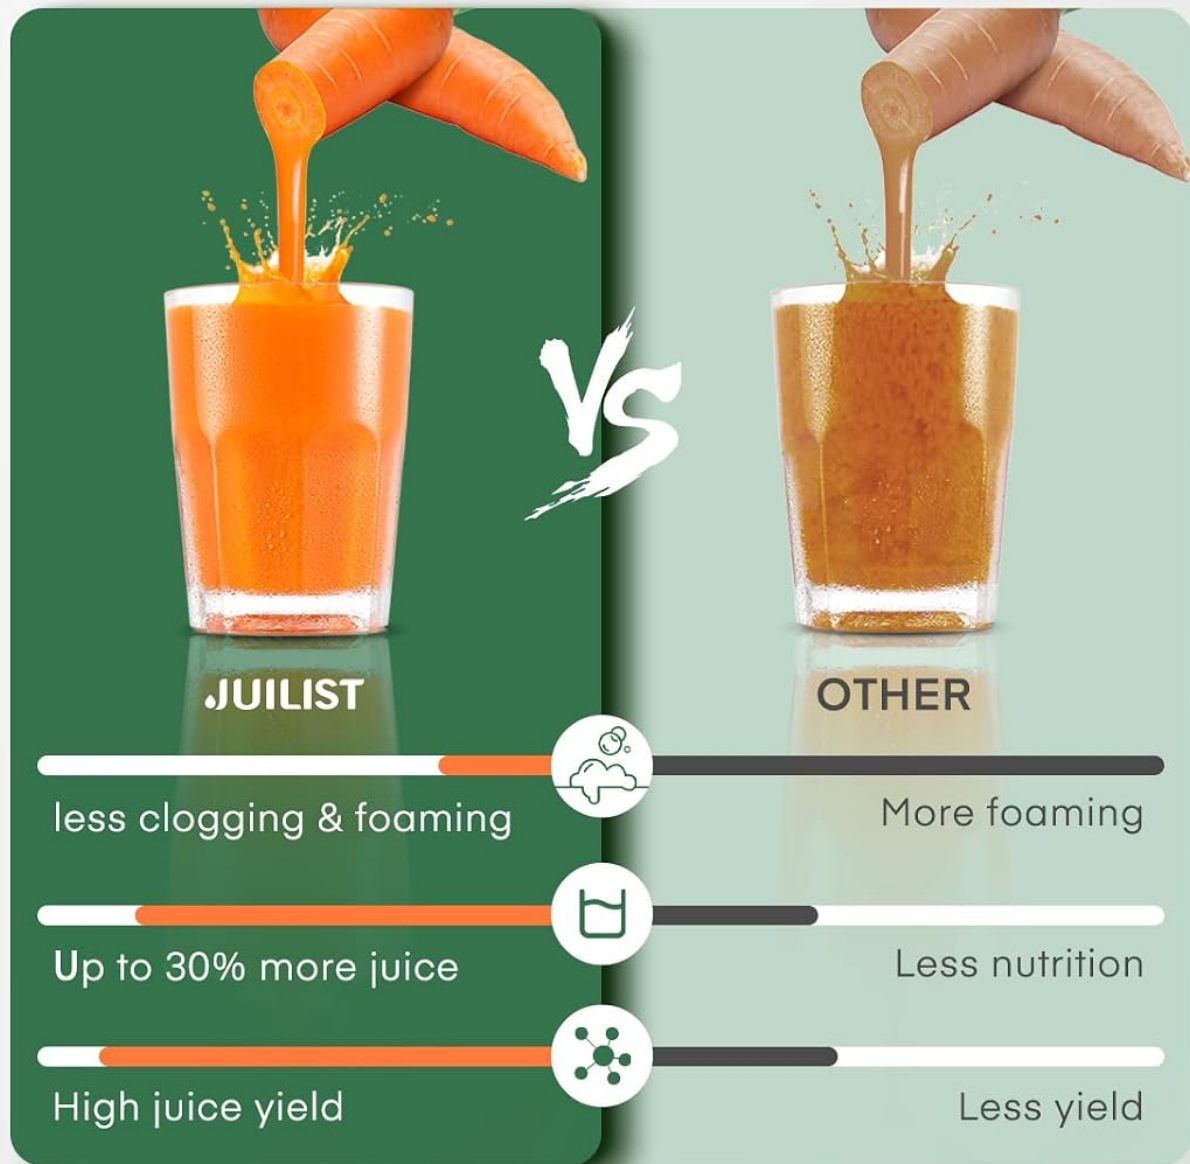


Image: All components of the Juilist Centrifugal Juicer, including the motor base, pulp container, juice collector, filter basket, cover, and food pusher.

1. **Food Pusher:** Used to guide fruits and vegetables into the feed chute.
2. **Feed Chute:** Wide opening for inserting produce.
3. **Transparent Cover:** Secures the internal components and prevents splashes.
4. **Filter Basket (Stainless Steel):** Contains the cutting blade and micro-mesh filter for juice extraction.

5. **Juice Collector:** Collects the extracted juice.
6. **Pulp Container:** Collects the separated pulp.
7. **Motor Base:** Houses the motor and control dial.
8. **Safety Locking Arm:** Secures the cover and ensures safe operation.
9. **Anti-Drip Spout:** Prevents juice from dripping after extraction.
10. **Juice Pitcher:** For collecting and serving juice.
11. **Cleaning Brush:** For easy cleaning of the filter basket.

### 3. ASSEMBLY INSTRUCTIONS

---

Follow these steps to assemble your juicer before first use:

1. Place the motor base on a dry, stable, and flat surface.
2. Insert the pulp container into its designated position on the motor base.
3. Place the juice collector onto the motor base, ensuring the spout aligns with the opening.
4. Carefully place the stainless steel filter basket into the juice collector, pressing down until it is securely seated.
5. Position the transparent cover over the filter basket and juice collector, aligning the feed chute with the opening.
6. Lift the safety locking arm and lock it into the grooves on the transparent cover. Ensure it clicks into place, indicating the juicer is securely assembled.
7. Place the juice pitcher under the anti-drip spout.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1 Before First Use

Before using your juicer for the first time, wash all detachable parts (food pusher, cover, filter basket, juice collector, pulp container, juice pitcher) in warm soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.

#### 4.2 Fruit and Vegetable Preparation



## Easy disassemble & assemble

Removable parts  
are dishwasher safe



## Easy to clean

With less water  
cleaning easily could save  
more water resource



Image: The wide 3-inch feed chute of the Juilist Juicer, designed to accommodate whole or large pieces of fruit and vegetables, reducing preparation time.

- Wash all fruits and vegetables thoroughly.
- Most fruits and vegetables can be juiced without peeling. Remove large seeds (e.g., peaches, mangoes) and hard pits.
- For citrus fruits, peel them before juicing as the rind can impart a bitter taste.

- The 65mm (3-inch) wide feed chute can accommodate whole or large pieces of produce, minimizing the need for extensive pre-cutting.
- Cut larger items into pieces that fit comfortably into the feed chute.

### 4.3 Speed Settings

The Juilist Juicer features two-speed settings for optimal juice extraction from various produce types.



Image: Close-up of the Juilist Juicer's control dial, illustrating the 'I' (low speed) setting for soft fruits and 'II' (fast speed) setting for hard fruits and vegetables.

- **Speed I (Low Speed):** Ideal for softer fruits and vegetables such as oranges, grapes, watermelon, tomatoes, and strawberries.
- **Speed II (Fast Speed):** Suitable for harder fruits and vegetables like carrots, apples, celery, ginger, and beets.
- Selecting the correct speed maximizes juice yield and flavor.

### 4.4 Juicing Process

# Juilst centrifugal juice extractor

Focus on making healthy,  
simple, delicious homemade juice



Image: The Juilst Juicer in action, demonstrating the pouring of fresh orange juice from the 500ml juice pitcher, highlighting the built-in foam separator for smoother juice.

1. Ensure the juicer is properly assembled and the juice pitcher is in place.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the control dial to the desired speed setting (I or II). The button light will illuminate, indicating the juicer is operating.
4. Gradually feed the prepared fruits and vegetables into the feed chute using the food pusher. Apply gentle, steady pressure. Do not force the produce.
5. The juicer will extract juice into the pitcher and separate pulp into the pulp container.
6. Once juicing is complete, turn the control dial to the '0' (off) position and unplug the appliance.
7. The built-in foam separator in the juice pitcher helps ensure smooth, foam-free juice.

## 4.5 Important Notes

### Not Recommend Jucing



Image: Visual guide indicating fruits and vegetables generally not recommended for juicing with a centrifugal juicer, such as ginger, grapes, bananas, and pineapple.

- Do not juice overly ripe or soft fruits as they may clog the filter.

- Avoid juicing fibrous vegetables like kale or spinach in large quantities without alternating with harder produce, as they can wrap around the filter.
- Fruits with low water content, such as bananas and avocados, are not suitable for centrifugal juicing.
- For best results, juice fresh produce.

## 5. CARE AND CLEANING

---

Regular cleaning ensures optimal performance and longevity of your juicer.



Image: Demonstrates the ease of cleaning, with removable parts being dishwasher safe and the filter basket being cleaned manually with the included brush under running water.

1. **Disassembly:** After unplugging, unlock the safety locking arm and remove the transparent cover, filter basket, juice collector, and pulp container.
2. **Rinsing:** Immediately rinse all removable parts under running water to prevent pulp from drying and sticking.
3. **Cleaning Filter Basket:** Use the provided cleaning brush to thoroughly clean the micro-mesh filter. This is crucial for efficient juicing.
4. **Washing:** All removable parts are dishwasher safe (top rack recommended) or can be hand-washed with warm, soapy water.
5. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse it in water.
6. **Drying:** Ensure all parts are completely dry before reassembling or storing.
7. **Anti-Drip Spout:** The anti-drip design minimizes mess, but ensure the spout is clean after each use.

## 6. TROUBLESHOOTING

If you encounter issues with your Juilist Juicer, refer to the following common problems and solutions:



Image: A visual representation of seeking solutions, with a large question mark and a person using a laptop.

| Problem                            | Possible Cause                                                                 | Solution                                                                                                                                                        |
|------------------------------------|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Juicer does not turn on.           | Not plugged in; Safety locking arm not engaged; Overheat protection activated. | Ensure power cord is securely plugged in. Check if the safety locking arm is fully locked. If overheated, unplug and let cool for 30 minutes before restarting. |
| Low juice yield or excessive pulp. | Incorrect speed setting; Filter basket clogged; Produce not fresh.             | Use appropriate speed for produce type. Clean the filter basket thoroughly. Use fresh, firm fruits and vegetables.                                              |
| Juicer stops during operation.     | Overload or overheat protection activated.                                     | Turn off, unplug, and remove any blockages. Allow the motor to cool down for 30 minutes before resuming. Avoid overloading the feed chute.                      |
| Excessive vibration or noise.      | Filter basket not properly seated; Juicer not on a flat surface.               | Ensure the filter basket is securely in place. Place the juicer on a stable, flat surface.                                                                      |
| Juice leaks from under the cover.  | Cover not properly secured; Too much liquid in the juice collector.            | Ensure the cover is correctly aligned and the safety locking arm is fully engaged. Empty the juice pitcher when it reaches its maximum capacity.                |

## 7. SPECIFICATIONS

| Feature          | Detail           |
|------------------|------------------|
| Brand            | Juilist          |
| Model Name       | GS-310L          |
| Power            | 400W             |
| Voltage          | 120 Volts (AC)   |
| Number of Speeds | 2 (Low and Fast) |

| Feature               | Detail                                  |
|-----------------------|-----------------------------------------|
| Feed Chute Size       | 65mm (3 inches)                         |
| Capacity              | 17 Fluid Ounces (Juice Pitcher)         |
| Product Dimensions    | 10.24"D x 10.63"W x 7.09"H              |
| Item Weight           | 6.29 pounds                             |
| Material              | Food-grade 304 Stainless Steel, Plastic |
| Dishwasher Safe Parts | Yes (removable parts)                   |

## 8. WARRANTY AND CUSTOMER SUPPORT

Juulist products are designed for reliability and performance. For warranty information, product support, or to inquire about replacement parts, please contact Juulist customer service through your retailer or the official brand website. Please retain your proof of purchase for warranty claims.

© 2023 Juulist. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question