

Midea MB-FB50E205W

Midea Micom Rice Cooker User Manual

Model: MB-FB50E205W

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Midea Micom Rice Cooker.

1. PRODUCT OVERVIEW

The Midea Micom Rice Cooker is a versatile 10-in-1 multi-functional appliance designed to simplify your cooking. It features advanced Micom (microcomputer) technology for precise temperature control, ensuring perfectly cooked results for various dishes. With a 5L capacity, it can cook up to 10 cups of dry rice, yielding approximately 20 cups of cooked rice.



Figure 1: Midea Micom Rice Cooker with inner pot of cooked rice.

This appliance offers a wide range of cooking functions, including:

- White Rice
- Brown Rice
- Mixed Rice
- Congee
- Soup
- Oatmeal
- Steam
- Slow Cook
- Reheat
- Quick Rice

It also includes convenient features such as an automatic Keep Warm function and a programmable Timer/Delay function.

2. SETUP AND FIRST USE

2.1 Unpacking

Carefully remove the rice cooker and all accessories from the packaging. Retain the packaging materials for future storage or transport.

2.2 Included Components

Verify that all the following components are included in your package:

- Midea Micom Rice Cooker Unit
- Removable Inner Pot
- Measuring Cup
- Rice Paddle
- Instruction Manual (this document)





Figure 2: Midea Micom Rice Cooker with inner pot, measuring cup, and rice paddle.

2.3 Before First Use

Before using the rice cooker for the first time, thoroughly clean all removable parts that will come into contact with food. This includes the inner pot, measuring cup, and rice paddle.

- Wash the inner pot, measuring cup, and rice paddle with warm, soapy water.
- Rinse thoroughly and dry completely.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview

The control panel features a digital display and various function buttons. Familiarize yourself with the layout before operation.



Figure 3: Detailed view of the Midea Micom Rice Cooker's control panel, highlighting function buttons like Brown Rice, Mixed Rice, Congee, Soup, Steam, Oatmeal, Slow Cook, Reheat, Timer, Cook, Quick Rice, White Rice, Menu, Delay, and Keep Warm.

- **Menu:** Cycles through various cooking functions.
- **Cook:** Starts the selected cooking program.
- **Cancel/Off:** Stops the current operation or turns off the unit.
- **Timer/Delay:** Sets a delayed start time for cooking.
- **Keep Warm:** Activates or deactivates the keep warm function.
- **+/- Buttons:** Adjusts time settings for delay or specific programs.

3.2 Basic Rice Cooking (White Rice)

Follow these steps for cooking white rice:

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly until the water runs clear.
2. Place the rinsed rice into the inner pot.
3. Add the appropriate amount of water. Refer to the water level markings inside the inner pot for guidance (e.g., for 2 cups of rice, fill to the '2' mark for white rice).
4. Place the inner pot into the main unit, ensuring it is seated correctly. Close the lid securely.
5. Plug the power cord into a suitable electrical outlet.
6. Press the **Menu** button until "White Rice" is selected on the display.
7. Press the **Cook** button to start the cooking process. The indicator light will illuminate, and the display will show the remaining cooking time.

8. Once cooking is complete, the cooker will automatically switch to the "Keep Warm" mode.
9. Allow the rice to rest for 5-10 minutes in Keep Warm mode before serving for best results. Use the rice paddle to fluff the rice.

3.3 Cooking Other Functions

For other functions like Brown Rice, Congee, Soup, Oatmeal, Steam, Slow Cook, Reheat, or Quick Rice, the general procedure is similar:

1. Prepare ingredients as required for the specific dish.
2. Place ingredients into the inner pot.
3. Close the lid securely and plug in the unit.
4. Press the **Menu** button to select the desired function.
5. Press the **Cook** button to begin.
6. Some functions may allow time adjustments using the **+/-** buttons before pressing Cook.

3.4 Using the Timer and Delay Functions

The Delay Timer allows you to set a specific time for cooking to finish. This is useful for having freshly cooked rice ready at a later time.

1. Prepare rice and water in the inner pot as usual.
2. Select the desired cooking function (e.g., White Rice) using the **Menu** button.
3. Press the **Timer/Delay** button. The display will show a default delay time.
4. Use the **+/-** buttons to adjust the delay time in hours. This is the time until cooking is completed.
5. Press the **Cook** button to confirm the delay setting. The timer will count down, and cooking will begin automatically when the delay time is reached.

3.5 Keep Warm Function

After most cooking cycles, the rice cooker will automatically switch to the "Keep Warm" mode to maintain the temperature of the cooked food. The "Keep Warm" indicator light will be on.

- To manually activate Keep Warm: Press the **Keep Warm** button when the cooker is in standby mode.
- To deactivate Keep Warm: Press the **Cancel/Off** button.

It is recommended not to keep rice in "Keep Warm" mode for more than 12 hours to maintain optimal taste and texture.

4. CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your Midea Micom Rice Cooker.

4.1 Cleaning the Inner Pot

The inner pot has a non-stick coating and should be cleaned carefully.

- Always allow the inner pot to cool completely before cleaning.
- **Hand Wash Only:** Wash the inner pot with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners, metal scrubbers, or harsh chemicals, as these can damage the non-stick coating.
- Rinse thoroughly and dry completely before storing or reusing.




热水快饭

为什么要选择美的？

FAST代码煮饭程序，煮饭就是快且好

...

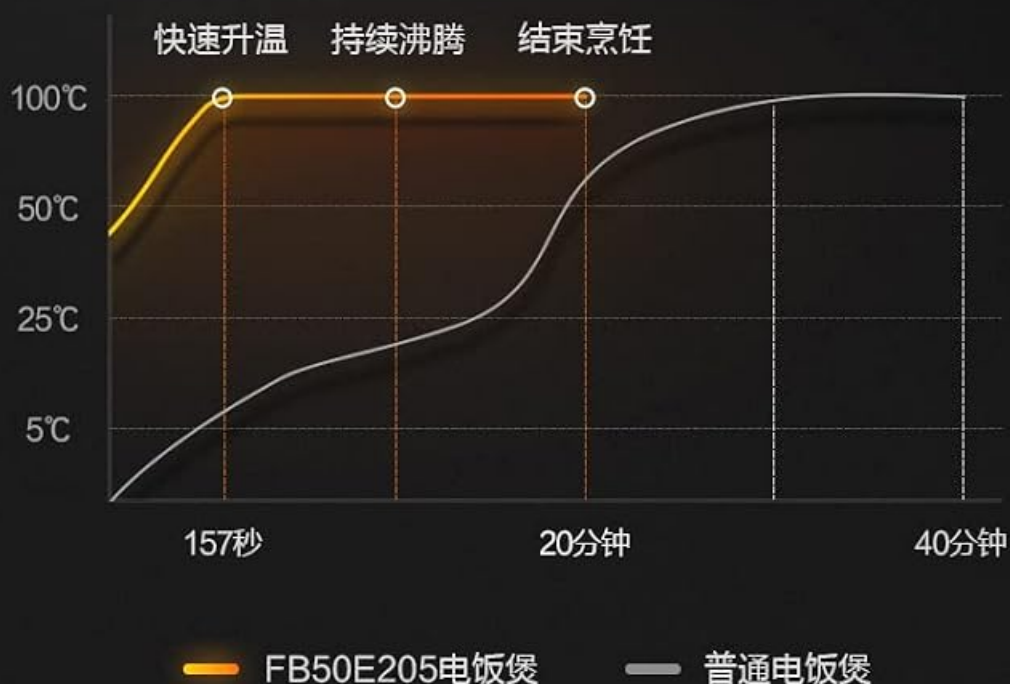

美的热水快饭

米饭香甜软糯



其他电饭煲米饭

米饭口感软烂

*注：以上相关数据来自于美的实验室

*对比产品均为美的自有品

Figure 4: Non-stick inner pot of the Midea Micom Rice Cooker.

4.2 Cleaning the Exterior

Wipe the exterior of the rice cooker with a soft, damp cloth. For stubborn stains, use a mild detergent on the cloth, then wipe with a clean damp cloth. Dry thoroughly.

- Never immerse the main unit in water or any other liquid.
- Do not use abrasive cleaners or solvents.

4.3 Storage

Ensure the rice cooker is clean and completely dry before storing. Store it in a cool, dry place away from direct sunlight and moisture. Do not place heavy objects on top of the cooker.

5. TROUBLESHOOTING

If you encounter any issues with your rice cooker, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Rice is too soft or soggy.	Too much water added; steam condensation.	Reduce water slightly for future cooking. Ensure the lid is properly sealed during cooking.
Rice is too hard or undercooked.	Not enough water added; power interruption during cooking.	Increase water slightly for future cooking. Ensure stable power supply.
Rice burnt at the bottom.	Incorrect water ratio; 'Cook' cycle too long for specific rice type.	Adjust water according to rice type and quantity. Ensure correct cooking function is selected.
Unit does not power on.	Power cord not connected; power outlet issue.	Check if the power cord is securely plugged into both the cooker and the wall outlet. Try another outlet.
Keep Warm function not working.	Unit unplugged; malfunction.	Ensure the unit is plugged in. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Midea customer support for further assistance.

6. SPECIFICATIONS

Key technical specifications for the Midea Micom Rice Cooker, Model MB-FB50E205W:

Feature	Detail
Brand	Midea
Model	MB-FB50E205W

Feature	Detail
Capacity	5 Liters (10 cups dry rice / 20 cups cooked rice)
Power/Wattage	205 watts (Cooking) / 875 watts (Max Power)
Voltage	120 Volts (AC)
Material	Stainless Steel (Exterior), Non-stick (Inner Pot)
Item Weight	4.99 kg (approx. 11 lbs)
Parcel Dimensions	43.18 x 32.38 x 29.84 cm
Special Features	Non Stick, Automatic Keep Warm, Timer

产品参数



产品型号:

MB-FB50E205

额定电压:

120V

额定功率:

875 W

内胆材质:

麦饭石内胆

产品容积:

5L

单台净重:

4.1kg

机身尺寸:

390*285*255mm³

Figure 5: Approximate dimensions of the Midea Micom Rice Cooker.

7. WARRANTY AND SUPPORT

Midea products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Midea website.

For technical support, service, or replacement parts, please contact Midea Customer Service:

- **Website:** www.midea.com/ca/support (Example link, please refer to actual product documentation)
- **Phone:** Refer to your product's warranty card or Midea's official website for regional contact numbers.

When contacting support, please have your product model number (MB-FB50E205W) and purchase date ready.

© 2024 Midea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question