

[Manuals.plus](#) /

› [GreenPan](#) /

› GreenPan Healthy Ceramic Nonstick Rice Quinoa Steel Cut Oats & Grains Cooker Instruction Manual

GreenPan CC006770-001

GreenPan Healthy Ceramic Nonstick Rice Quinoa Steel Cut Oats & Grains Cooker

Model: CC006770-001

INTRODUCTION

The GreenPan Bistro 8-Cup Traditional Rice Cooker is designed to simplify the preparation of various grains, including white rice, brown rice, quinoa, and steel cut oats. Featuring GreenPan's signature PFAS-free ceramic nonstick coating, this appliance ensures easy cooking and effortless cleanup. Its intuitive presets and Smart Grain fuzzy logic technology provide consistent, perfect results every time.



Image: The GreenPan Bistro Rice Cooker in white, showcasing its compact design and clean aesthetic.

SAFETY PRECAUTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Your GreenPan Bistro Rice Cooker comes with the following components:

- GreenPan Bistro Rice Cooker Unit
- Removable Inner Bowl with Healthy Ceramic Nonstick Coating
- Measuring Cup
- Rice Spatula
- Ladle

QUICK & EVEN HEATING FOR CONSISTENT RESULTS



Image: An exploded view diagram highlighting the easy-to-use control panel, delay start & keep warm function, 8-cup capacity, heatproof exterior, dishwasher safe pot, measuring cup, and rice spatula.

GETTING STARTED (SETUP)

1. **Unpack:** Carefully remove all packaging materials and promotional labels from your rice cooker.
2. **Clean:** Wash the removable inner bowl, measuring cup, spatula, and ladle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the rice cooker with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
4. **Insert Bowl:** Ensure the inner bowl is dry before placing it into the main unit.



HEALTHY CERAMIC NONSTICK NO STUCK-ON RICE

Image: A front view of the GreenPan Rice Cooker, ready for initial setup on a kitchen counter.

OPERATION GUIDE

Basic Cooking with Presets

The GreenPan Rice Cooker features four easy-to-use presets for common grains:

- White Rice
- Brown Rice
- Quinoa
- Steel Cut Oats

Note: Some oats may require special instructions; refer to your oat packaging for specific water ratios.

1. **Measure Ingredients:** Use the provided measuring cup to add your desired amount of grain to the removable inner bowl. Refer to the fill lines inside the bowl for accurate measurements.

2. **Add Water:** Add the appropriate amount of water according to the grain type and your preference.
3. **Close Lid:** Securely close the lid of the rice cooker.
4. **Select Preset:** Plug in the appliance. Press the 'Menu' button repeatedly to cycle through the presets (White Rice, Brown Rice, Quinoa, Steel Cut Oats) until the desired grain type is selected on the LED display.
5. **Start Cooking:** Press the 'Start' button to begin the cooking cycle. The Smart Grain fuzzy logic technology will automatically adjust for optimal results.



Image: The control panel of the rice cooker showing the four one-touch presets for different grain types.

Delay Timer Function

The delay timer allows you to set the rice cooker to start cooking at a later time, up to 24 hours in advance.

1. Prepare ingredients as described in 'Basic Cooking'.
2. Select your desired preset using the 'Menu' button.
3. Press the 'Delay Timer' button. Use the '+' and '-' buttons to adjust the delay time in hours.
4. Press 'Start' to confirm the delay timer setting. The cooker will begin cooking after the set delay time has elapsed.



THERMOLON VOLT™ NON-TOXIC COOKING MADE EASY

Nonstick reinvented – Free of PFAS PFOA

Specially designed to withstand the strain of modern appliances, this diamond-infused ceramic nonstick doesn't break down the way traditional coatings do. It's extra tough, cleans easily, and makes any meal healthier.



TOXIN-FREE

Our ceramic nonstick is free of PFAS, PFOA, Lead, and Cadmium



EXTRA TOUGH

Diamond-infused ceramic nonstick for power & performance



EASY TO CLEAN

Wipes clean & dishwasher safe

Image: A hand pressing the 'Start' button on the rice cooker, illustrating the delay start function with the digital display showing a time setting.

Keep Warm Function

Once the cooking cycle is complete, the rice cooker will automatically switch to the 'Keep Warm' mode to maintain the temperature of your cooked grains. This function ensures your food stays warm and ready to serve without overcooking.

- To manually activate 'Keep Warm' or stop it, press the 'Keep Warm/Stop' button.



THERMOLON™ VOLT

HEALTHY CERAMIC NONSTICK

Nonstick Reinvented

Healthy ceramic nonstick infused with diamonds and specially designed for kitchen electrics. Free of PFAS, PFOA, lead, and cadmium for worry-free cooking.



TOXIN-FREE

Our ceramic nonstick is free of PFAS, PFOA, Lead, and Cadmium



EXTRA TOUGH

Diamond-infused ceramic nonstick for power & performance



EASY TO CLEAN

Wipes clean & dishwasher safe

Image: The interior of the GreenPan Rice Cooker showing perfectly cooked brown rice, demonstrating its quick and even heating capabilities.

CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your GreenPan Rice Cooker and ensure optimal performance.


Cleaning

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** The inner bowl, measuring cup, spatula, and ladle are dishwasher safe for convenient cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth.
3. **Nonstick Coating:** The healthy ceramic nonstick coating is designed for easy release, meaning nothing sticks. This makes cleanup quick and effortless.
4. **Exterior:** Wipe the exterior of the rice cooker with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Condensation Collector:** Regularly check and empty the condensation collector (if applicable to your model) to

prevent water buildup.



Image: A hand removing the inner pot from the rice cooker, demonstrating the easy cleanup feature of the removable insert.

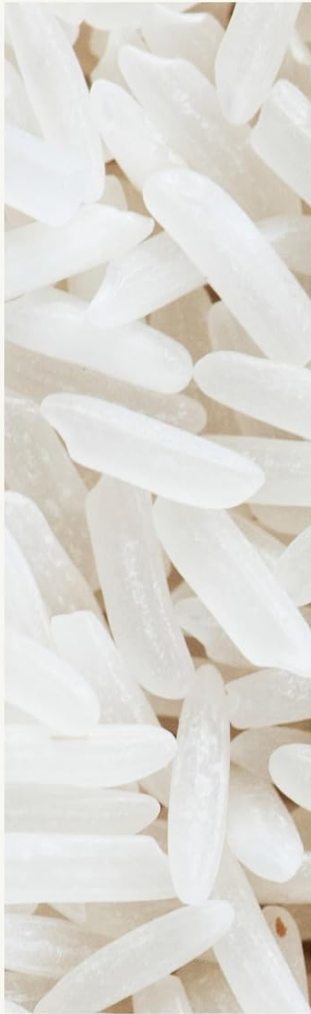

A BETTER WAY TO COOK WHITE RICE, BROWN RICE, QUINOA & STEEL CUT OATS

Image: Cooked rice being easily scooped from the nonstick inner bowl, highlighting the healthy ceramic nonstick surface that prevents sticking.

TROUBLESHOOTING

If you encounter issues with your GreenPan Rice Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Insufficient water; incorrect grain setting; lid not properly sealed.	Add more water next time; ensure correct preset is selected; check lid for proper closure.
Rice is too soft or mushy.	Too much water; incorrect grain setting.	Reduce water next time; ensure correct preset is selected.
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power to outlet; try a different outlet.

Problem	Possible Cause	Solution
Overflow during cooking (especially for oats).	Too much water or ingredients; lid vent blocked.	Do not exceed maximum fill lines; ensure lid vent is clear; reduce quantity of ingredients.
Food sticks to the inner bowl.	Inner bowl not clean; abrasive cleaning used previously.	Ensure bowl is thoroughly cleaned after each use; avoid metal utensils or abrasive cleaners.

TECHNICAL SPECIFICATIONS

- **Brand:** GreenPan
- **Model Name:** Rice Cooker
- **Model Number:** CC006770-001
- **Capacity:** 4 Cups (Uncooked Rice) / 2 Liter Capacity (8 Cups Cooked Rice)
- **Color:** White
- **Material:** Healthy Ceramic Nonstick, PFAS-Free
- **Lid Material:** Ceramic
- **Power Source:** Corded Electric
- **Wattage:** 500 watts
- **Voltage:** 220 Volts
- **Product Dimensions:** 6"D x 6"W x 8"H
- **Item Weight:** 9.33 pounds
- **Special Feature:** Healthy Ceramic Nonstick PFAS-Free, Easy Meal Presets, Smart Grain Fuzzy Logic, Delay Timer, Keep Warm Function
- **Product Care Instructions:** Dishwasher Safe Parts, Hand Wash
- **UPC:** 885837033908

WARRANTY AND SUPPORT

GreenPan products are manufactured to high-quality standards. For specific warranty information and customer support, please refer to the warranty card included with your product or visit the official GreenPan website. You can also contact GreenPan customer service for assistance with product registration, troubleshooting, or replacement parts.

Online Support: www.greenpan.com

© 2025 GreenPan. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question