

Macook CFXB20-4

Macook 1L Stainless Steel Rice Cooker Instruction Manual

Model: CFXB20-4

1. INTRODUCTION

Thank you for choosing the Macook 1L Stainless Steel Rice Cooker. This appliance is designed for efficient cooking of various grains and steaming of food items. It features a durable stainless steel body, a non-stick inner pot, and an automatic keep-warm function. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: The Macook Rice Cooker demonstrating its versatility in preparing various meals including noodles, steamed rice, vegetables, and mixed grains.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock,

and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has no on/off switch. It operates when plugged in and the 'Cook' lever is pressed down. Unplug the appliance from the wall outlet to turn it off completely.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Macook Rice Cooker Main Unit
- Non-stick Inner Pot
- Steam Insert
- Rice Spoon
- Measuring Cup
- Removable Power Cord
- Instruction Manual



Image 3.1: All included accessories and the main rice cooker unit.

4. PRODUCT OVERVIEW

The Macook Rice Cooker is designed for simplicity and efficiency. Key components include:

- **Main Unit:** Stainless steel housing with integrated handles and control panel.
- **Control Panel:** Features a single lever for 'Cook' and 'Warm' functions.
- **Non-stick Inner Pot:** Removable pot with measurement markings for water levels.
- **Lid:** Hinged lid with a steam vent.
- **Steam Insert:** For steaming vegetables, seafood, or other foods above the cooking rice.



**1.0L
Kapazität**



**Rostfreier
Stahlkörper**



**herausnehmbarer
Innentopf**



**leicht
zu reinigen**



**automatische
Warmhaltefunktion**

Image 4.1: Overview of the Macook Rice Cooker highlighting its main features.

5. SETUP AND FIRST USE

Before using your rice cooker for the first time, follow these steps:

1. Remove all packaging materials and labels.
2. Wash the inner pot, steam insert, rice spoon, and measuring cup with warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. For optimal cooking results and to remove any manufacturing residues, add clean water to the inner pot and bring it to a boil

using the 'Cook' function. Once boiled, discard the water.

6. OPERATING INSTRUCTIONS

6.1. Cooking Rice

1. Measure the desired amount of rice using the provided measuring cup. One measuring cup typically yields two cups of cooked rice.
2. Rinse the rice under cold water until the water runs clear.
3. Place the rinsed rice into the non-stick inner pot.
4. Add the appropriate amount of water. Refer to the water level markings inside the inner pot for guidance. For example, for 2 cups of uncooked rice, fill water to the '2' mark. Adjust water quantity based on rice type and desired consistency.
5. Ensure the outer surface of the inner pot is dry, then place it into the main unit.
6. Close the lid securely.
7. Plug the power cord into a wall outlet. The 'Warm' indicator light will illuminate.
8. Press the 'Cook' lever down. The 'Cook' indicator light will turn on, and cooking will begin.
9. Once cooking is complete, the lever will automatically switch up, and the cooker will enter 'Warm' mode. The 'Warm' indicator light will illuminate.
10. Allow the rice to rest in 'Warm' mode for 5-10 minutes before serving for best results.
11. Unplug the appliance from the wall outlet when finished.



Image 6.1: Inner pot with clear scale markings for precise water measurement.

6.2. Steaming Food

The steam insert allows you to steam vegetables, seafood, or other items while cooking rice or separately.

1. Add the appropriate amount of water to the inner pot (typically 1-2 cups for steaming).
2. Place the steam insert into the inner pot.
3. Arrange your food (e.g., chopped vegetables) in the steam insert. Do not overfill.
4. Close the lid securely.
5. Plug in the power cord and press the 'Cook' lever down.
6. Monitor the food. Steaming times vary depending on the food type and quantity.
7. Once steaming is complete, carefully remove the steam insert using oven mitts or a utensil to avoid burns.
8. Unplug the appliance from the wall outlet.

**STELLEN SIE SICH VOR, WIE SIE DEN GESCHMACK VON GEMÜSE
GENIESSEN, WÄHREND SIE EINEN TOPF MIT LECKEREM REIS KOCHEN?**

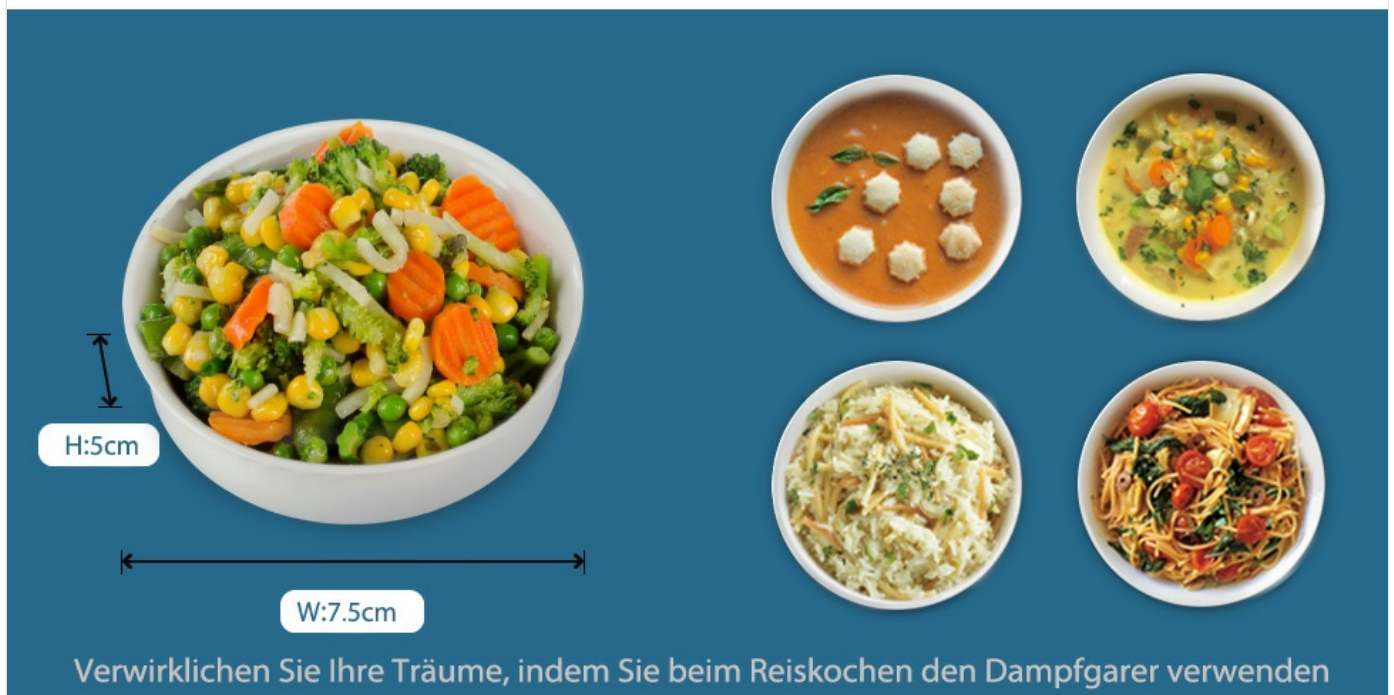


Image 6.2: The steam insert in use, allowing for healthy steamed meals.

6.3. Keep Warm Function

The rice cooker automatically switches to 'Warm' mode once cooking is complete. This function keeps your food at an optimal serving temperature without overcooking. The 'Warm' indicator light will be illuminated during this mode.

AUTOMATISCHE WARMHALTEFUNKTION

Vom Frühstück bis zum Abendessen,
voller Reisgeschmack,
perfekte Konsistenz und Nährstoffgehalt



Image 6.3: Automatic keep-warm function engages after cooking.

7. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your rice cooker.

1. Always unplug the rice cooker and allow it to cool completely before cleaning.
2. **Inner Pot and Steam Insert:** These are non-stick and can be easily cleaned with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that can damage the non-stick coating. Rinse thoroughly and dry. The inner pot is also dishwasher safe.
3. **Main Unit:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the electrical components.
4. **Lid:** The lid can be wiped clean with a damp cloth. Ensure the steam vent is clear of any food debris.
5. **Accessories:** The rice spoon and measuring cup can be washed with warm, soapy water.

ANTIHAFTBESCHICHTETER INNENTOPF

Leicht zu reinigen & abnehmbar



Image 7.1: The non-stick inner pot is easy to clean.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Rice is too hard/undercooked.	Insufficient water; lid not closed properly.	Add more water next time; ensure lid is sealed.
Rice is too soft/mushy.	Too much water.	Reduce water next time; follow inner pot markings.
Rice sticks to the bottom.	Not enough water; inner pot not clean; first use residue.	Ensure proper water ratio; clean inner pot thoroughly; perform initial boil with clean water.

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; 'Cook' lever not pressed.	Check power connection; ensure 'Cook' lever is fully depressed.
No separate On/Off switch.	This model is designed to operate when plugged in and the 'Cook' lever is engaged.	Unplug the appliance from the wall outlet to completely turn it off. Consider using a switched outlet if preferred.

9. SPECIFICATIONS

Feature	Detail
Model Number	CFXB20-4
Capacity	1 Litre (5 cups uncooked rice, yields up to 10 cups cooked)
Power Source	Corded Electric
Wattage	400 Watts
Voltage	220 Volts
Material	Stainless Steel (exterior), Non-stick (inner pot)
Product Dimensions (L x W x H)	21 x 22 x 23.5 cm
Item Weight	1.8 Kilograms

10. WARRANTY AND SUPPORT

Macook offers a 30-day refund policy and a 1-year warranty for this product. For any questions, troubleshooting assistance, or warranty claims, please contact Macook customer support through your retailer or the official Macook website.

© 2024 Macook. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question