

[Manuals.plus](#) /

› [SHARPER IMAGE](#) /

› Sharper Image Powerboost Deep Tissue Percussion Massager Version 2.0 User Manual

SHARPER IMAGE 1016109

Sharper Image Powerboost Deep Tissue Percussion Massager Version 2.0

Model: 1016109 | Brand: SHARPER IMAGE

1. INTRODUCTION

The Sharper Image Powerboost Deep Tissue Percussion Massager Version 2.0 is designed to provide targeted muscle relief and tension reduction through deep-tissue percussion. Featuring an industrial-grade brushless motor for whisper-quiet operation, 6 speed settings, and 5 interchangeable attachments, this lightweight and compact device offers a customizable massage experience for sports recovery and daily wellness.



Figure 1: Sharper Image Powerboost Deep Tissue Percussion Massager with its accessories.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, and injury, read all instructions carefully before use.

- Use only on healthy muscles. Avoid injured, inflamed, or sensitive areas.
- Do not use near water or in wet environments.
- Unplug the device and allow it to cool completely before storing.
- Keep out of reach of children.
- Consult a physician before use if you have any pre-existing health conditions or concerns.


3. PACKAGE CONTENTS

Your Sharper Image Powerboost Deep Tissue Percussion Massager Version 2.0 package includes:


- 1 x Powerboost Deep Tissue Percussion Massager
- 5 x Interchangeable Massage Attachments

- 1 x Carrying Case
- 1 x USB-C Cable
- 1 x Wall Adapter


SHARPER IMAGE®

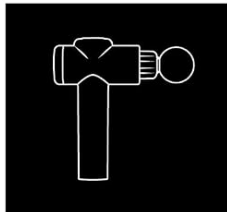


PowerBoost™
Deep Tissue

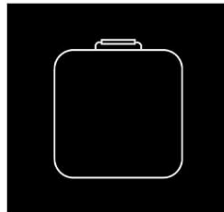

Carrying case

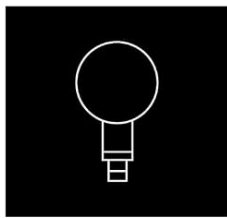

5 attachments

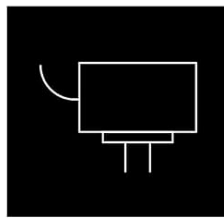

USB-C cable
and wall adapter



Figure 2: Contents of the Powerboost Deep Tissue Percussion Massager package.

4. SETUP & CHARGING

4.1 Initial Charging


Before first use, fully charge the massager. Connect the USB-C cable to the massager's charging port (located at the bottom of the handle) and the wall adapter. Plug the adapter into a power outlet. The green indicator lights on the device will illuminate to show the charging status. A full charge provides up to 4.5 hours of continuous use.

4.2 Attaching Massage Heads

To attach a massage head, simply align the base of the desired attachment with the opening on the massager's head and

push it firmly into place. To remove, gently pull the attachment straight out.

SHARPER IMAGE®

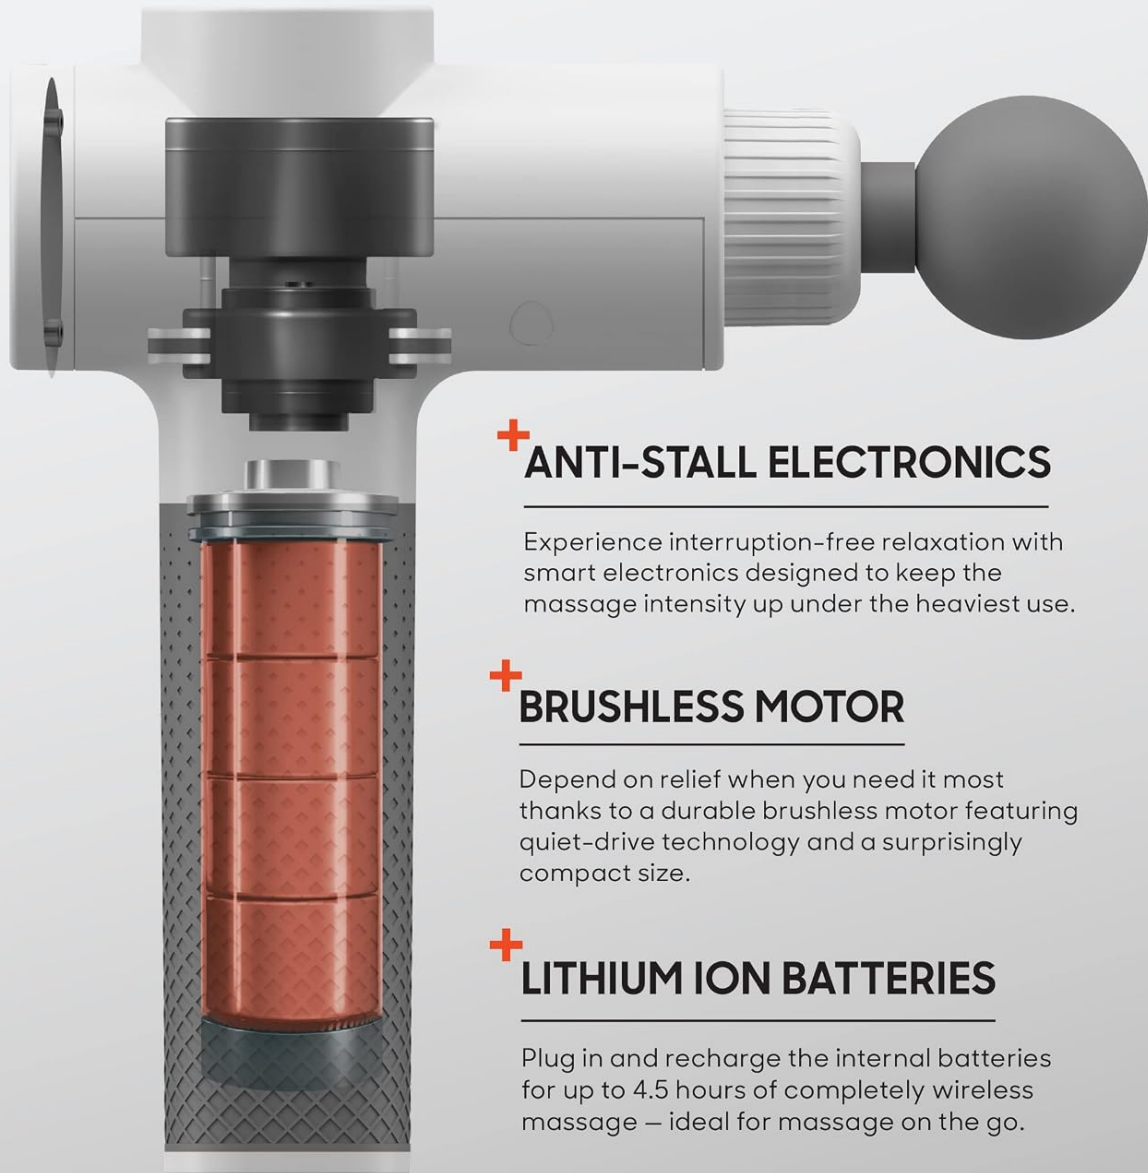

+ ANTI-STALL ELECTRONICS

Experience interruption-free relaxation with smart electronics designed to keep the massage intensity up under the heaviest use.

+ BRUSHLESS MOTOR

Depend on relief when you need it most thanks to a durable brushless motor featuring quiet-drive technology and a surprisingly compact size.

+ LITHIUM ION BATTERIES

Plug in and recharge the internal batteries for up to 4.5 hours of completely wireless massage – ideal for massage on the go.

Figure 3: Internal components of the massager, highlighting the brushless motor and lithium-ion batteries.

Your browser does not support the video tag.

Video 1: Demonstration of the Powerboost Deep Tissue Massager, including unboxing, charging, and attachment installation.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Settings

To power on the massager, locate the power switch at the bottom of the handle and slide it to the 'ON' position. The indicator lights will illuminate. To adjust the percussion speed, press the power button on the top of the device. Each press cycles through the 6 available speed settings. To power off, slide the switch at the bottom of the handle to the 'OFF' position.



POWERBOOST™ DEEP TISSUE

PERCUSSION MASSAGER



Figure 4: The massager features variable strength and quiet-drive technology for a personalized and discreet experience.

5.2 Using the Attachments

The Powerboost Massager comes with 5 upgraded attachments, each designed for specific muscle groups and massage needs:


- **Round Head:** Ideal for large muscle groups like thighs, calves, and back, providing an overall comfortable massage with low muscle impact.
- **Flat Head:** Delivers a hammer-like impact, suitable for pecs, quads, glutes, and calves with medium muscle impact.
- **Fork Head:** Designed to gently rock from side to side, targeting knots and tense spots in the neck, back, and shoulders with high muscle impact.
- **Cone Head:** This pinpoint head is designed for unsurpassed muscular penetration, effective for trigger points and knots with high muscle impact.
- **Compression (Bar) Head:** Helps increase blood flow and reduce tension, good for IT bands and biceps with high muscle impact.




ROUND

Constructed from durable foam but designed for more precision.

GOOD FOR
Forearms,
Biceps, Shins




MUSCLE IMPACT
Low

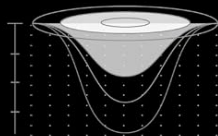



FLAT

The hammer-like impact hits deeper into muscles.

GOOD FOR
Pecs, Quads,
Glutes, Calves



MUSCLE IMPACT
Medium

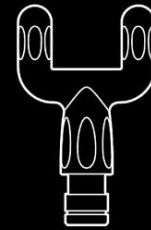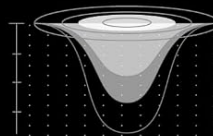


FORK

Gently rock from side to side to work out knots and tense spots.

GOOD FOR
Traps, Quads,
Calves, Feet




MUSCLE IMPACT
High

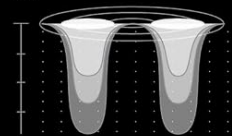


CONE

This pinpoint head is designed for unsurpassed muscular penetration.

GOOD FOR
Feet, Scap,
Forearms




MUSCLE IMPACT
High

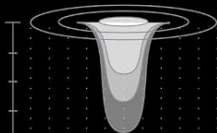

COMPRESSION

The curved edge provides comfort with surprising strength.

GOOD FOR
IT Band,
Biceps



MUSCLE IMPACT
High

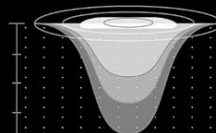


Figure 5: Guide to the interchangeable attachments and their specific uses.

5.3 Recommended Usage Areas

The massager can be used on various parts of the body to relieve tension and aid in muscle recovery, including the neck, shoulders, arms, back, thighs, calves, and feet. The ergonomic oval, rubber-gripped handle provides a comfortable experience and allows for precise targeting of sore areas.



FULL BODY MASSAGE

THE DEEP TISSUE MASSAGER FROM SHARPER IMAGE REPRESENTS THE FUTURE OF MASSAGE TECHNOLOGY, PROVIDING FOCUSED ATTENTION TO TARGETED MUSCLE GROUPS

#1 MASSAGE BRAND*


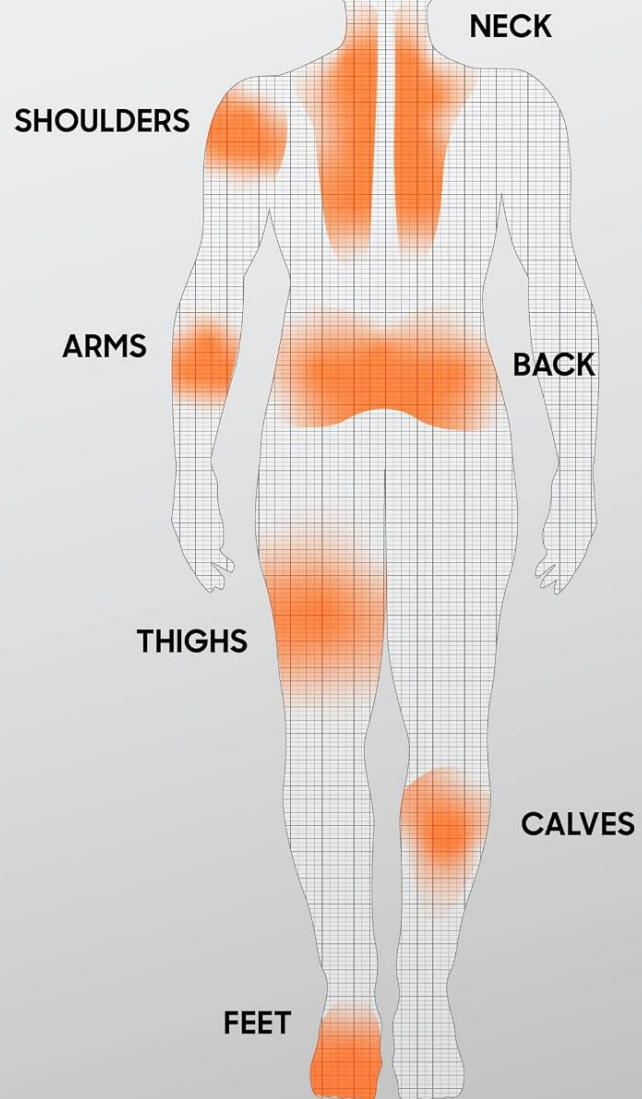


Figure 6: Full body massage areas for optimal relief.



UP TO
4.5
HOURS
ON ONE
CHARGE

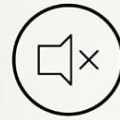

WHISPER QUIET



6 SPEEDS



5 ATTACHMENTS

Figure 7: The massager is designed for sports recovery with reliable strength and an ergonomic grip.

6. CARE & MAINTENANCE

To ensure the longevity and optimal performance of your massager:

- Always power off and unplug the device before cleaning.
- Wipe the massager and attachments with a clean, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- Store the massager and all attachments in the provided carrying case in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you experience any issues with your Sharper Image Powerboost Deep Tissue Percussion Massager, please refer to the following common solutions:

- **Device not turning on:** Ensure the massager is fully charged. Check that the power switch at the bottom of the handle is in the 'ON' position.
- **Weak percussion:** Verify that the battery is sufficiently charged. If the issue persists, ensure the attachment is securely fitted.
- **Unusual noise:** While the device is whisper quiet, any unusual loud noises may indicate an issue. Ensure no foreign objects are obstructing the moving parts.

For persistent issues not resolved by the above steps, please contact Sharper Image customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	9.84 x 7.87 x 3.15 inches
Item Model Number	1016109
Batteries	1 Lithium Ion battery required (included)
Power Source	Battery Powered
Material	Rubber
Item Weight	5.26 Pounds
Manufacturer	MerchSource

9. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support for your Sharper Image Powerboost Deep Tissue Percussion Massager, please refer to the product packaging or visit the official Sharper Image website. The manufacturer is MerchSource.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question