

[Manuals.plus](#) /

> [MAMICOOKER](#) /

> MAMICOOKER Electric Garlic Chopper Model 350ml-snq User Manual

MAMICOOKER 350ml-snq

MAMICOOKER Electric Garlic Chopper Model 350ml-snq User Manual

Your guide to safe and efficient operation

1. INTRODUCTION

Thank you for choosing the MAMICOOKER Electric Garlic Chopper. This portable, wireless food processor is designed to simplify your food preparation tasks, allowing you to chop, mince, and blend various ingredients with ease. Please read this manual thoroughly before first use to ensure safe operation and optimal performance of your device. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The MAMICOOKER Electric Garlic Chopper is a compact and powerful kitchen tool. It features a 350ml capacity bowl, a motor unit with a start button and USB charging port, and sharp stainless steel blades.

SMALL BODY BIG POWER

350ML

60W

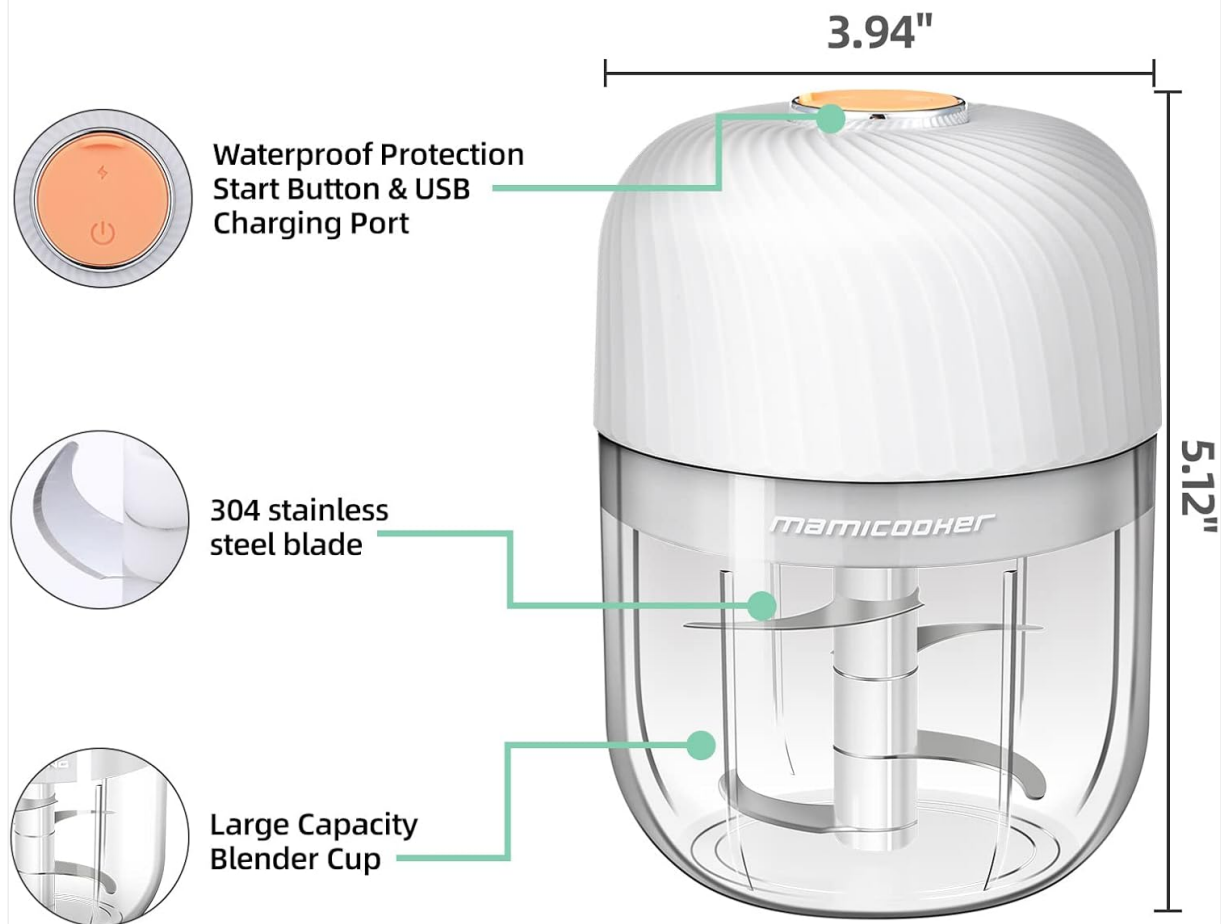


Figure 2.1: Product Components and Dimensions

This image illustrates the main components of the chopper: the motor unit with waterproof protection, start button, and USB charging port; the 304 stainless steel blades; and the large capacity blender cup. The dimensions are approximately 3.94 inches in diameter and 5.12 inches in height.

3. SAFETY INSTRUCTIONS

To prevent injury or damage to the appliance, always follow these safety precautions:

- **Sharp Blades:** The blades are extremely sharp. Exercise extreme caution when handling them, especially during assembly, disassembly, and cleaning. Do not touch the blades with your fingers.
- **Motor Unit Care:** The motor lid is not designed for immersion in water or cleaning in a dishwasher. Water may penetrate through the silicone cover and damage the motor. Clean the motor unit with a damp cloth only.
- **Proper Assembly:** Ensure the lid and bowl are perfectly aligned and locked together before operation. The magnetic safety lock prevents operation if components are not correctly assembled.
- **Do Not Overfill:** Observe the "MAX" mark on the cup. Do not fill ingredients beyond this line to ensure efficient chopping and prevent motor strain.
- **Food Preparation:** Always cut large pieces of food into smaller, approximately 1-inch pieces, before placing them in the chopper. This ensures even chopping and prevents motor overload.
- **Charging:** If the motor becomes sluggish, the battery power may be low. Charge the device promptly.

4. SETUP

Before using your MAMICOOKER Electric Garlic Chopper for the first time, ensure it is fully charged.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Wash the blender cup and blade assembly with warm, soapy water. Rinse thoroughly and dry. Do not immerse the motor unit in water.
3. **Charge Battery:** Connect the provided USB charging cable to the charging port on the motor unit and to a suitable USB power source (e.g., wall adapter, computer USB port). The device supports USB charging and can be used approximately 50 times on a full charge. A full charge typically takes around 3 hours.



Figure 4.1: USB Charging Port

This image highlights the USB charging port located on the top of the motor unit, indicating where to connect the charging cable.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your electric garlic chopper:

1. **Prepare Ingredients:** Cut food into small pieces, approximately 1 inch in size.
2. **Load Ingredients:** Place the prepared ingredients into the blender cup. Do not exceed the "MAX" fill line.
3. **Assemble:** Carefully place the blade assembly onto the central pin in the cup. Then, align the motor unit lid with the bowl and twist gently to lock it securely. Ensure the magnetic safety lock engages.
4. **Chop:** Press and hold the power button on top of the motor unit to start chopping. Release the button to stop. Control the chopping duration to achieve your desired consistency, from coarsely chopped to finely minced or pureed. For most ingredients, 20 seconds is sufficient.
5. **Remove Food:** Once chopping is complete, release the button, carefully remove the motor unit, then the blade assembly, and empty the contents.



Figure 5.1: Easy Operation

This image demonstrates the simple press-and-hold operation of the chopper. It also shows examples of ingredients that can be processed, such as garlic, purees, meat, nuts, chili, and other vegetables.

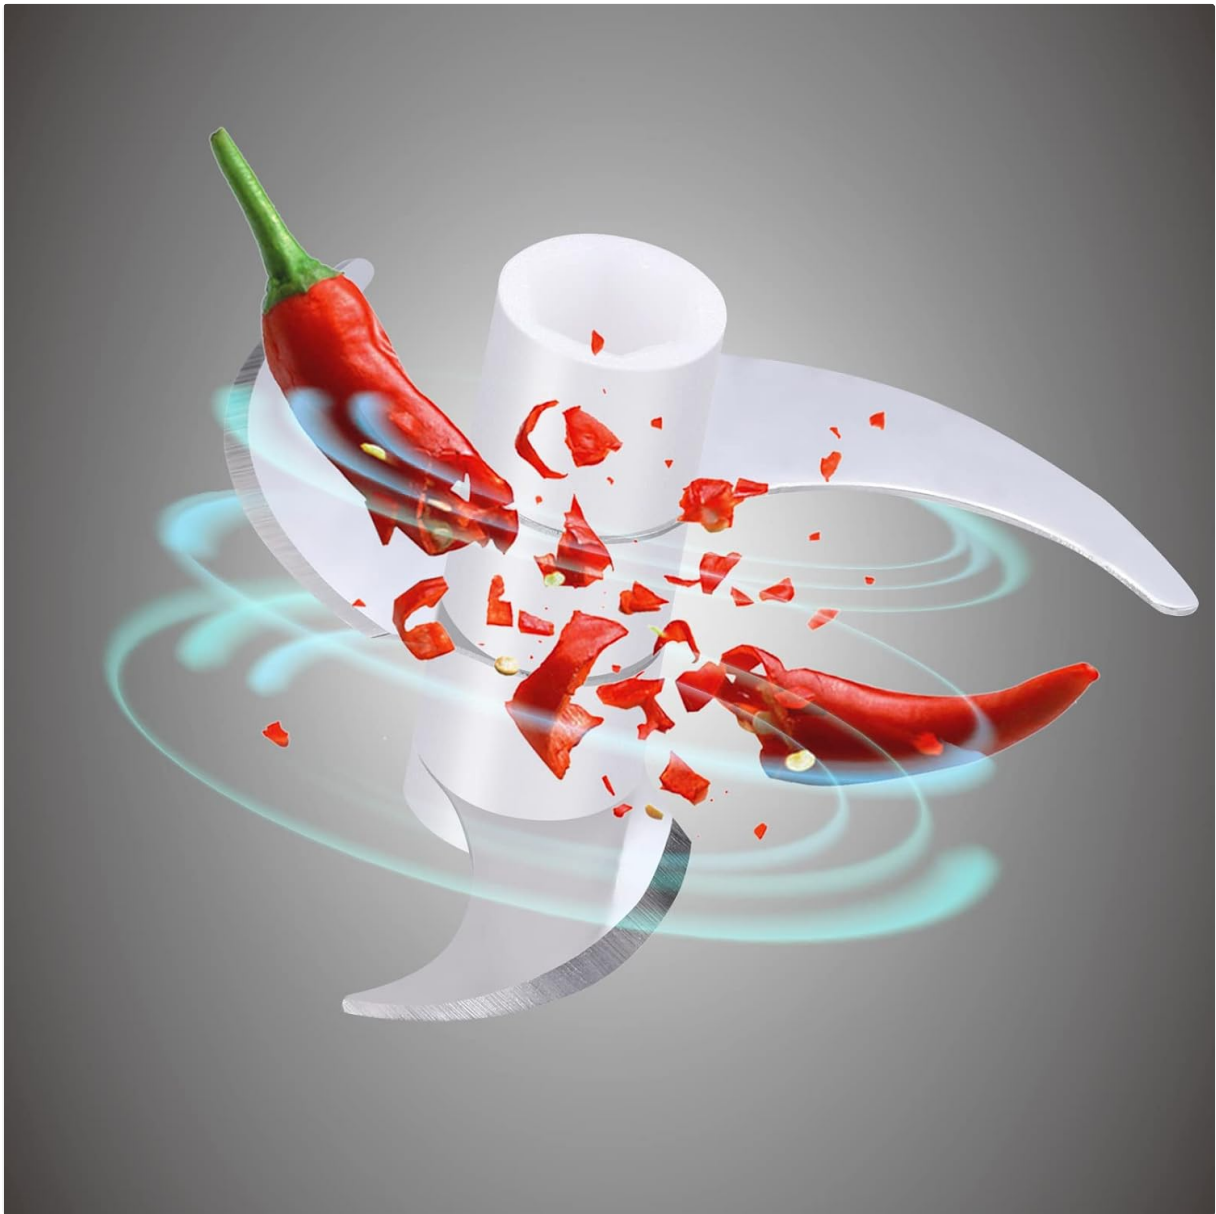


Figure 5.2: Efficient Chopping Action

This image captures the sharp stainless steel blades in action, efficiently chopping chili peppers into smaller pieces.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your chopper.

1. **Disassemble:** After each use, carefully detach the motor unit, then remove the blade assembly from the blender cup.
2. **Wash Components:** The blender cup and blade assembly are detachable and can be rinsed directly with water. Use warm, soapy water to clean them thoroughly. Be extremely careful when handling the sharp blades.
3. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or place it in a dishwasher.
4. **Dry:** Ensure all parts are completely dry before reassembling or storing.
5. **Storage:** Store the chopper in a clean, dry place.

Easy to Clean



Figure 6.1: Easy Cleaning Process

This image demonstrates how the detachable blender cup and blade assembly can be easily rinsed under water for quick and thorough cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chopper does not start when button is pressed.	<ol style="list-style-type: none">1. Battery is low or depleted.2. Motor unit and bowl are not correctly assembled.3. Magnetic safety lock is not engaged.	<ol style="list-style-type: none">1. Charge the device using the USB cable.2. Ensure the motor unit lid is properly aligned and locked onto the bowl.3. Verify that the lid is securely attached to engage the safety mechanism.

Problem	Possible Cause	Solution
Motor runs sluggishly or stops during operation.	<ol style="list-style-type: none"> 1. Battery is low. 2. Overfilling the bowl. 3. Ingredients are too large or too hard. 	<ol style="list-style-type: none"> 1. Charge the device. 2. Reduce the amount of ingredients in the bowl, ensuring it does not exceed the "MAX" line. 3. Cut ingredients into smaller, manageable pieces (approx. 1 inch).
Food is not chopped evenly.	<ol style="list-style-type: none"> 1. Ingredients are not cut to a uniform size. 2. Bowl is overfilled. 	<ol style="list-style-type: none"> 1. Ensure all ingredients are cut into similar, small pieces. 2. Do not overfill the bowl. Process in smaller batches if necessary.

8. SPECIFICATIONS

Feature	Specification
Brand	MAMICOOKER
Model Number	350ml-snq
Capacity	350 Milliliters
Power / Wattage	60 watts
Voltage	5 Volts
Material	Stainless Steel, Silicone
Number of Speeds	2
Product Dimensions	9.6 x 9.6 x 12.7 cm
Item Weight	386 g
Special Features	Food chopper, garlic chopper, wireless, portable
Product Care Instructions	Hand Wash (for detachable parts)

9. WARRANTY AND SUPPORT

MAMICOOKER offers a 30-day money-back service for this product. If you are not satisfied with your purchase, you may return your undamaged product within 30 days from the date of purchase for a full refund. For any questions or support needs, please refer to your purchase platform or contact MAMICOOKER customer service directly.