

Sharper Image Powerboost Flex

Sharper Image Powerboost Flex Pivot Percussion Massager User Manual

Model: Powerboost Flex

Brand: Sharper Image

1. INTRODUCTION AND OVERVIEW

The Sharper Image Powerboost Flex Pivot Percussion Massager is engineered to deliver powerful, targeted relief for muscle soreness and tension. Its innovative design allows for adjustable angles, providing access to hard-to-reach areas, while multiple speed settings and specialized attachments ensure a personalized massage experience. This device is ideal for post-workout recovery, daily muscle maintenance, and overall body wellness.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, and injury, read all instructions carefully before using this appliance.

- Avoid use on broken skin or open wounds.
- Do not use near water or in excessively humid environments.
- Discontinue use immediately if you experience pain or discomfort.
- Ensure proper body positioning to avoid strain during use.
- Keep out of reach of children.
- Do not operate continuously for more than 15 minutes. Allow the device to cool down for 5 minutes before re-using.

3. PACKAGE CONTENTS

Your Sharper Image Powerboost Flex Pivot Percussion Massager package includes:

- Powerboost Flex Massager Unit
- 4 Interchangeable Massage Attachments:
 - Round Head
 - Flat Head
 - Fork Head
 - Cone Head
- Carrying Case
- USB-C Charging Cable
- AC Adapter

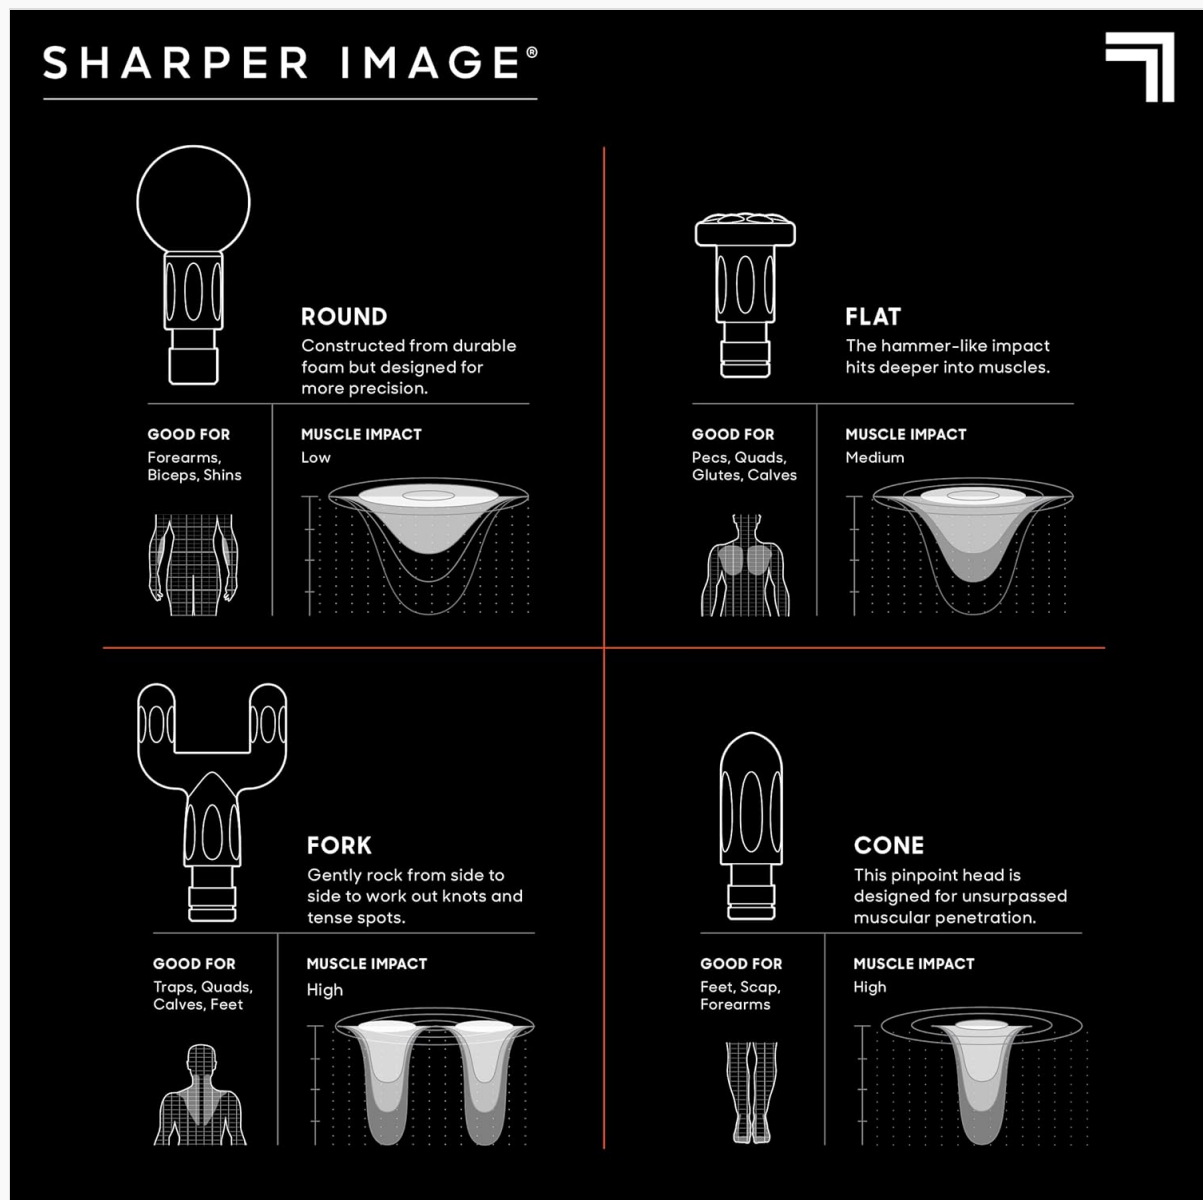


Figure 1: Included Package Contents

4. KEY FEATURES

- **5 Adjustable Angles:** The pivot head allows for 0° to 120° of rotation, enabling ergonomic targeting of various muscle groups.
- **Ultra-Quiet Operation:** Equipped with an industrial-grade brushless motor and Quiet-Drive Technology for discreet use.
- **6 Speed Settings:** Offers variable intensity levels for a fully customizable deep-tissue massage.
- **4 Specialized Attachments:** Designed to target different muscle needs and areas of the body.
- **Ergonomic Handle:** Features a textured oval grip for comfortable and precise handling.
- **LED Interface:** Built-in display for clear and intuitive understanding of device settings.
- **USB-C Charging:** Provides convenient charging and up to 4.5 hours of use on a single charge.

SHARPER IMAGE®

POWERBOOST FLEX™

PIVOT PERCUSSION MASSAGER



Figure 2: Flex Pivot Feature



Figure 3: Massager Features

5. SETUP

5.1 Charging the Device

1. Locate the USB-C charging port at the base of the massager.
2. Connect the provided USB-C charging cable to the massager and the AC adapter.
3. Plug the AC adapter into a standard wall outlet.
4. Allow the device to fully charge before its first use. The LED indicators will show charging progress.

5.2 Attaching/Detaching Massage Heads

1. To attach a massage head, align the base of the desired attachment with the opening on the massager's pivot arm and firmly push it in until it clicks securely into place.
2. To detach, gently pull the attachment straight out from the massager.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

1. To power on the massager, locate the power switch at the bottom of the handle and turn it to the 'ON' position.
2. To power off, turn the switch to the 'OFF' position.

6.2 Adjusting Speed Settings

1. Once powered on, the LED interface on the back of the massager will illuminate.
2. Press the touch button on the LED interface to cycle through the 6 available speed settings. Each press will increase the intensity.
3. The current speed level will be displayed on the LED screen.

6.3 Adjusting Pivot Angle

1. To adjust the massage angle, locate the pivot release button on the side of the massager.
2. Press and hold the button while rotating the massage head to your desired angle (0° to 120°).
3. Release the button to lock the head in place.

SHARPER IMAGE®



FULL BODY MASSAGE

THE DEEP TISSUE MASSAGER FROM SHARPER IMAGE REPRESENTS THE FUTURE OF MASSAGE TECHNOLOGY, PROVIDING FOCUSED ATTENTION TO TARGETED MUSCLE GROUPS

#1 MASSAGE BRAND*

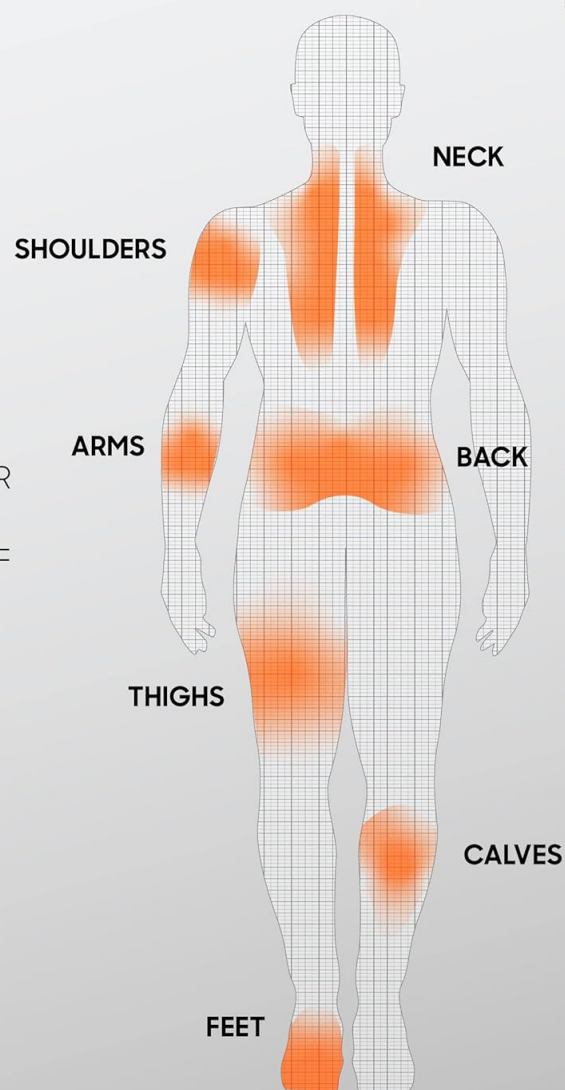


Figure 4: Ergonomic Use

7. ATTACHMENTS AND RECOMMENDED USAGE

The Powerboost Flex comes with four specialized attachments, each designed for specific muscle groups and massage intensities:

- **Round Head:** Ideal for small muscle groups such as forearms, biceps, and shins. Provides low muscle impact.
- **Flat Head:** Suitable for all parts of the body, including pectorals, quadriceps, glutes, and calves. Delivers medium muscle impact.
- **Fork Head:** Best for targeting the neck and back, including traps, quads, calves, and feet. Offers high muscle impact.
- **Cone Head:** Designed for pinpoint accuracy on trigger points, particularly effective on feet, scapula, and forearms. Provides high muscle impact.



Figure 5: Interchangeable Attachments



Figure 6: Attachment Usage Guide

SHARPER IMAGE®



ANTI-STALL ELECTRONICS

Experience interruption-free relaxation with smart electronics designed to keep the massage intensity up under the heaviest use.

BRUSHLESS MOTOR

Depend on relief when you need it most thanks to a durable brushless motor featuring quiet-drive technology and a surprisingly compact size.

FLEX DRIVE

Target recovery ergonomically with 5 tilt angles designed to make reaching trigger points easy and comfortable.

Figure 7: Full Body Massage Areas

8. MAINTENANCE

- **Cleaning:** Wipe the massager with a slightly damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the massager and its attachments in the provided carrying case in a cool, dry place away from direct sunlight.

9. TROUBLESHOOTING

- **Device Not Turning On:** Ensure the power switch at the bottom is in the 'ON' position. Check if the battery is charged. If not, connect to the charger.
- **Not Charging:** Verify that the USB-C cable and AC adapter are securely connected to both the massager and the power outlet. Try a different outlet if necessary.
- **Weak Percussion/Low Power:** The battery may be low. Fully charge the device before continued use.
- **Attachments Not Staying On:** Ensure the attachment is pushed firmly into place until it clicks. Check for any debris in the attachment port.

10. SPECIFICATIONS

Attribute	Detail
Package Dimensions	13.23 x 8.35 x 3.86 inches
Item Weight	4.53 Pounds
Batteries	1 Lithium Ion batteries (included)
Power Source	Battery Powered
Material	Rubber

11. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the official Sharper Image user manual available online or contact their customer service department.

You can also refer to the [User Manual \(PDF\)](#) for additional information.

12. PRODUCT VIDEOS

Powerboost Flex Pivot Percussion Massager Overview

Your browser does not support the video tag.

This video provides a comprehensive overview of the Sharper Image Powerboost Flex Pivot Percussion Massager, demonstrating its key features, adjustable angles, and various attachments in action. It highlights the device's quiet operation and effectiveness for muscle recovery.

