

Diydeg B0BHTJ2G8

Diydeg Panini Press Grill Instruction Manual

Model: B0BHTJ2G8

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Diydeg Panini Press Grill. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Diydeg Panini Press Grill is designed for versatile indoor grilling, featuring double-sided heating and nonstick plates for efficient cooking and easy cleanup.



The Diydeg Panini Press Grill in its closed position, showcasing its compact design and stainless steel top cover.


Components:

- **Grill Plates:** Nonstick coated for easy food release and cleaning.
- **Handle:** Heat-resistant handle for safe opening and closing.
- **Indicator Lights:** Power and ready indicator lights.
- **Drip Tray:** Collects excess grease (if applicable, check product for specific design).



A close-up view of the nonstick grill plate surface, designed for efficient cooking and easy cleaning.

Anti-heat Handle

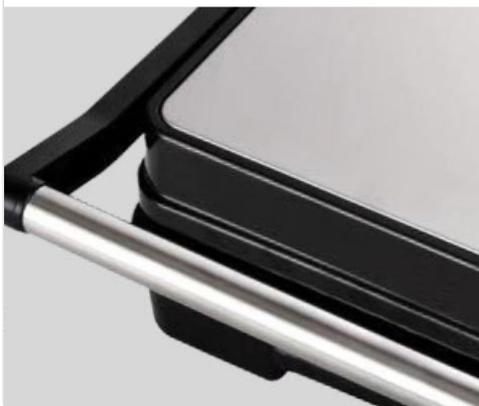

Detail of the anti-heat handle, providing a safe grip during operation.

SETUP

1. **Unpack:** Carefully remove the panini press from its packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the grill plates with a damp cloth or sponge. Dry thoroughly. Do not immerse the appliance in water.

3. **Placement:** Place the grill on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a standard 110V electrical outlet. The power indicator light will illuminate.

OPERATING INSTRUCTIONS

The Diydeg Panini Press Grill is designed for quick and even cooking of various foods, from sandwiches to meats and vegetables.

Your browser does not support the video tag.

This video demonstrates the features and operation of the Diydeg Panini Press Grill, highlighting its double-sided heating and nonstick surfaces for efficient cooking.

1. **Preheating:** Close the grill and plug it in. The power indicator light will turn on. Allow the grill to preheat until the ready indicator light illuminates (this may take a few minutes).
2. **Prepare Food:** While preheating, prepare your ingredients. For best results and to prevent sticking, a light coating of cooking oil or spray on the grill plates is recommended, especially for the first use or when cooking lean meats.
3. **Place Food:** Carefully open the grill using the handle. Place your food (e.g., sandwich, burger, vegetables) onto the bottom grill plate. Do not overfill.
4. **Grilling:** Close the top grill plate over the food. The floating hinge design allows the top plate to adjust to different food thicknesses.
5. **180-Degree Open Feature:** For larger grilling surfaces, the grill can be opened 180 degrees to lay flat, providing two cooking surfaces. To do this, gently push the release button or lever (if present) and lay the top plate flat.
6. **Cooking Time:** Cook until desired doneness is achieved. Cooking times will vary based on food type and thickness.
7. **Remove Food:** Use a heat-resistant plastic or wooden utensil to remove food from the grill. Do not use metal utensils, as they can damage the nonstick coating.
8. **Power Off:** Once cooking is complete, unplug the appliance from the power outlet.

3 STEP

sandwich maker

The Delicious Breakfast Tour



01

Put in the ingredients



02

Cover the lid



03

A few moments later,
you can enjoy the food

A visual guide demonstrating the simple three-step process for preparing a sandwich using the panini press: adding ingredients, closing the lid, and enjoying the cooked meal.

Rapid heating
High power and quick roast



The panini press open, showing a steak and various vegetables grilling on the lower plate, illustrating its versatility.

To whip up all kinds of food



A collage showcasing the diverse range of foods that can be prepared with the grill, including sandwiches, grilled shrimp, vegetable skewers, and steak.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Diydeg Panini Press Grill.

1. **Cool Down:** Always unplug the grill and allow it to cool completely before cleaning.
2. **Clean Grill Plates:** Once cooled, wipe the nonstick grill plates with a damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads, as they can damage the nonstick coating.
3. **Clean Exterior:** Wipe the exterior stainless steel housing with a damp, soft cloth. Do not use harsh chemicals or abrasive materials.
4. **Drip Tray:** If your model includes a removable drip tray, empty and wash it with warm, soapy water. Rinse and dry thoroughly.
5. **Storage:** Store the clean and dry grill in a cool, dry place. The compact design allows for easy storage in small spaces.



Nonstick coating
It's easy to clean

A hand wiping the nonstick surface of the panini press with a cloth, demonstrating the ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction.	Ensure the grill is securely plugged into a working 110V outlet. Check the circuit breaker.
Food sticks to grill plates.	Insufficient oil; plates not preheated; food type.	Lightly coat grill plates with cooking oil or spray before adding food. Ensure grill is fully preheated (ready light on).
Uneven cooking.	Food not evenly distributed; grill not fully preheated.	Distribute food evenly on the grill plates. Allow the grill to fully preheat before cooking.

SPECIFICATIONS

- **Model:** B0BHTJ2G8

- **Power:** 850 Watts
- **Voltage:** 110 Volts
- **Material:** Stainless Steel (housing), Nonstick Coating (plates)
- **Special Feature:** Non Stick Coating, Double Sided Heating, 180-Degree Open
- **Dimensions:** 11.97 x 10 x 4.41 inches (L x W x H)
- **Item Weight:** 3.41 pounds

WARRANTY AND SUPPORT

For any questions regarding your Diydeg Panini Press Grill, please contact our customer service. We are committed to providing satisfactory solutions within 24 hours.

Please refer to your purchase documentation for specific warranty details.

© 2023 Diydeg. All rights reserved.