

Philips HR7303/91

Philips HR7303/91 Multiprocessor Food Kitchen System Instruction Manual

Model: HR7303/91

1. INTRODUCTION AND OVERVIEW

The Philips HR7303/91 Multiprocessor Food Kitchen System is designed to provide versatile food preparation capabilities with its powerful 1000W motor and a range of 8 accessories. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance.

Key Features:

- **1000W Motor:** Delivers powerful performance for various tasks.
- **PowerChop Technology:** Ensures optimal chopping results for both hard and soft ingredients.
- **1.5L Container Capacity:** Suitable for preparing meals for the entire family.
- **2 Speed Settings:** Color-coded for precise control over different functions.
- **8 Versatile Accessories:** Includes S-Blade, 2L Blender Jug, Slicing and Grating Disc, Julienne Disc, Potato Chips Disc, Citrus Juicer, Kneading Tool, and Grinder.



Figure 1: The Philips HR7303/91 Multiprocessor Food Kitchen System, showcasing the main unit, blender jug, and various attachments.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance before cleaning or assembling/disassembling parts.
- Keep hands and utensils away from moving blades or discs while operating.
- Ensure all parts are correctly assembled before switching on the appliance.
- Do not immerse the motor unit in water or any other liquid.
- This appliance is for household use only.
- Do not operate the appliance if the cord, plug, or any other part is damaged.
- Keep out of reach of children.

3. PRODUCT COMPONENTS

The Philips HR7303/91 comes with a range of accessories to enhance its functionality:

- **Main Motor Unit:** The base unit housing the 1000W motor and speed control dial.
- **Food Processor Bowl:** The primary processing bowl for chopping, slicing, and grating.
- **S-Blade:** Used for chopping, mixing, and pureeing ingredients in the food processor bowl.
- **2L Blender Jug:** For blending liquids, smoothies, and soups. It has clear measurement markings.



Figure 2: The 2-liter blender jug, featuring clear volume indicators for precise ingredient measurement.

- **Full Metal 2-in-1 Slice and Grate Disc:** A reversible disc for both slicing and grating various foods.



Figure 3: The full metal 2-in-1 disc, designed for both slicing and grating a variety of ingredients.

- **Full Metal Disc for Julienne Cutting:** Creates thin, matchstick-like strips of vegetables.



Figure 4: The full metal julienne disc, used to create fine, uniform strips of food.

- **Full Metal Disc for Making Potato Chips:** Specifically designed for cutting potatoes into chip shapes.



Figure 5: The full metal disc for potato chips, providing consistent cuts for homemade fries.

- **Citrus Juicer:** Extracts juice from citrus fruits directly into the food processor bowl.



Figure 6: The citrus juicer attachment, designed for efficient extraction of juice from oranges, lemons, and other citrus fruits.

- **Kneading Tool:** For mixing and kneading dough for bread, pastries, and more.



Figure 7: The kneading tool, specifically shaped for mixing and kneading dough effectively.

- **Grinder:** A compact attachment for grinding small quantities of dry ingredients like coffee beans or spices.



Figure 8: The grinder attachment, ideal for processing small amounts of dry ingredients such as spices or nuts.

4. SETUP

Before first use, wash all detachable parts thoroughly. Ensure the motor unit is placed on a stable, flat, and dry surface.

1. **Assemble the Food Processor:** Place the food processor bowl onto the motor unit. Rotate clockwise until it locks into place. Insert the desired accessory (e.g., S-blade, disc holder with disc) onto the central shaft. Secure the lid onto the bowl, ensuring it locks correctly.
2. **Assemble the Blender:** Place the blender jug onto the motor unit. Rotate clockwise until it locks into place. Ensure the lid is securely fastened.
3. **Power Connection:** Plug the appliance into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The appliance features two speed settings for optimal control.

1. **Preparation:** Ensure the appliance is correctly assembled with the desired accessory and ingredients are prepared (e.g., cut into appropriate sizes for discs).
2. **Add Ingredients:** Place ingredients into the food processor bowl or blender jug. Do not overfill beyond the maximum level indicated.
3. **Select Speed:** Turn the speed control dial to the desired setting (Speed 1 or Speed 2). Use lower speeds for softer ingredients or light mixing, and higher speeds for harder ingredients or more intensive processing.
4. **Processing:** Allow the appliance to process until the desired consistency is achieved. For discs, feed ingredients through the feeder tube.
5. **Switch Off:** Turn the speed control dial back to the '0' (off) position after use.
6. **Disassemble:** Unplug the appliance. Carefully remove the lid, then the accessory, and finally the bowl/jug.

Specific Accessory Usage:

- **Slicing/Grating/Julienne/Potato Chips Discs:** Always use the pusher to guide ingredients through the feeder tube. Never use your fingers.
- **Citrus Juicer:** Place the juicer attachment on the motor unit. Press half a citrus fruit onto the reamer and apply gentle pressure.
- **Grinder:** Attach the grinder cup with ingredients to the motor unit. Operate in short bursts for best results.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your Philips Multiprocessor.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Disassemble all removable parts.
3. **Washing:** All detachable parts (bowls, jugs, lids, blades, discs, juicer, kneading tool, grinder cup) are **dishwasher safe**. Alternatively, wash them in warm soapy water using a soft brush for blades and discs, then rinse thoroughly and dry.



Figure 9: Detachable components of the food processor, including bowls and discs, arranged in a dishwasher for cleaning.

4. **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water.
5. **Storage:** Store the appliance and its accessories in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not switch on.	Not plugged in, parts not assembled correctly, or safety lock not engaged.	Ensure the power cord is securely plugged in. Check that the bowl/jug and lid are correctly locked into position.

Problem	Possible Cause	Solution
Motor stops during operation.	Overload protection activated.	Switch off and unplug the appliance. Remove some ingredients. Let the motor cool down for 15-30 minutes before restarting.
Ingredients are not processed evenly.	Too many ingredients, ingredients too large, or incorrect speed setting.	Reduce the quantity of ingredients. Cut larger ingredients into smaller pieces. Use a higher speed setting if appropriate.
Leakage from the bowl/jug.	Lid not properly sealed or overfilled.	Ensure the lid is securely closed and locked. Do not exceed the maximum fill level.

If the problem persists after trying these solutions, please contact Philips customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Name	HR7303/91
Wattage	1000 watts
Number of Speeds	2
Container Capacity	1.5 Litres (Food Processor Bowl), 2 Litres (Blender Jug)
Blade Material	Metal
Body Material	Plastic
Special Feature	Shock Resistant
Product Care Instructions	Dishwasher Safe (detachable parts)
Item Weight	8.58 pounds
Package Dimensions	14.57 x 12.99 x 10.24 inches


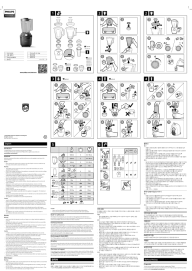
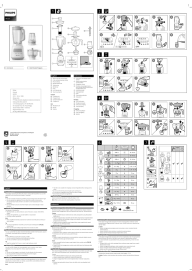



9. WARRANTY AND SUPPORT

This Philips HR7303/91 Multiprocessor Food Kitchen System comes with **a2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, service, or to register your product, please visit the official Philips website or contact their customer service department.

Online Support: www.philips.com/support

Related Documents - HR7303/91

	<p>Philips HR2191/HR2291 Blender User Manual</p> <p>Comprehensive user manual for the Philips HR2191 and HR2291 blender, covering safety instructions, operating procedures, assembly, cleaning, and troubleshooting. Includes detailed descriptions of diagrams and multilingual content merged into English.</p>
	<p>Philips HR2191/HR2291 Blender User Manual</p> <p>User manual for the Philips HR2191 and HR2291 blender, providing instructions on setup, operation, safety precautions, and maintenance. Learn how to use your Philips blender effectively and safely.</p>
	<p>Philips HR2223 Blender User Manual and Safety Guide</p> <p>Comprehensive user manual for the Philips HR2223 blender, detailing its functions, parts, safe operation, and maintenance. Includes instructions for blender, chopper, and mill attachments.</p>
	<p>Philips HR2860 Blender and Mill User Manual</p> <p>User manual for the Philips HR2860 blender, detailing its features, usage instructions for the blender, dry mill, and wet mill, safety precautions, and a pork recipe.</p>
	<p>Philips Blender User Manual - Models HR3651-HR3664</p> <p>Comprehensive user manual for Philips blenders, including models HR3651, HR3652, HR3653, HR3655, HR3656, HR3657, HR3658, HR3663, and HR3664. Learn about features, safety, operation, cleaning, and maintenance for your kitchen appliance.</p>
	<p>Philips HR3770 Blender & Juicer User Manual</p> <p>Discover the versatile Philips HR3770 blender and juicer. This comprehensive user manual provides essential instructions for operation, safety, cleaning, and maintenance, helping you get the most out of your Philips kitchen appliance.</p>