

Philips HD9285/90

Philips 5000 Series Air Fryer XXL Connected HD9285/90 User Manual

Model: HD9285/90

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Philips 5000 Series Air Fryer XXL Connected, model HD9285/90. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is for household use only.

- Do not immerse the appliance in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug.
- Always unplug the appliance after use and before cleaning.
- Do not block the air inlet and outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces directly.

PRODUCT OVERVIEW

The Philips 5000 Series Air Fryer XXL Connected HD9285/90 is designed for versatile cooking with 16-in-1 functions, including frying, baking, roasting, grilling, defrosting, and fermenting. It features Rapid Air Technology for even cooking and a large 7.2L capacity.



Image 1: Front view of the Philips 5000 Series Air Fryer XXL Connected HD9285/90, showcasing its sleek black design and digital display.

Key Components:

- **Digital Touchscreen Display:** For setting time, temperature, and selecting presets.
- **Basket:** 1.4kg capacity for food.
- **Pan:** 7.2L capacity.
- **Air Inlet and Outlet:** For proper air circulation during cooking.
- **Power Cord:** For electrical connection.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials from the air fryer. Retain packaging for potential future transport or service.
2. **Cleaning:** Before first use, clean the basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the interior and exterior of the appliance with a damp cloth. Ensure all parts are completely dry before assembly.

3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space at the back and sides, and 10 cm (4 inches) above the appliance to allow for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** For the first use, some appliances may emit a slight odor. To minimize this, you can run the air fryer empty for about 10 minutes at 180°C (350°F) in a well-ventilated area.

Connecting to NutriU App (Remote Cooking):

The Philips 5000 Series Air Fryer XXL Connected can be controlled remotely via the NutriU app. Follow these steps to connect:

- Download the NutriU app from your smartphone's app store.
- Create an account or log in.
- Follow the in-app instructions to pair your air fryer with your Wi-Fi network and NutriU account.
- Once connected, you can monitor cooking progress and send cooking instructions remotely.



Image 2: A smartphone displaying the NutriU app interface, which offers various recipes and remote cooking functionalities for the air fryer.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket with the pan back into the air fryer until it clicks into place.
3. **Power On:** Press the power button on the digital display.
4. **Set Temperature and Time:** Use the temperature and time control buttons to adjust to your desired settings. The air fryer offers a wide temperature range and a timer for precise cooking.
5. **Start Cooking:** Press the start/pause button to begin the cooking process.
6. **Shake Basket (Optional):** For some foods, shaking the basket halfway through cooking ensures even browning. The appliance will pause when the basket is removed and resume when reinserted.

7. **Check Doneness:** Once the timer finishes, carefully pull out the basket and check if the food is cooked to your preference.
8. **Serve:** Remove the cooked food from the basket. Use non-scratch utensils.



Image 3: The Philips Air Fryer with its basket partially pulled out, revealing cooked chicken inside, demonstrating its cooking capacity.

Using Preset Programs:

The air fryer features 7 easy presets for common food items. To use a preset:

1. Power on the appliance.
2. Select the desired preset icon on the touchscreen display. The appliance will automatically set the optimal temperature and time.
3. Press the start/pause button to begin.

PHILIPS

Official Store



PFOA-free & dishwasher-safe

Cook with peace of mind & convenience.

Image 4: A close-up view of the Philips Air Fryer's digital control panel, showing the 7 preset icons for various cooking functions, such as frozen snacks, meat, fries, and fish.

16-in-1 Cooking Functions:

Beyond the presets, the air fryer supports a wide range of cooking methods:

- Fry
- Bake
- Roast
- Grill
- Defrost
- Ferment
- Dehydrate
- And more, accessible through manual settings or the NutriU app.

PHILIPS

Official Store



Image 5: A circular diagram illustrating the 16-in-1 cooking functions of the Philips Air Fryer, including frying, roasting, baking, grilling, fermenting, and dehydrating, with examples of food for each.


MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Dishwasher Safe Parts:** The removable pan and basket are dishwasher safe. For manual cleaning, use hot water, dish soap, and a non-abrasive sponge.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth and a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Cleaning the Exterior:** Wipe the exterior with a damp cloth.
5. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance.

PHILIPS

Official Store

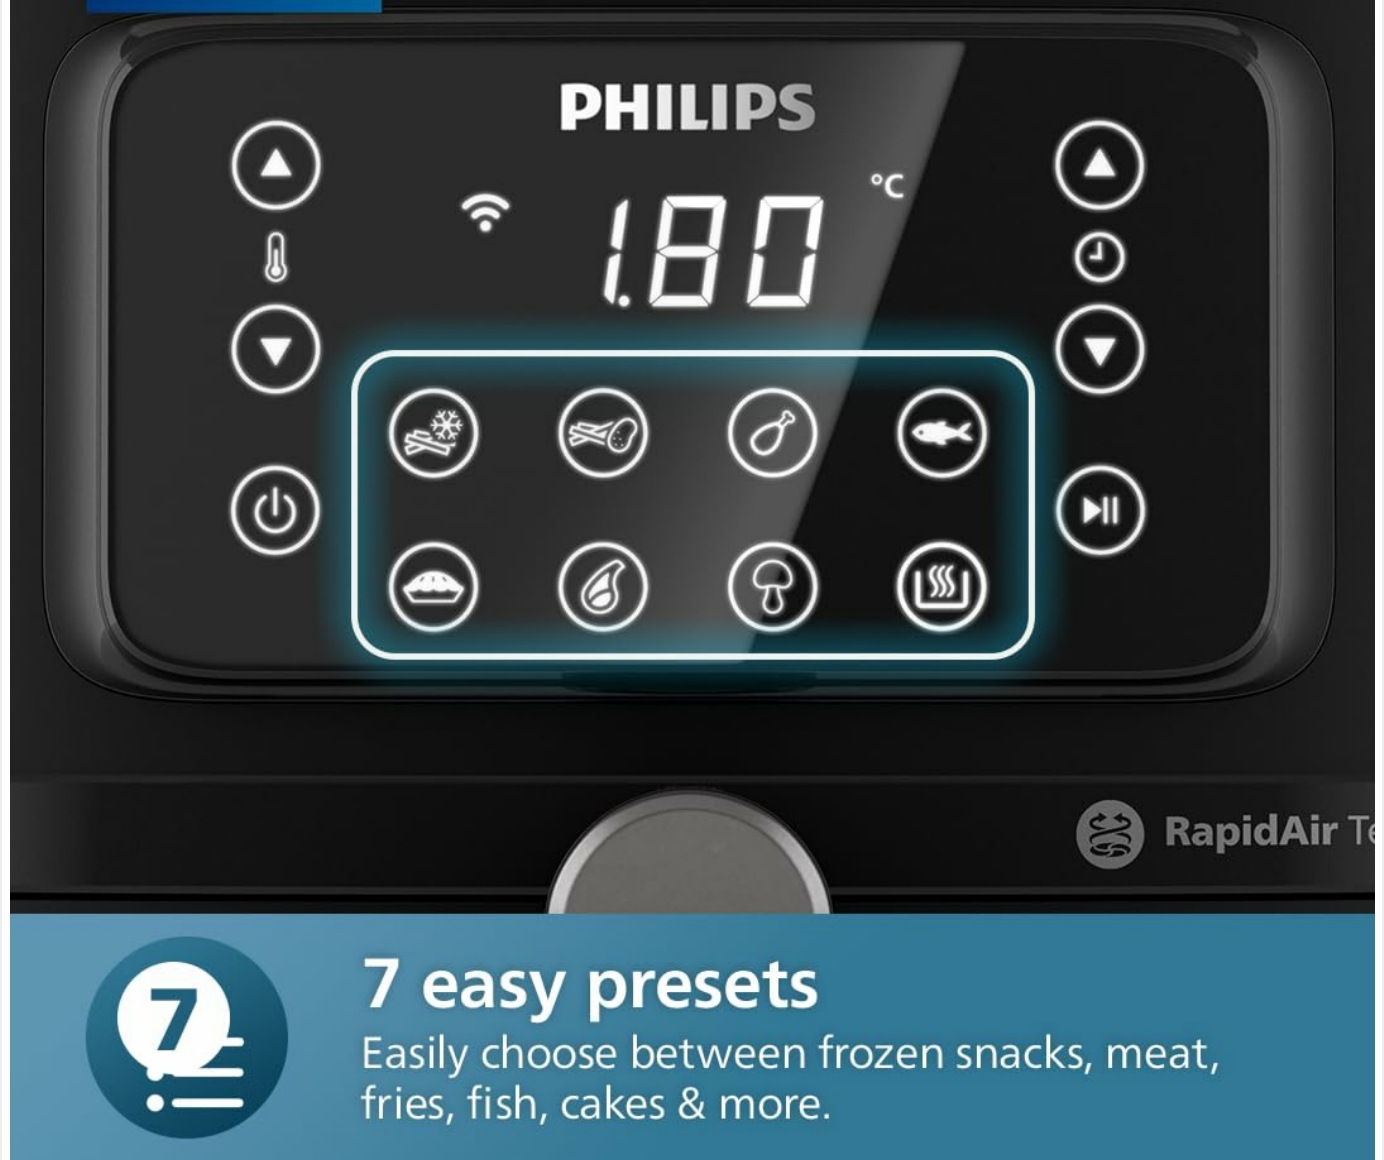

7 easy presets

Easily choose between frozen snacks, meat, fries, fish, cakes & more.

Image 6: An air fryer basket being placed into a dishwasher, illustrating the ease of cleaning for its dishwasher-safe components.

TROUBLESHOOTING

This section addresses common issues you might encounter with your air fryer.

| Problem | Possible Cause | Solution |
|-----------------------------|--|---|
| Air fryer does not turn on. | Appliance not plugged in; power outlet not working; basket not inserted correctly. | Ensure the power plug is securely inserted. Check the power outlet with another appliance. Push the basket firmly into the appliance until it clicks. |
| Food is not cooked evenly. | Basket is overfilled; temperature or time settings are incorrect; food not shaken. | Do not overfill the basket. Adjust temperature and time as per recipe. Shake the basket halfway through cooking for even results. |

| Problem | Possible Cause | Solution |
|---|--|---|
| White smoke comes out of the appliance. | Fatty ingredients are being cooked; pan contains grease residue from previous use. | This is normal for fatty foods. Clean the pan and basket thoroughly after each use to remove grease residue. |
| NutriU app shows disconnected. | Wi-Fi connectivity issue; app not refreshed. | Check your home Wi-Fi connection. Restart the NutriU app. Re-pair the device if necessary through the app settings. |

SPECIFICATIONS

| Feature | Detail |
|-----------------------|--|
| Model Number | HD9285/90 |
| Brand | Philips |
| Capacity (Pan) | 7.2 Litres |
| Capacity (Basket) | 1.4 kg |
| Wattage | 2000 Watts |
| Voltage | 230 Volts |
| Control Method | Touch |
| Special Feature | Temperature Control, Connected (Wi-Fi) |
| Material | Aluminium, Plastic |
| Non-stick Coating | Yes |
| Dishwasher Safe Parts | Yes (Removable parts) |
| Item Weight | 6.25 Kilograms |
| Dimensions (LxWxH) | 47.8 x 37.3 x 39.2 Centimeters |

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Philips website. For technical support, product registration, or to download the latest version of this manual, please visit www.philips.com/support or contact Philips customer service in your region.

Manufacturer: Philips Domestic Appliances Australia Pty Ltd





Gebruiksaanwijzing

[Philips Airfryer XXL HD9750-serie User Manual](#)

User manual for the Philips Airfryer XXL HD9750-serie, providing instructions on setup, operation, cleaning, and troubleshooting for healthy cooking with hot air. Learn how to prepare various dishes, from fries to chicken, with minimal oil.