

[Manuals.plus](#) /

› [GOLOZA](#) /

› GOLOZA Projection Alarm Clock, Digital Clock with 180° Rotatable Projector, 3-Level Brightness Dimmer, Clear LED Display, Progressive Volume, 9mins Snooze, Digital Alarm Clock for Bedroom X-green Digit+green Projection

GOLOZA LA-C337-Green

GOLOZA Projection Alarm Clock User Manual

Model: LA-C337-Green

Brand: GOLOZA

1. INTRODUCTION

The GOLOZA Projection Alarm Clock is designed to provide a convenient and clear time display experience. With its innovative projection feature, adjustable brightness, and user-friendly controls, it's an ideal addition to any bedroom or living space. This manual will guide you through the setup, operation, and maintenance of your new alarm clock.



Figure 1: GOLOZA Projection Alarm Clock

Key Features:

- **Integrated 180° Rotatable Projector:** Projects sharp and clear time figures onto your wall or ceiling (1.64-11.4ft / 0.5-3m distance).
- **Large LED Display with 3 Brightness Levels:** Easy-to-read 3.4*1.7 inch digits with adjustable display and projection brightness.
- **USB Charging Port:** 5V/1A USB output to charge your mobile devices.
- **Progressive Buzzer Volume:** Alarm sound gradually increases (up to 75dB) for a gentle wake-up.
- **9-Minute Snooze Function:** Provides extra sleep time with a press of a button.
- **Built-in Backup Battery (CR2032):** Preserves time and alarm settings during power outages.
- **Stylish Curved Design:** Mimics eye curvature for comfortable viewing and reduced eyestrain.

2. SETUP

2.1 Power Connection

The GOLOZA Projection Alarm Clock is powered by a corded electric connection. Use the included AC adapter (AC100-240V, 50/60Hz) to plug the clock into a standard wall outlet. The cable length is approximately 180cm (70.8 inches).



Figure 2: Power Adapter Connection

2.2 Backup Battery

A CR2032 button cell battery is built into the clock to save time and alarm settings in case of a power outage. Note that the clock is powered by mains only; the display will not show and the alarm will not sound during a power outage, but settings will be retained.



Figure 3: Backup Battery Compartment

3. OPERATING INSTRUCTIONS

3.1 Setting Time

To set the time on your GOLOZA Projection Alarm Clock, follow these steps:

1. Long press the **Time Set** button (usually indicated by a clock icon) to enter HOUR setting mode.
2. Use the - and + buttons to adjust the hour.
3. Short press the **Time Set** button again to enter MINUTE setting mode.
4. Use the - and + buttons to adjust the minutes.
5. Short press the **Time Set** button one more time to confirm and exit time setting mode.

3.2 12/24-Hour Time Display

You can switch between 12-hour and 24-hour time formats. Short press the **Time Set** button (without long pressing) to toggle between the two formats. A 'PM' icon will display when the 12-hour format is selected and the time is in the afternoon.



Figure 4: 12/24-Hour Time Format

3.3 Setting Alarm

To set the alarm, follow these steps:

1. Short press the **Alarm** button (bell icon) to turn on/off the alarm.
2. Long press the **Alarm** button to enter HOUR setting mode for the alarm.
3. Use the - and + buttons to adjust the alarm hour.
4. Short press the **Alarm** button again to enter MINUTE setting mode for the alarm.
5. Use the - and + buttons to adjust the alarm minutes.
6. Short press the **Alarm** button one more time to confirm and exit alarm setting mode.

The alarm features a progressive buzzer volume, starting softly and gradually increasing to 75dB, which is ideal for heavy sleepers. To activate the 9-minute snooze, press the large **SNOOZE** button on top of the clock when the alarm sounds.

9 Mintues Snooze




Figure 5: Snooze Function

3.4 Projection Function

The integrated projector allows you to display the time on your wall or ceiling. The projection arm swivels 180 degrees for optimal positioning.

1. In time mode, short press the **Projection** button (projector icon) to turn on the projection.

2. Rotate the projection arm until it is adjusted to the desired angle.
3. Short press the **Projection** button to adjust the projection brightness (low-medium-high-OFF).
4. If the projected numbers are upside down, long press the **Projection** button to flip the numbers 180 degrees.

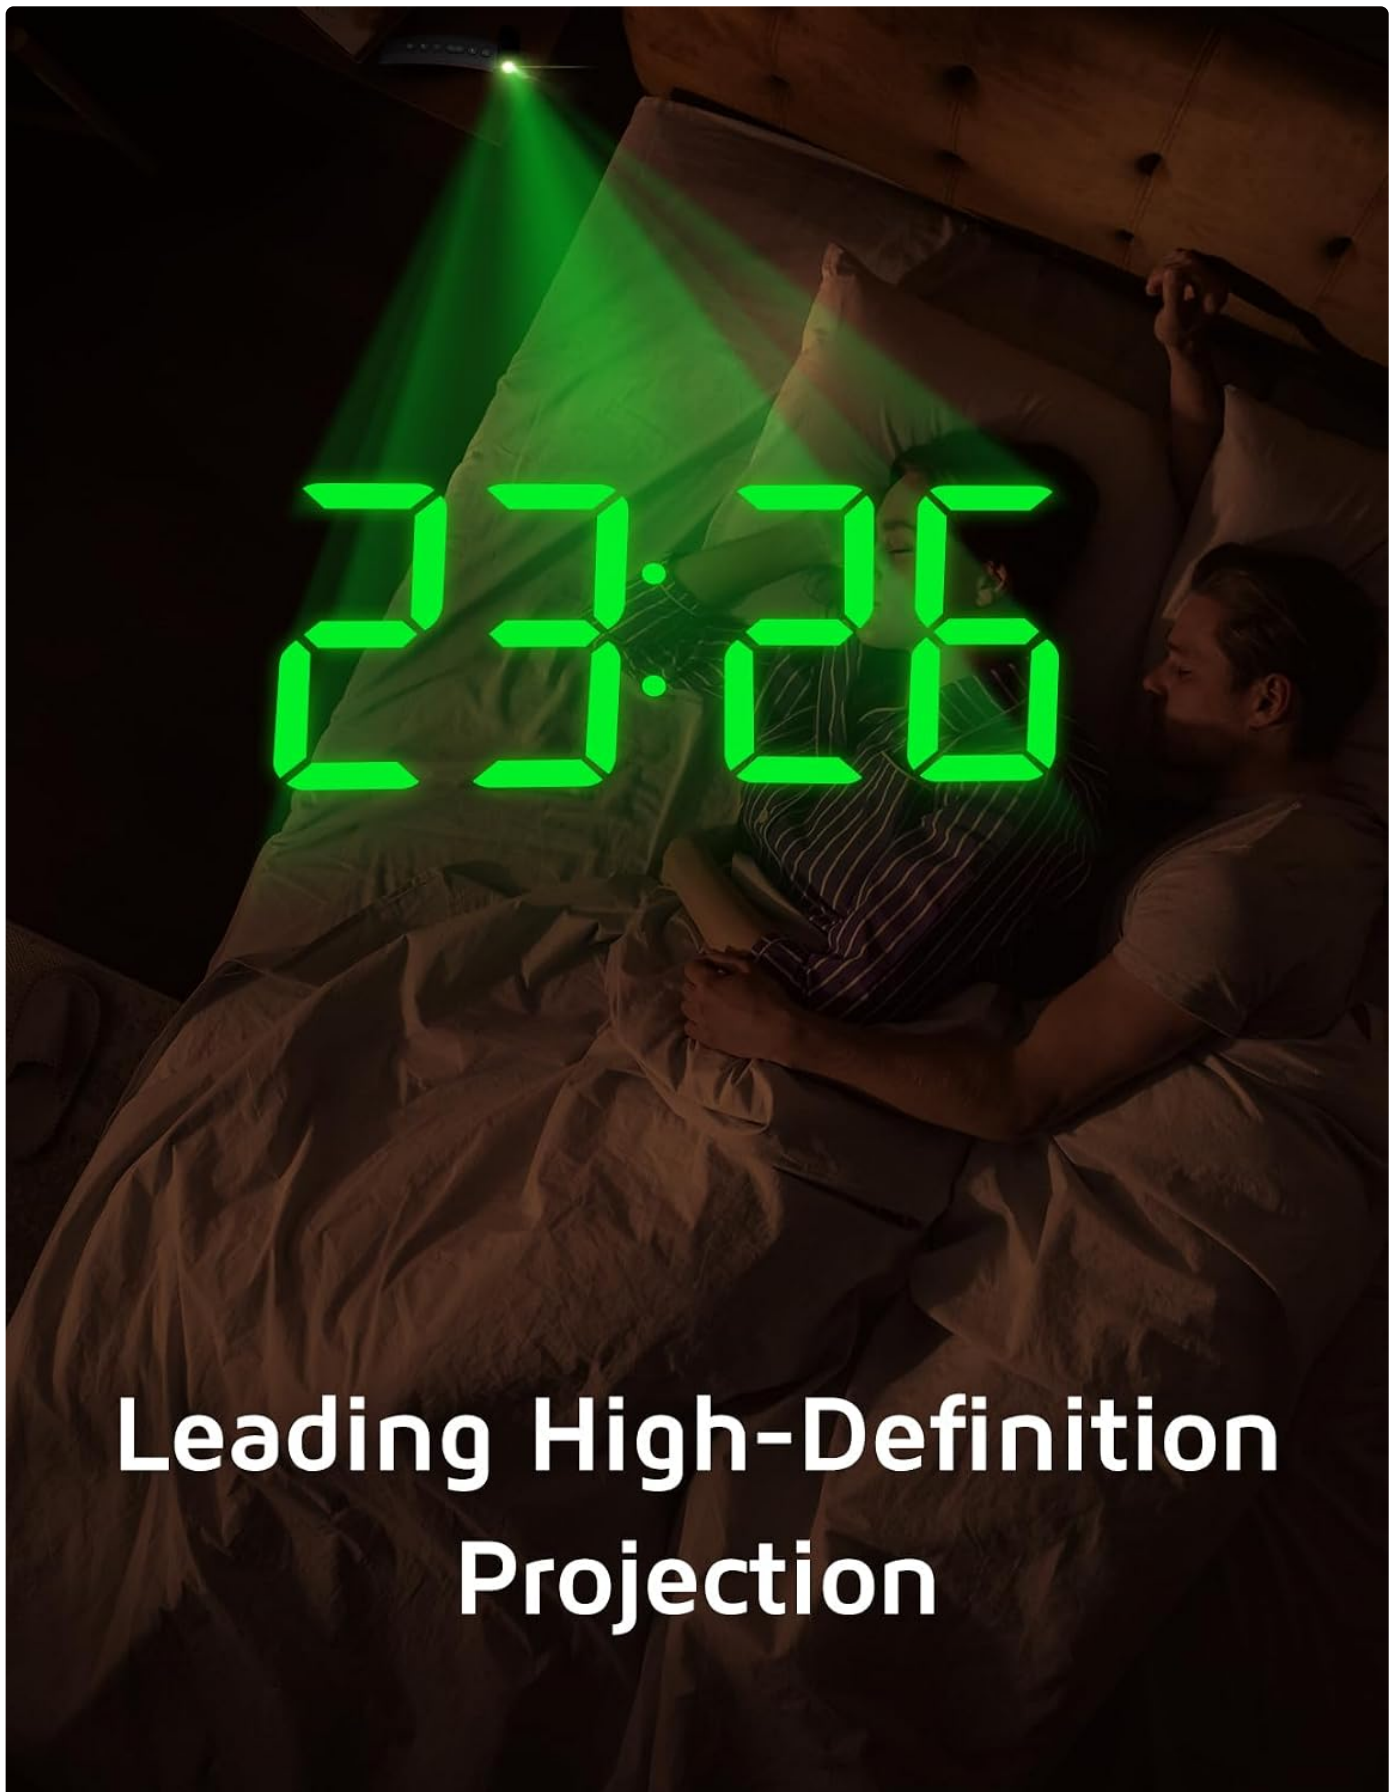

Leading High-Definition Projection

Figure 6: Time Projection on Ceiling

3.5 Display Brightness

The main LED display has 3 adjustable brightness levels. Use the **Dimmer** button (sun icon) to cycle through the brightness settings (dark, medium, bright). This allows you to set a comfortable viewing level for day or night.

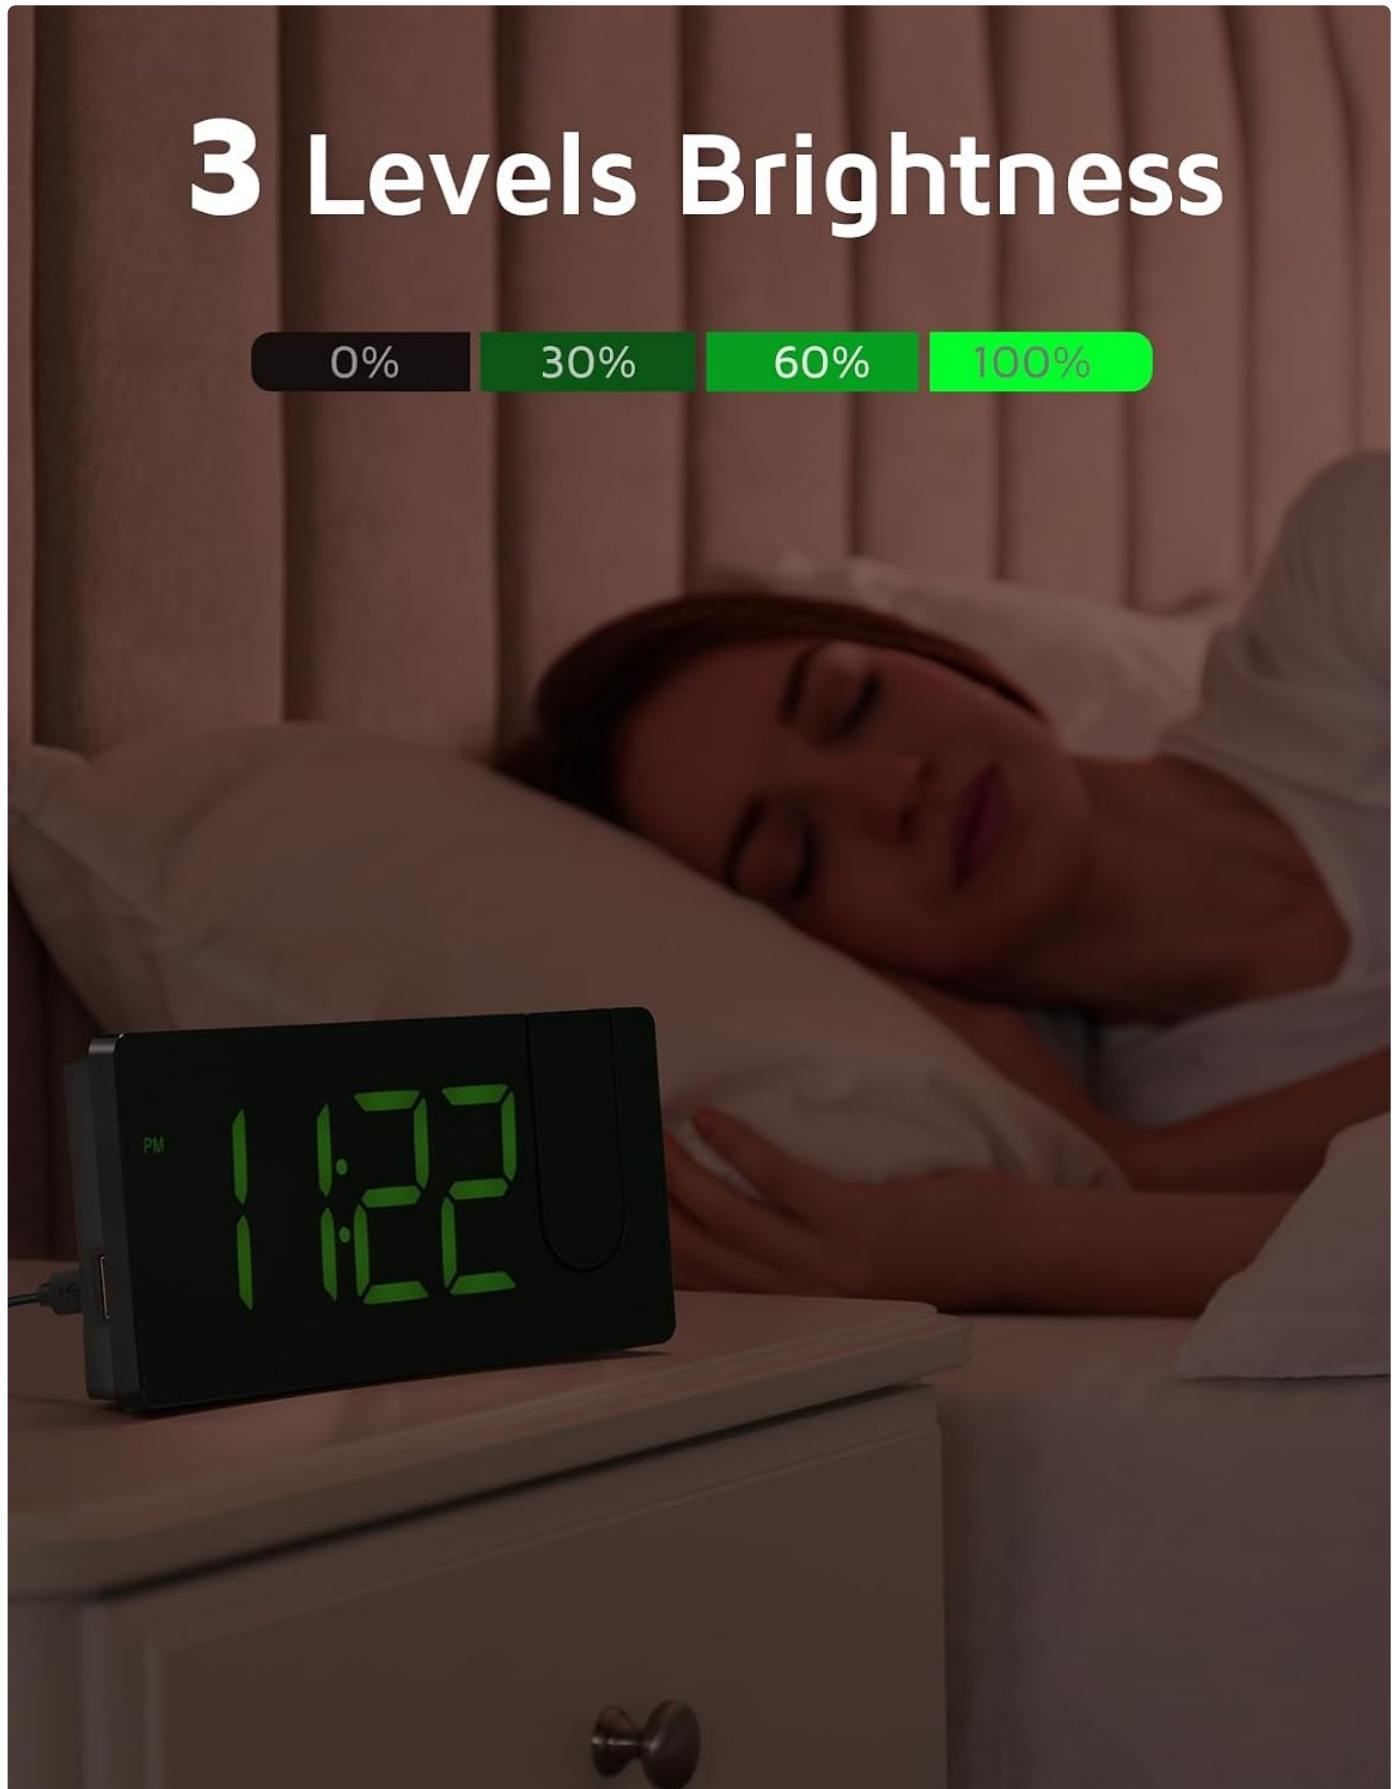


Figure 7: Adjustable Display Brightness

3.6 USB Charging Port

The clock includes a 5V/1A USB output interface on the side, allowing you to charge your phone or other mobile devices conveniently while the clock is plugged in.



Figure 8: USB Charging Feature

3.7 Official Product Video: Operation Instruction

Video 1: This video provides a visual guide on how to operate the GOLOZA Projection Alarm Clock, including setting the time, alarm, and using the projection

4. MAINTENANCE

To ensure the longevity and optimal performance of your GOLOZA Projection Alarm Clock, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the clock. Avoid using abrasive cleaners, solvents, or chemical sprays, as they may damage the finish or internal components.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture. Ensure proper ventilation around the device.
- **Handling:** Handle the clock with care. Avoid dropping it or subjecting it to strong impacts, which could damage the internal circuitry or the projection lens.

5. TROUBLESHOOTING

If you encounter any issues with your GOLOZA Projection Alarm Clock, please refer to the following common troubleshooting tips:

- **Clock Not Turning On:** Ensure the AC adapter is securely plugged into both the clock and a working wall outlet. Check if the outlet is receiving power.
- **Display is Blank:** Confirm the clock is powered. If the main power is off, the display will be blank even with the backup battery, as the battery only retains settings, not powers the display.
- **Projection is Unclear/Upside Down:** Adjust the projection arm to optimize focus and position. Long press the Projection button to flip the numbers if they appear upside down. Ensure the projection distance is within 1.64-11.4ft (0.5-3m).
- **Alarm Not Sounding:** Verify that the alarm is set and activated (bell icon is displayed). Check the alarm volume setting.
- **USB Charging Not Working:** Ensure the clock is properly powered. Check the USB cable and the device you are trying to charge.

If these steps do not resolve the issue, please contact customer support as detailed in the Warranty & Support section.

6. SPECIFICATIONS

Feature	Description
Brand	GOLOZA
Model Number	LA-C337-Green
Color	X-green Digit+green Projection
Display Type	Digital LED (Curved Screen)

Product Dimensions	6.9"W x 3.15"H (6.9 x 1.5 x 3.15 inches)
Item Weight	10.6 ounces
Power Source	Corded Electric (AC100-240V, 50/60Hz)
Backup Battery	1 x CR2032 (included)
Material	Polycarbonate (PC), Acrylonitrile Butadiene Styrene (ABS)
Projection Distance	1.64-11.4ft (0.5-3m)
USB Output	5V/1A

Large LED Curved Screen



Figure 9: Product Dimensions

7. WARRANTY AND SUPPORT

GOLOZA offers a **24-month warranty** and a **2-year replacement promise** for this product, ensuring long-term reliability and customer satisfaction.

Customer Support:

For any questions, concerns, or support needs regarding your GOLOZA Projection Alarm Clock, please follow these steps to contact us:

- 1. Go to your Amazon Account.
- 2. Navigate to 'Orders'.
- 3. Find your order for the GOLOZA Projection Alarm Clock.
- 4. Click on 'Order Detail'.
- 5. Locate 'Sold by: GOLOZA' and click on 'Ask a question'.

Our dedicated support team is ready to assist you.



Figure 10: GOLOZA Customer Support Information

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question