

[Manuals.plus](#) /

› [Homend](#) /

› Homend Airfryday 2506H Airfryer User Manual

Homend 2506H

Homend Airfryday 2506H Airfryer User Manual

Model: 2506H | Brand: Homend

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Homend Airfryday 2506H is a versatile airfryer designed for healthy cooking with minimal oil. It features a 4.2-liter capacity and 8 pre-set programs for various dishes.

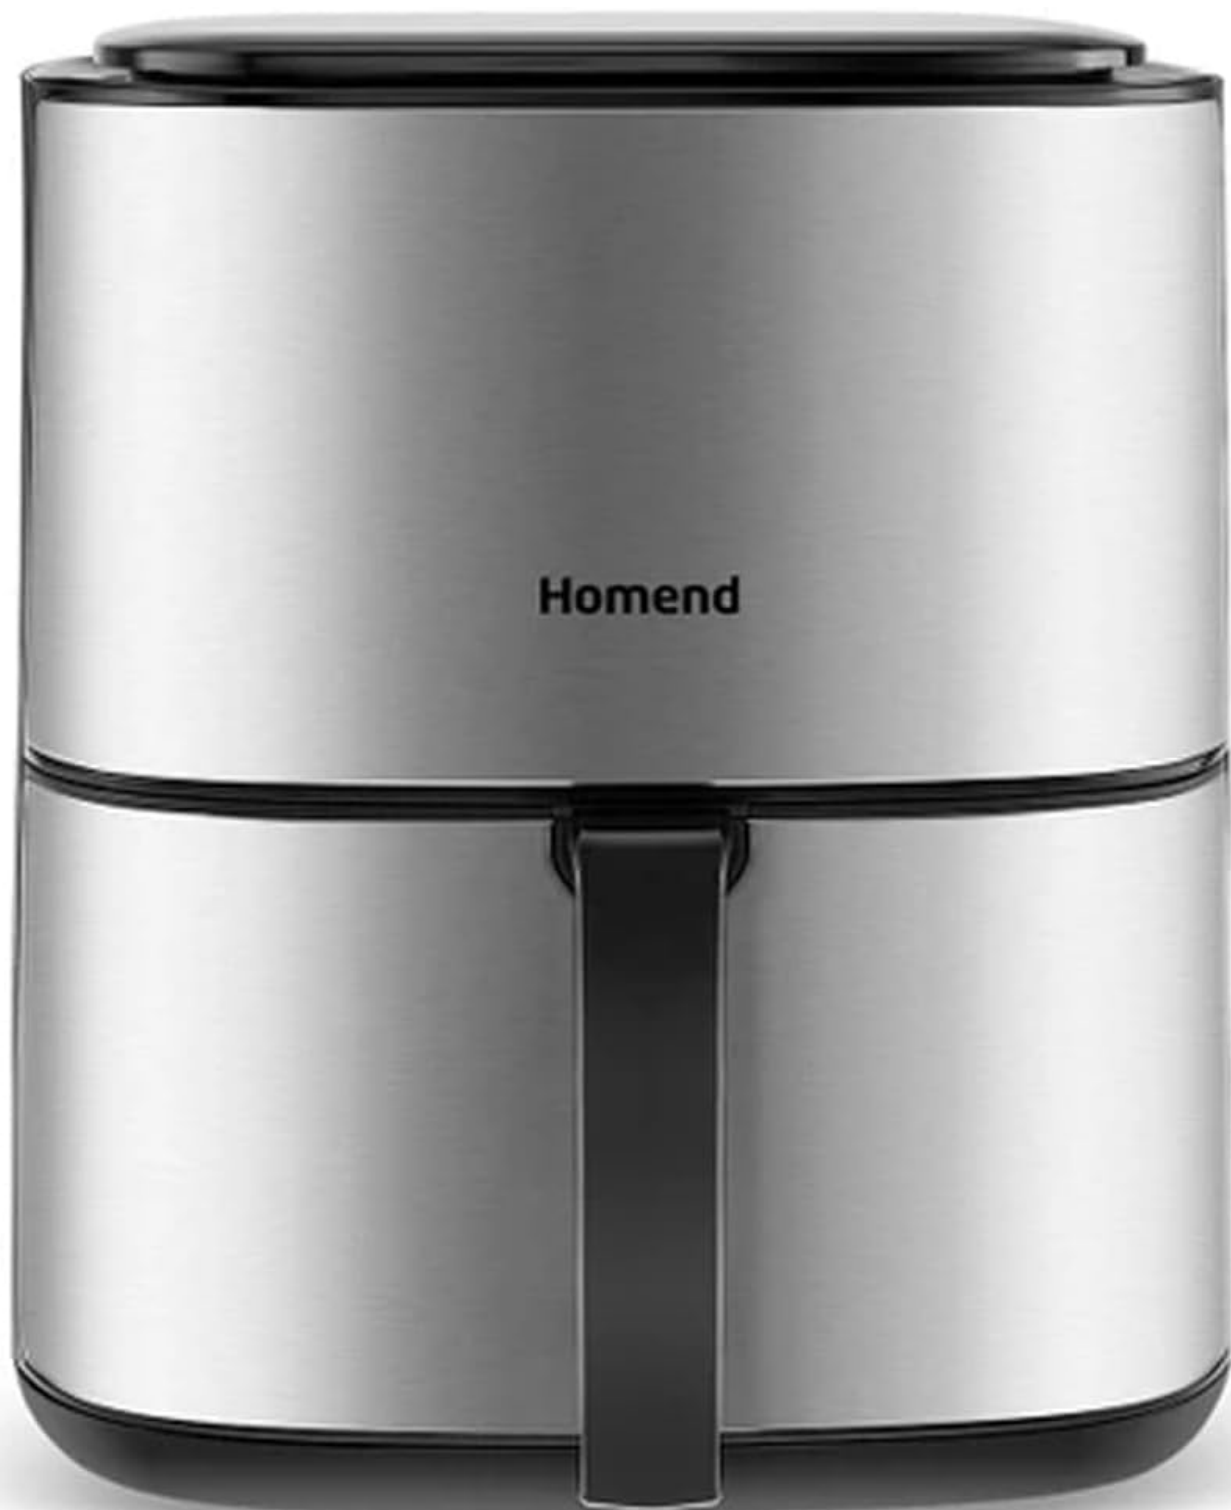


Image: Front view of the Homend Airfryday 2506H Airfryer, showcasing its sleek stainless steel and black design.

Key Features:

- **4.2 Liters Capacity:** Generous cooking space for family meals.
- **8 Pre-set Programs:** Convenient settings for various cooking needs.
- **360° Rapid Heat Technology:** Ensures even and fast cooking.
- **Temperature Range:** Adjustable from 80°C to 200°C.
- **Touch and Digital Screen:** Intuitive control panel for easy operation.
- **Timer Function:** For precise cooking duration.

4,2 LT

4,2 LİTRE
KAPASİTELİ HAZNE

360°

360° HIZLI ISI
TEKNOLOJİSİ

8

FARKLI PİŞİRME
PROGRAMI



80°C - 200°C
PİŞİRME ARALIĞI



Image: The Homend Airfryday 2506H Airfryer with visual callouts indicating its 4.2-liter capacity, 8 cooking programs, 360° rapid heat technology, and 80°C-200°C temperature range.

BEFORE FIRST USE & SETUP

Unpacking:

1. Carefully remove the airfryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Check that all parts are present and undamaged.

Cleaning:

1. Wipe the exterior of the airfryer with a damp cloth.
2. Wash the removable basket and pan with hot water, dish soap, and a non-abrasive sponge.
3. Rinse thoroughly and dry all parts completely before use.
4. Do not immerse the main unit in water or any other liquid.

Placement:

1. Place the airfryer on a stable, heat-resistant surface.

2. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation.
3. Do not place the airfryer near flammable materials or heat sources.

OPERATING INSTRUCTIONS

The Homend Airfryday 2506H features an intuitive touch and digital screen for easy control of cooking functions.



**DOKUNMATİK VE
DİJİTAL EKRAN**



**ZAMANLAYICI
ÖZELLİĞİ**



Image: The Homend Airfryday 2506H Airfryer with its cooking drawer pulled out, revealing the basket and the top-mounted touch control panel with digital display and timer function.

Basic Operation:

1. Plug the power cord into a grounded wall outlet.
2. Pull out the frying basket from the appliance.
3. Place ingredients into the basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the airfryer. Ensure it is fully closed.
5. Press the power button to turn on the appliance.
6. Select one of the 8 pre-set programs or manually adjust the temperature and time using the touch controls.
7. Press the start button to begin cooking.
8. Some ingredients may require shaking halfway through the cooking time. Pull out the basket, shake, and reinsert. The airfryer will resume cooking.

- When cooking is complete, the timer will sound. Carefully pull out the basket and empty the contents.

Using Pre-set Programs:

The Homend Airfryday 2506H comes with 8 pre-set programs for common dishes. Simply press the program icon on the touch screen to select the desired program. The airfryer will automatically set the optimal temperature and time.

Manual Temperature and Time Adjustment:

To manually set cooking parameters:

- After turning on the appliance, use the temperature control buttons (usually '+' and '-') to set the desired temperature (80°C - 200°C).
- Use the time control buttons (usually '+' and '-') to set the desired cooking time.
- Press the start button to begin cooking.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your airfryer.

After Each Use:

- Unplug the airfryer and allow it to cool down completely before cleaning.
- Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
- Remove the frying basket and pan. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak the basket and pan in hot water with dish soap for about 10 minutes.
- The basket and pan are generally dishwasher safe, but hand washing is recommended to prolong their non-stick coating.
- Clean the interior of the appliance with a damp cloth. Do not use abrasive materials or steel wool.
- Ensure all parts are completely dry before storing or next use.

Storage:

Store the airfryer in a cool, dry place. Ensure the power cord is neatly wrapped and secured.

TROUBLESHOOTING

If you encounter any issues with your Homend Airfryday 2506H, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Airfryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	Frying basket is not fully inserted.	Push the frying basket completely into the appliance.
Food is not cooked evenly.	Too much food in the basket.	Reduce the amount of food. Cook in smaller batches.
	Food not shaken or flipped.	Shake or flip ingredients halfway through cooking.

Problem	Possible Cause	Solution
White smoke comes from the appliance.	Grease residue from previous use.	Clean the basket and pan thoroughly after each use.
	Fatty ingredients being cooked.	This is normal for fatty foods. Ensure the pan is clean.

SPECIFICATIONS

Technical details for the Homend Airfryday 2506H Airfryer.

- **Model:** 2506H
- **Brand:** Homend
- **Key Feature:** Programmable
- **Color:** Black
- **Capacity:** 4.2 Liters
- **Material:** Metal, Stainless Steel, Plastic
- **Recommended Uses:** Baking, Grilling, Dehydrating, Frying
- **Temperature Range:** 80°C - 200°C
- **Programs:** 8 pre-set programs

WARRANTY AND SUPPORT

Your Homend Airfryday 2506H Airfryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, service, or warranty claims, please contact Homend customer service. You can typically find contact information on the official Homend website or on the product packaging.

Keep your purchase receipt as proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question