

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ApoloSign](#) /

› [ApoloSign 15.6-inch Laptop User Manual - Model 1561P](#)

## ApoloSign 1561P

# ApoloSign 15.6-inch Laptop User Manual

MODEL: 1561P

## Introduction

---

Welcome to the user manual for your ApoloSign 15.6-inch Laptop, Model 1561P. This guide provides detailed instructions to help you set up, operate, maintain, and troubleshoot your new laptop. Your ApoloSign laptop features a 15.6-inch Full HD IPS display, an Intel Jasper Lake N5095 processor, 12GB of RAM, and a 512GB SSD, running on Windows 11. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

## Package Contents

---

Please check the package for the following items:

- ApoloSign 15.6-inch Laptop (Model 1561P)
- Power Adapter
- User Manual

If any items are missing or damaged, please contact ApoloSign customer support immediately.

## Product Overview

---

### Front View



*Image: The ApoloSign 15.6-inch laptop shown open, revealing its screen, keyboard, and touchpad.*

This image provides a general view of the laptop when open, showcasing the display, keyboard, and touchpad layout.

### **Keyboard and Touchpad**

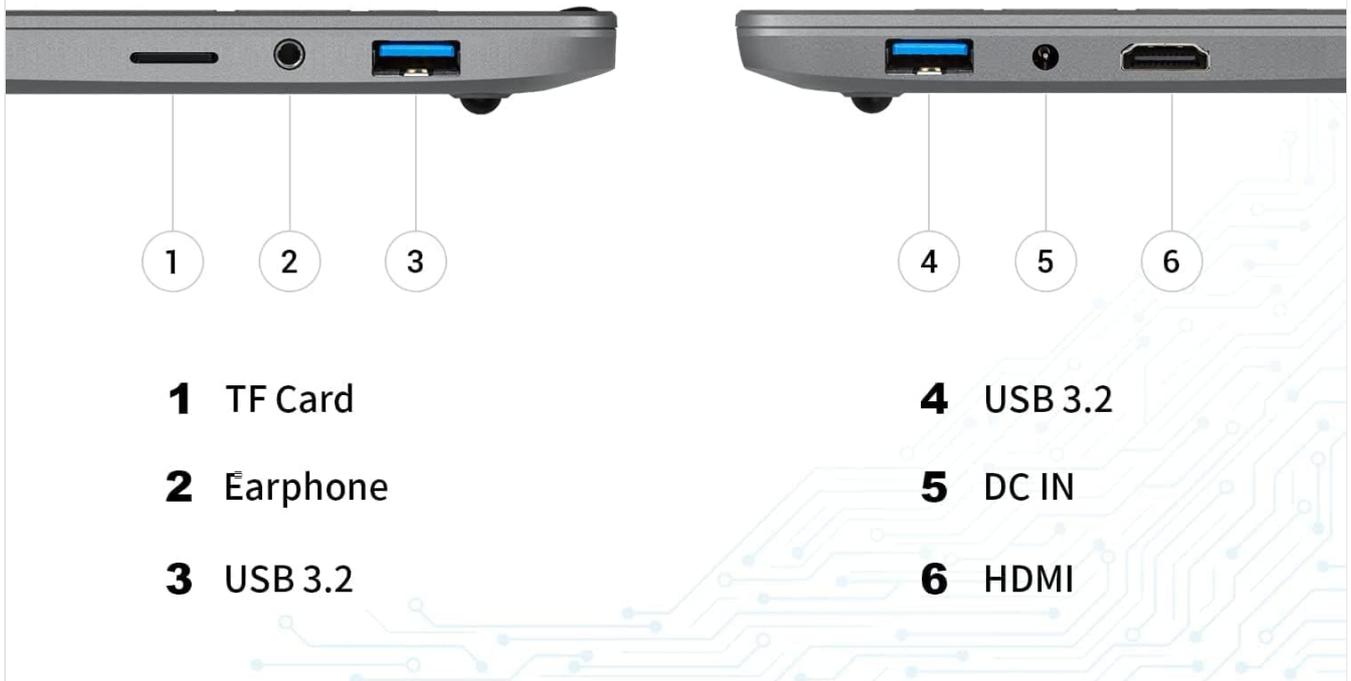


*Image: A detailed view of the laptop's keyboard, highlighting the full-size layout and integrated numeric keypad, along with the touchpad.*

The laptop features a full-size keyboard for comfortable typing, including a dedicated numeric keypad for enhanced productivity. The precision touchpad supports multi-touch gestures for intuitive navigation.

### **Connectivity Ports**

# connectivity



*Image: A diagram detailing the left and right sides of the laptop, indicating the location and type of each port.*

Your laptop is equipped with various ports for connecting external devices:

- **1. TF Card Slot:** For inserting TransFlash (MicroSD) memory cards.
- **2. Earphone Jack:** For connecting headphones or external speakers.
- **3. USB 3.2 Port:** For connecting USB devices with high-speed data transfer.
- **4. USB 3.2 Port:** Another high-speed USB port for peripherals.
- **5. DC IN Port:** For connecting the power adapter to charge the laptop.
- **6. HDMI Port:** For connecting to external displays or projectors.

## Setup

### Initial Charging

1. Connect the power adapter to the DC IN port (Port 5 as shown in the Connectivity Ports diagram) on your laptop.
2. Plug the power adapter into a wall outlet.
3. Allow the laptop to charge for at least 3 hours before its first use, or until the battery indicator shows a full

charge.

## First Boot and Windows 11 Setup

1. Press the power button to turn on the laptop.
2. Follow the on-screen instructions to complete the Windows 11 initial setup. This includes selecting your language, region, accepting terms, and creating a user account.
3. Ensure you have an active internet connection during this process for updates and account synchronization.

## Connecting to Wi-Fi

1. During the Windows 11 setup, you will be prompted to connect to a network. Select your preferred Wi-Fi network from the list.
2. Enter the Wi-Fi password (if required) and click 'Connect'.
3. If setting up after initial boot, click the Wi-Fi icon in the taskbar, select your network, and enter the password.

## Operating Instructions

---

### Power On/Off and Sleep Mode

- **Power On:** Press the power button located on the top-right of the keyboard.
- **Shut Down:** Click the Start button, then Power > Shut down. This ensures all processes are properly closed.
- **Sleep Mode:** Close the laptop lid or click the Start button, then Power > Sleep. Press any key or the power button to wake the laptop.

### Using the Touchpad

- **Single Tap:** Functions as a left-click.
- **Two-Finger Tap:** Functions as a right-click.
- **Two-Finger Scroll:** Drag two fingers up or down to scroll through content.
- **Pinch-to-Zoom:** Place two fingers on the touchpad and pinch them together or spread them apart to zoom in or out.

### Connecting External Devices

- **USB Devices:** Insert USB drives, mice, or keyboards into the USB 3.2 ports.
- **HDMI Display:** Connect an HDMI cable from the laptop's HDMI port to an external monitor or TV. You may need to adjust display settings in Windows to extend or duplicate your screen.

### Battery Management

- To optimize battery life, adjust screen brightness, close unused applications, and enable power-saving modes in Windows settings.
- Avoid fully discharging the battery frequently. It is recommended to keep the battery level between 20% and 80% for long-term health.

## Maintenance

---

### Cleaning the Laptop

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Keyboard and Chassis:** Use a soft cloth to wipe surfaces. For dust in keyboard crevices, use compressed air.
- Ensure the laptop is powered off and unplugged before cleaning.

## Software Updates

Regularly update your Windows operating system and device drivers to ensure security, stability, and optimal performance. Go to **Settings > Windows Update** to check for and install updates.

## Storage Management

Periodically check your 512GB SSD storage. Delete unnecessary files, uninstall unused programs, and use Windows' built-in Disk Cleanup tool to free up space. This helps maintain system speed and responsiveness.

## Troubleshooting

This section addresses common issues you might encounter with your ApoloSign laptop.

- **Laptop does not power on:**  
Ensure the power adapter is securely connected to both the laptop's DC IN port and a working wall outlet. Verify the power adapter is not damaged. If the battery is completely drained, it may take a few minutes of charging before the laptop can power on.
- **Screen issues (e.g., gray screen, flickering, no display):**  
Try restarting the laptop. If connected to an external monitor, disconnect it. Ensure your display drivers are up to date via Windows Update or the manufacturer's website.
- **Touchpad or Keyboard not responding:**  
Restart the laptop. Check if any external devices are interfering. Ensure no physical obstructions are present. If the issue persists, check for driver updates in Device Manager.
- **System freezes or slow performance:**  
Close any unnecessary applications running in the background. Check Task Manager (Ctrl+Shift+Esc) for processes consuming high CPU or RAM. Ensure your 512GB SSD has sufficient free space. Run a malware scan.
- **Wi-Fi connection issues:**  
Restart your Wi-Fi router and the laptop. Go to Windows Settings > Network & internet > Wi-Fi to ensure Wi-Fi is enabled and you are connected to the correct network. Try forgetting the network and reconnecting.
- **Battery not charging:**  
Double-check that the power adapter is firmly plugged into the correct DC IN port on the laptop, not the earphone jack or any other port. Inspect the adapter and cable for any visible damage.

## Specifications

### Technical Specifications for ApoloSign 15.6-inch Laptop (Model 1561P)

Feature	Specification
Screen Display Size	15.6 Inches
Processor	Intel Jasper Lake N5095 (up to 2.8 GHz)
RAM	12 GB DDR4 SDRAM
Hard Drive	512 GB SSD
Operating System	Windows 11
Graphics	Intel UHD Graphics

Wireless Type	802.11ac
Connectivity	HDMI, USB 3.2 (x2), TF Card Reader, Earphone Jack, DC IN
Item Weight	3 Pounds (approx. 1.36 kg)
Product Dimensions (LxWxH)	16.4 x 9.56 x 0.7 inches
Rear Webcam Resolution	8 MP

## Warranty Information

---

Your ApoloSign 15.6-inch Laptop (Model 1561P) is covered by a standard manufacturer's warranty. The specific terms and duration of the warranty may vary by region and retailer. Please refer to the warranty card included with your product or visit the official ApoloSign website for detailed warranty information and registration procedures. Keep your proof of purchase for warranty claims.

## Support

---

For further assistance, technical support, or service inquiries regarding your ApoloSign 15.6-inch Laptop, please contact ApoloSign customer support. You can typically find contact information on the official ApoloSign website or through the retailer where you purchased the product. Please have your model number (1561P) and purchase details ready when contacting support.