

[Manuals.plus](#) /

› [AFEXOA](#) /

› AFEXOA CH09 Digital Alarm Clock Radio User Manual

AFEXOA CH09

AFEXOA CH09 Digital Alarm Clock Radio User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AFEXOA CH09 Digital Alarm Clock Radio. Please read this manual thoroughly before using the product to ensure proper function and longevity.

SAFETY INFORMATION

- Do not expose the device to water or excessive humidity.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if service is required.

PACKAGE CONTENTS

- AFEXOA CH09 Digital Alarm Clock Radio
- Power Adapter (EU Standard AC Adapter)
- User Manual
- CR2032 Battery (pre-installed for memory backup)

PRODUCT OVERVIEW

The AFEXOA CH09 features a clear LED display, intuitive controls, and multiple functions for a personalized experience.



Image: The AFEXOA CH09 Digital Alarm Clock Radio in black, showing the time 8:30 PM on its large LED display. The base emits a warm yellow ambient light, and control buttons are visible on top.

Controls and Ports

- **Top Panel:** Buttons for time setting, alarm setting, radio, volume, snooze, and light control.
- **Front Display:** Large LED display for time, alarm indicators, and radio frequency.
- **Rear Panel:** FM antenna, power input, 2 USB charging ports, headphone jack.

Simple Wheel Design for Adjustment

Excellent compact size with big & legible numbers



Built-in Memory Battery



EU Standard AC Adapter

Image: A diagram illustrating the compact size of the AFEXOA CH09 alarm clock, measuring 4.6 inches (11.68 cm) in width and 2.5 inches (6.35 cm) in height. It also highlights the built-in CR2032 memory battery and the included EU standard AC adapter.

SETUP

1. Power Connection

1. Connect the provided power adapter to the DC input port on the back of the alarm clock.
2. Plug the adapter into a standard wall outlet. The display will light up.

2. Time Setting

1. Press and hold the 'Time Set' button (usually indicated by a clock icon) until the hour digits flash.
2. Use the '+' or '-' buttons (or the rotary dial) to adjust the hour.
3. Press 'Time Set' again to confirm the hour and move to minute adjustment.

- Adjust the minutes using the '+' or '-' buttons (or rotary dial).
- Press 'Time Set' one more time to save the time.

OPERATING INSTRUCTIONS

1. Alarm Settings (Dual Alarms)

The device supports two independent alarms (Alarm 1 and Alarm 2).



Dual Alarm Clocks

Everyday Mode
Weekend Mode
Weekday Mode

ALL-7-Day:	MON	TUE	WED	THU	FRI	SAT	SUN
Weekday:	MON	TUE	WED	THU	FRI		
Weekend:						SAT	SUN

AM 7:30 First Alarm

AM 9:00 Second Alarm

Image: The AFEXOA CH09 alarm clock showing its dual alarm functionality. The display shows 'AM 10:30' in green, with options for 'Everyday Mode' (Mon-Sun), 'Weekday Mode' (Mon-Fri), and 'Weekend Mode' (Sat-Sun) clearly labeled.

- Press the 'Alarm 1' button (or 'Alarm 2' button) to activate or deactivate the respective alarm. The alarm icon will appear/disappear on the display.
- To set an alarm, press and hold the 'Alarm 1' (or 'Alarm 2') button until the hour digits flash.
- Adjust the hour using the '+' or '-' buttons (or rotary dial).

4. Press the alarm button again to confirm the hour and move to minute adjustment.
5. Adjust the minutes using the '+' or '-' buttons (or rotary dial).
6. Press the alarm button again to select the alarm sound (e.g., radio, bird song, piano, soft music).
7. Press the alarm button again to select the alarm frequency (Everyday, Weekday, Weekend).
8. Press the alarm button one last time to save the alarm settings.

2. Snooze Function

When an alarm sounds, press the large 'Snooze' button on the top of the device to temporarily silence the alarm for 9 minutes. The alarm will sound again after 9 minutes.

3. FM Radio Operation



FM Radio Clock with Auto Off Timer



76.0MHZ-108.0MHZ



0-480MIN Timer



Image: The AFEXO CH09 alarm clock displaying FM radio frequencies (76.0MHz-108.0MHz) and an auto-off timer function (0-480 minutes). The image shows radio waves emanating from the device, indicating strong reception.

1. Extend the FM antenna located at the back of the unit for better reception.
2. Press the 'Radio' button to turn on the FM radio.
3. Press and hold the 'Radio' button to automatically scan and save available stations.
4. Use the '+' or '-' buttons (or rotary dial) to manually tune to a specific frequency or cycle through saved stations.
5. Adjust the volume using the dedicated volume buttons or rotary dial.
6. To turn off the radio, press the 'Radio' button again.

4. Night Light and Display Settings

The device features a dimmable night light and adjustable display colors.

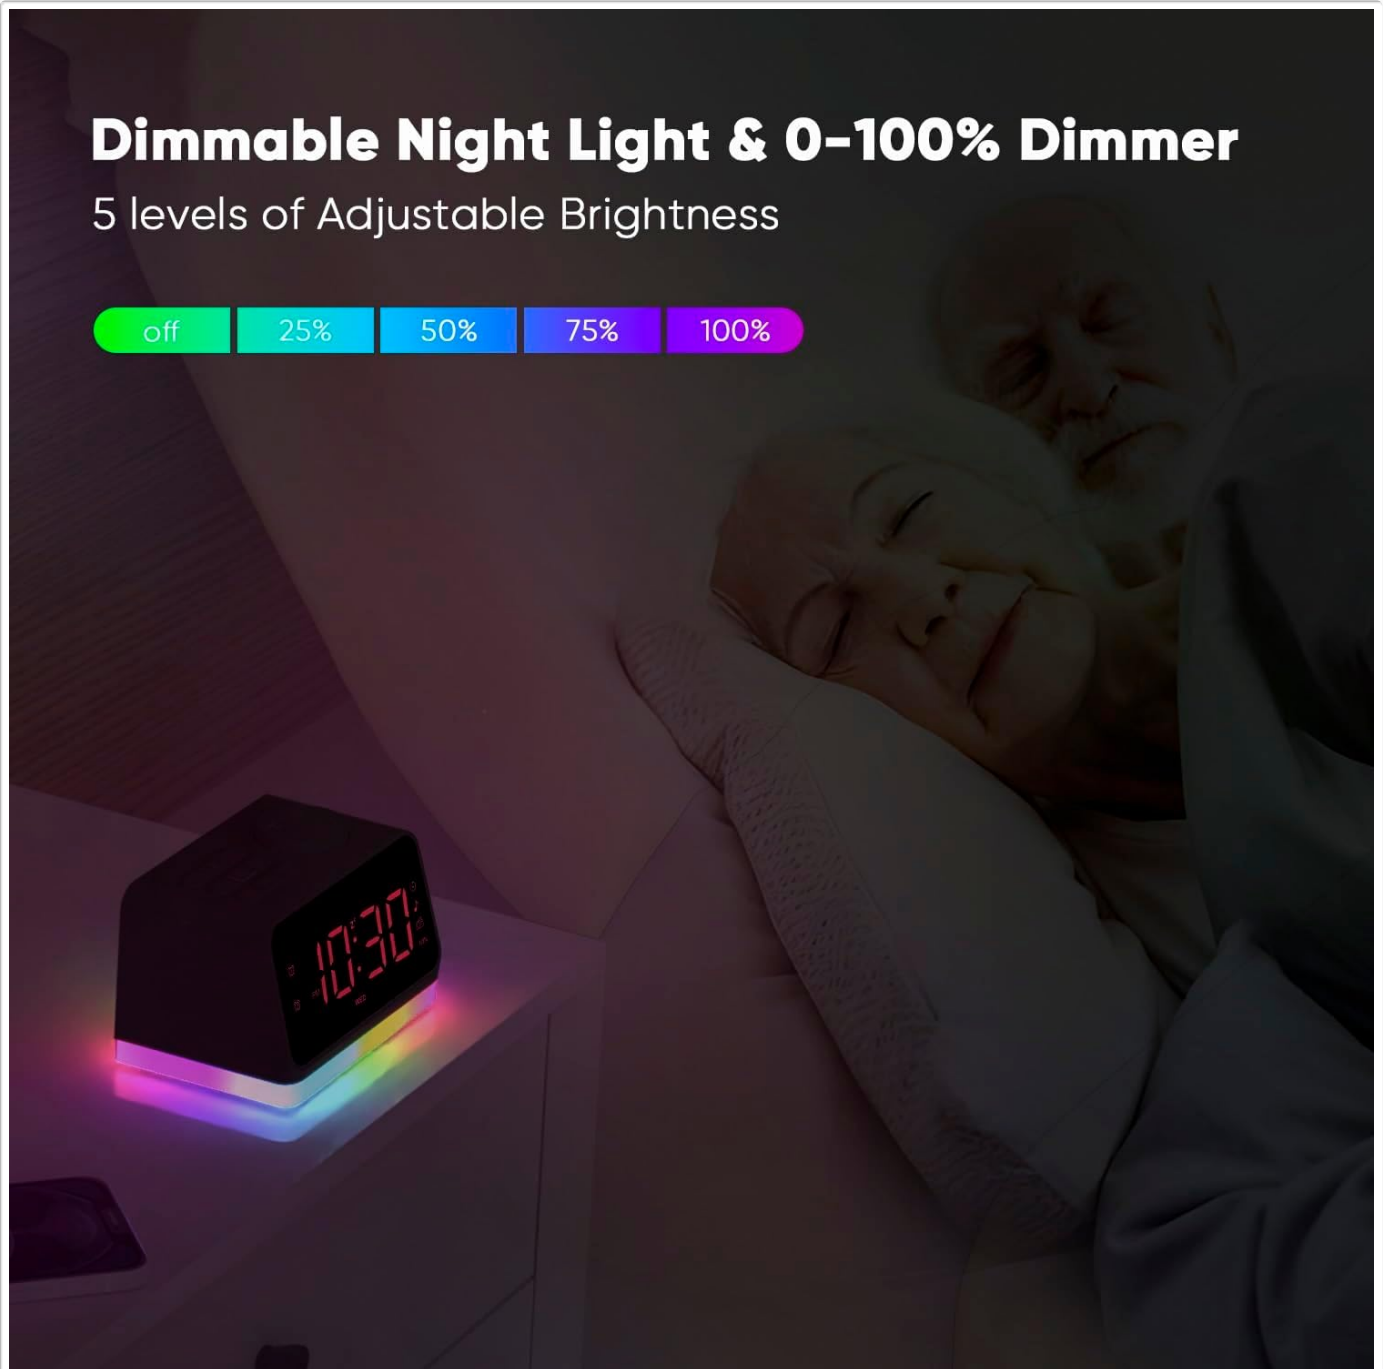


Image: The AFEXOA CH09 alarm clock with its base emitting a soft, dimmable night light. The image illustrates five levels of adjustable brightness, ranging from 'off' to 25%, 50%, 75%, and 100% intensity.

Dynamic RGB Adjustable Colors

5 single & 3 RGB colors night light and time display



Image: A series of AFEXOA CH09 alarm clocks demonstrating dynamic RGB adjustable colors. The display and base light change through various single colors (red, green, blue) and RGB gradient modes, offering 5 single and 3 RGB color options.

1. **Night Light:** Press the 'Light' button to cycle through the 8 available colors or turn the light off.
2. **Brightness:** Use the 'Dimmer' button or rotary dial to adjust the brightness of the night light from 0% to 100%.
3. **Display Brightness:** The LED display has 4 levels of brightness. Press the 'Brightness' button to cycle through the levels.
4. **Display Color:** The display offers 9 modes including white, red, green, blue, gradient, magic color, left/right gradient, up/down gradient, and yellowish. Refer to the specific button for 'Colors' or 'Display Mode' to cycle through these options.

5. Sleep Music and Wake-Up Sounds

Sleep Music Machine & Gentle Awakening

Loud alarm clock with wide adjustable volume range U01-U16

8 Sleep Music



8 Wake Up Sounds



Image: The AFEXOA CH09 alarm clock on a table, surrounded by icons representing 8 different sleep music options (e.g., nature sounds like frog, chirping, rain) and 8 wake-up sounds (e.g., radio, bird song, piano, soft music). This illustrates the device's sleep music machine and gentle awakening features.

1. **Sleep Sounds:** Press the 'Sleep Sound' button to activate the sleep sound mode. Cycle through 8 available sounds (radio, lullaby, frog, chirping, thunder, rain).
2. **Sleep Timer:** While sleep sounds are active, press the 'Timer' button to set a duration from 10 to 480 minutes. The device will automatically turn off after the set time.
3. **Wake-Up Sounds:** When setting an alarm, you can choose from 8 wake-up sounds (radio, bird song, piano, soft music, etc.) that gradually increase in volume.

6. USB Charging Ports

The alarm clock is equipped with 2 USB ports on the rear for charging external devices like smartphones. Simply connect your device's USB charging cable to one of the ports.

7. Headphone Jack

A headphone jack is available on the rear of the device for private listening of the FM radio or sleep sounds.

MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Ensure the FM antenna is not bent or damaged.
- The CR2032 battery provides memory backup for time and settings during power outages. If the time resets frequently after power loss, the battery may need replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely plugged into the device and a working wall outlet.
Alarm does not sound.	Alarm not activated or set incorrectly.	Verify that the alarm is enabled (icon visible) and the time is set correctly. Check alarm volume.
Poor FM radio reception.	Antenna not extended or interference.	Fully extend the FM antenna. Try repositioning the device or the antenna.
Time resets after power outage.	CR2032 backup battery depleted.	Replace the CR2032 battery.
USB charging not working.	Device not powered or cable faulty.	Ensure the alarm clock is powered on. Try a different USB cable or device.

SPECIFICATIONS

- **Brand:** AFEXOA
- **Model Number:** CH09
- **Color:** Black
- **Product Dimensions (L x W x H):** 7.8 x 3.81 x 7.8 cm
- **Weight:** 340 grams
- **Material:** Plastic
- **Display Type:** Digital LED
- **Power Source:** Electric Cable
- **Backup Battery:** 1 x CR2032 (included)
- **FM Frequency Range:** 76.0 - 108.0 MHz
- **Special Features:** Dual alarm, Snooze, FM Radio, Adjustable brightness, Ambient light, Large LED screen, Noise machine (8 sounds), Sleep timer (10-480 min), 2 USB charging ports, Headphone jack, Adjustable volume.

WARRANTY AND SUPPORT

Warranty information is not available in the provided product data. For warranty details or technical support, please refer to the product packaging or contact the retailer/manufacturer directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question